

Samsung GALAXY player_{4.0}

U s e r M a n u a l

**Please read this manual before operating your
device and keep it for future reference.**



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Galaxy Player, including but not limited to, accessories, parts, or software relating there to (the "Galaxy System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Electronics America (SEA), Inc.

Address: 85 Challenger Road
Ridgefield Park, New Jersey 07660

Toll Free Telephone: 1-800-SAMSUNG

Internet Address: <http://www.samsung.com>

©2011 Samsung Electronics America, Inc. All rights reserved.

Do you have questions about your Samsung Mobile Device?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:

<http://www.samsung.com/us/support>

Nuance®, VSuite™, T9® Text Input, XT9® Smart Input, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

The Bluetooth® word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD™, microSDHC™, and the microSD logo are Trademarks of the SD Card Association.

Google, the Google logo, Android, the Android logo, Android Market, Gmail, Google Calendar, Google Latitude, Google Maps, Google Talk, Picasa, and YouTube are trademarks of Google Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

Swype is a trademark of Swype, Inc.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

DivX Certified® to play DivX® video up to HD 720p, including premium content.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu (**Applications > Settings > About device > Legal Information > Licence settings > DivX® VOD > Register**). Go to vod.divx.com for more information on how to complete your registration.

Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit: <http://opensource.samsung.com>.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

SAMSUNG IS NOT LIABLE FOR PERFORMANCE ISSUES OR INCOMPATIBILITIES CAUSED BY YOUR EDITING OF REGISTRY SETTINGS, OR YOUR MODIFICATION OF OPERATING SYSTEM SOFTWARE.

USING CUSTOM OPERATING SYSTEM SOFTWARE MAY CAUSE YOUR DEVICE AND APPLICATIONS TO WORK IMPROPERLY.

Table of Contents

Section 1: Getting Started4

Understanding This User Manual	4
Setting Up Your Device	5
Charging the Battery	7
Turning Your Device On and Off	8
Your Google Account	9
Using Google Maps	9
Task Manager	9
Galaxy Player 4.0 Accessories	10
Securing Your Device	10
Troubleshooting	11
Android System Recovery	11

Section 2: Understanding Your Device12

Features	12
Front and Top Views	13
Side Views	14
Back and Bottom Views	14
Home Screen	15
Navigating Your Device	17
Notification Panel	18
Status Bar	19
Primary Shortcuts	21
Widgets	21

Shortcuts	22
Folders	23
Wallpapers	24
Applications	25

Section 3: Entering Text29

Virtual QWERTY Keyboard	29
Text Input Methods	29
Changing the Input Method	29
Entering Text Using Swype	30
Entering Text Using the Samsung Keypad	32
Configuring the Keypad	32
Entering Upper and Lower Case Letters	33
Entering Symbols and Numbers	33
Using XT9 Predictive Text	33
Editing Text	34
Using the Handwriting Feature	35
Using Speech Recognition	37

Section 4: Contacts and Accounts38

Accounts	38
Contacts	40
My Profile	43
Groups	44
Activities	46

Section 5: Messaging	47
Types of Messages	47
Gmail	47
Email	50
Google Talk	53
Section 6: Web and Social Networking	55
Internet	55
Maps	60
Latitude	62
Navigation	63
Places	64
Google Search	65
Voice Search	65
YouTube	66
Section 7: Music	68
Music Player	68
FM Radio	70
Section 8: Photos and Videos	72
Camera	72
Videos	77
Gallery	78
Section 9: Connections	81
Wi-Fi	81
Bluetooth	82
Samsung Kies	83
Memory Card	84

Section 10: Applications and Widgets	86
GPS Applications	86
AllShare	87
Calculator	88
Calendar	88
Camera	90
Clock	90
Contacts	92
Downloads	92
Dual Clock	93
Email	93
FM Radio	93
Gallery	93
Gmail	94
Google Search	94
Internet	94
Latitude	94
Maps	95
Market	95
Memo	96
Mini Diary	97
Music	98
My Files	98
Navigation	98
Places	99
Power Control	99
Samsung Apps	100

Settings	100
Social Hub	100
Talk	101
Task Manager	101
ThinkFree Office	101
Videos	102
Voice Recorder	102
Voice Search	103
YouTube	103
Section 11: Settings	104
Accessing Settings	104
Wireless and Network	104
Sound	108
Display	110
Location and Security	111
Applications	114
Accounts and Sync	115
Privacy	117
SD Card and Device Storage	117
Language and Keyboard	118
Voice Input and Output	120
Accessibility	121
Date and Time	122
About Device	123

Section 12: Health and Safety Information	124
Exposure to Radio Frequency (RF) Signals	124
Specific Absorption Rate (SAR) Certification Information ...	128
Smart Practices While Driving	130
Battery Use and Safety	130
Display / Touch-Screen	132
Section 13: Warranty Information	139
Standard Limited Warranty	139
End User License Agreement for Software	143
Section 14: Samsung Product Registration	149
Index	150

Section 1: Getting Started

This section helps you to quickly start using your device.

Understanding This User Manual

The sections of this manual generally follow the features of your device. A robust index for features begins on page 150.

Also included is important safety information, beginning on page 124, that you should know before using your device.

This manual gives navigation instructions according to the default display settings. If you select other settings, navigation steps may be different.

Unless otherwise specified, all instructions in this manual assume that you are starting from a Home screen. To get to a Home screen, you may need to unlock the device. For more information, refer to “*Securing Your Device*” on page 10.

Note: Instructions in this manual are based on default settings and may vary from your device depending on the software version on your device and any changes to the device's settings.

Unless stated otherwise, instructions in this user manual start with the device unlocked, at the Home screen.

All screen images in this manual are simulated. Actual displays may vary depending on the software version of your device and any changes to the device's settings.

Special Text

In this manual, some text is set apart from the rest. This special text is intended to point out important information, share quick methods for activating features, define terms, and more. The definitions for these methods are as follows:

- **Notes:** Presents alternative options for the current feature, menu, or sub-menu.
- **Tips:** Provides quick or innovative methods or useful shortcuts.
- **Important:** Points out important information about the current feature that could affect performance.
- **Warning:** Brings important information to your attention that can help to prevent loss of data or functionality or damage to your device.

Text Conventions

This manual provides condensed information about how to use your device. To make this possible, the following text conventions are used to represent often-used steps:

- Arrows are used to represent the sequence of selecting successive options in longer, or repetitive, procedures. For example:


From a Home screen, touch the **Menu Key**  → **Settings**
→ **Wireless and network** → **Wi-Fi settings**.

Setting Up Your Device

Prior to use, it is necessary to install the battery into its corresponding internal compartment. The microSD card slot is also located in this same internal area.

Removing the Battery Cover


1. Remove the battery cover by placing your thumbnail into the slot at the bottom of the device (1). If you have fragile nails, use a pointed object.
2. Lift the cover up (2) and off (3) the device.

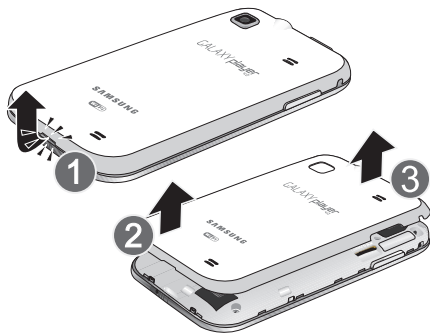

Installing the Memory Card

Your device supports removable microSD™ or microSDHC™ memory cards, for storage of music, photos, videos, and other files.

Note: You can only store music files that you own (from a CD or purchased with the device) on a memory card.

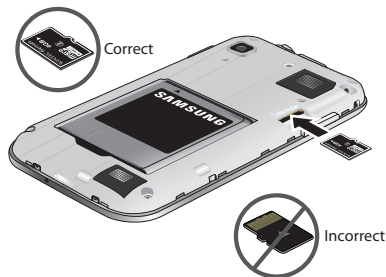


1. With the battery cover removed, locate the Memory Card Slot on the upper right side of the back of the device.
2. With the gold contacts facing down, carefully slide the memory card into the slot. Push gently until it clicks into place.

Removing a Memory Card

Important! To prevent damage to information stored on the memory card, unmount the card before removing it from the device.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **SD card and device storage** → **Unmount SD card**.
2. With the battery cover removed, locate the Memory Card Slot on the upper right side of the back of the device.
3. Gently press down on the memory card, so that it pops out from the slot, and carefully pull the card out.


Installing the Battery

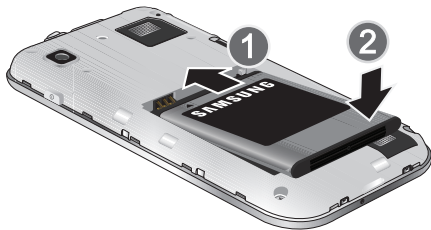

1. Insert the battery into the opening on the back of the device, making sure the connectors align (1).
2. Gently press down to secure the battery (2).

Note: Make sure the battery is properly installed before switching on the device.

Replacing the Battery Cover

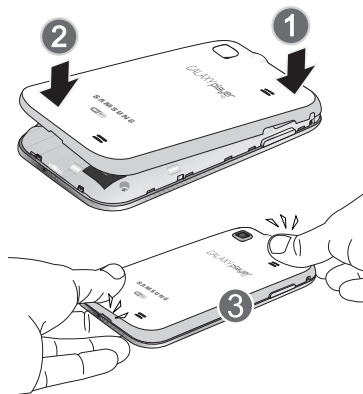

1. Place the battery cover onto the back of the device and press down (1).
2. Press down on the bottom of the device (2) until you hear a light click (3).

Charging the Battery

Your device is powered by a rechargeable, standard Li-Ion battery. The Travel Charger that is used to charge the battery is included with your device. Use only Samsung-approved batteries and chargers.

Note: The battery comes partially charged. You must fully charge the battery before using your device for the first time.

After the first charge, you can use the device while charging.

Warning!: Use only approved charging devices. Approved accessories are designed to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.


Battery Indicator

The Battery icon  in the Status Bar shows the battery power level. When battery power is 15% or less, your device prompts you to charge the battery. If you continue to operate the device without charging, the device powers off. For battery use information, see “About Device” on page 123.

Using the Travel Charger

1. With the battery installed, locate the Charger/Accessory Port on the top of the device and slide the plastic cover open (top left side of the device) ➡.

Important!: Verify that the device battery is installed prior to connection. If the battery is not properly installed and the wall charger is connected, the device may power off and on continuously, preventing proper operation.

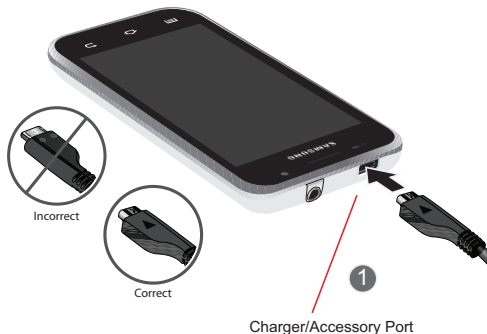

2. Plug the flat end of the Travel Charger into the Charger/Accessory Interface connector on the device (1) and the other end into a standard AC wall outlet.

Warning! While the device is charging, if the touch screen does not function due to an unstable power supply, unplug the USB power adapter from the power outlet or unplug the USB cable from the device.


3. When charging is finished, remove the flat end from the Charger/Accessory Interface connector on the device.

Note: Failure to unplug the wall charger before you remove the battery, can cause damage to the device.

Turning Your Device On and Off

Turning Your Device On

- Press and hold the **Power/Lock Key** .

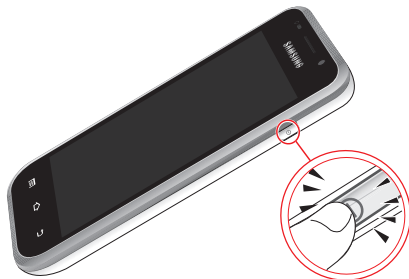

Note: Your device's internal antenna is located along the top back of the device. Do not block the antenna; doing so may affect signal quality and may cause the device to operate at a higher power level than is necessary.

Turning Your Device Off

1. Press and hold the **Power/Lock Key** .
2. At the prompt, touch **Power off**.

Your Google Account

Your new device uses your Google account to fully utilize its Android features, including Gmail, Maps, Navigation, Google Talk and the Android Market. When you turn on your device for the first time, set up a connection with your existing Google account or create a new Google account.

To create a Google account or set up your Google account on your device use **Accounts and sync** settings. For more information, refer to *“Accounts and Sync”* on page 115.

Using Google Maps

In order to use some applications related to Google Maps, you must first connect Wi-Fi. For more information, refer to *“Wi-Fi Settings”* on page 104.

You must also enable location services to use Google Maps. Some features require Standalone or Google location services. For more information, refer to *“Location and Security”* on page 111.

Task Manager

Your device can run applications simultaneously and some applications run in the background.

Use Task Manager to see which applications are running on your device and to end running applications to extend battery life. You can also uninstall applications from your device and see how much memory is used by applications.

Task Manager provides information about applications, including **Active applications**, **Downloaded**, **RAM**, **Storage**, and **Help**.

To access the Task Manager:

1. From a Home screen, touch **Applications** 
→ **Task manager** .
2. Touch the **Active applications** tab to view applications running on your device. Touch **Exit** to end an application or **Exit all** to stop all running applications.
3. Touch the **Downloaded** tab to view applications installed from Android Market. Touch **Uninstall** to remove an application from your device.
4. Touch the **RAM** tab to display the amount of Random Access Memory (RAM) currently in use. Touch **Clear memory** to clear inactive and background processes.

5. Touch the **Storage** tab to view internal and external storage memory statistics.
6. Touch the **Help** tab to view useful tips for extending battery life.

Tip: To launch Task Manager from any screen, touch and hold the **Home Key** , then touch **Task manager**.

You can also access Task Manager from the **Program Monitor** widget. For more information, refer to “*Widgets*” on page 21.

Galaxy Player 4.0 Accessories

The items supplied with your device may vary depending on the software and accessories available in your region.

- You can obtain additional accessories from your local Samsung dealer.
- The supplied accessories perform best for your device.
- Accessories other than the supplied ones may not be compatible with your device.

Securing Your Device

By default, the device locks automatically when the screen times out or you can lock it manually. You can unlock the device using one of the default Unlock screens or, for increased security, use a personal screen unlock pattern.

For more information about creating and enabling a Screen unlock pattern, see “*Set Screen Lock*” on page 112.

For other settings related to securing your device, see “*Location and Security*” on page 111.

Note: Unless stated otherwise, instructions in this User Manual start with the device unlocked, at the Home screen.

Locking the device manually

- Press the **Power/Lock Key** .


Unlocking the device

1. Press the **Power/Lock Key** .

The locked screen displays

Sweep glass to unlock. The day, date, and time also display.

2. Touch and sweep across the screen, either to the left or right, as indicated on the screen.

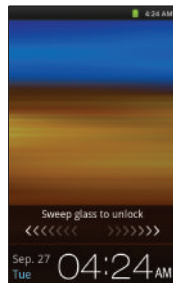

Note: You can choose the type of Screen Unlock you want to use, either Pattern or Password. For more information, refer to “*Location and Security*” on page 111.

Troubleshooting

If your device has fatal errors, hangs up, or freezes, you may need to close all programs or reset the device to regain functionality.

- If your device is still responsive, but a program is frozen, close the program using the Task Manager. For more information, refer to “*Task Manager*” on page 9.
- If your device is frozen and unresponsive, press and hold the **Power/Lock Key**  for 8 to 10 seconds.

Android System Recovery

Android System Recovery is used for Google updates. The average user should never need to perform a system recovery.

Note: If you entered this menu by mistake, use the Volume Up/Down key to select **reboot system now**, then touch the **Home Key** . Your device then continues to boot up.

To enter the Android System Recovery mode, follow these steps:

1. Turn the device off.
2. Press the **Volume Up Key**  and then press the **Power/Lock Key**  at the same time until the device switches on.

Tip: Volume Up is the end closest to the top of the device.

3. Once the SAMSUNG logo appears, release the Power/Lock key while continuing to press the Volume Up key.
4. Continue to press the Volume Up key until the Android System Recovery screen displays.
5. Release the Volume Up key.

The following options are available:

- **reboot system now:** Turns on your device.
 - **apply update from sdcard:** Used to apply an update file from your microSD card.
 - **wipe data/factory reset:** Deletes all data from the device except captured pictures and videos. For more information, refer to “*Factory Data Reset*” on page 117.
 - **wipe cache partition:** Deletes all cache data, such as log files.
6. Press the Volume Up/down key to scroll up or down, then touch the **Home Key**  to make a selection.

Section 2: Understanding Your Device

This section outlines key features of your device and describes the screen and the icons that appear when the device is in use. It also shows how to navigate through the device.

Features

Your device is lightweight, easy-to-use, and offers many useful features. The following list outlines a few of the features included in your device.

- Touch screen provides quick response to a variety of menus and options including applications and seven home screens
- Android™ 2.3.5, Gingerbread
- Android Market™ plus pre-loaded applications
- Ready access to the Internet
- Built-in Bluetooth® 3.0 Wireless technology. For more information, refer to *“Bluetooth Settings”* on page 106.
- Built-in Wi-Fi technology (802.11 b/g/n/a)
- 4-inch 800x480 WVGA Super Clear LCD touch screen
- 3.2 Megapixel camera and camcorder
- Messaging Features:
 - Gmail
 - Email (corporate and personal)
 - Google Talk
- Support for microSD™ and microSDHC™ Memory Cards, which are used for data storage and access
- Photo Gallery that supports JPEG, PNG, GIF, and BMP formats
- HD Video Player (720p) that supports H.263, H.264, MPEG4, 3GP, WMV (v9), Xvid, and DivX formats
- DivX Certified® to play DivX® video up to HD 720p, including premium content
- Music Player that supports WAV, MP3, AAC, AAC+, eAAC+, WMA (v9), and Ogg formats
- FM Radio that lets you listen to your local FM radio stations
- Social Hub to integrate your e-mail, calendar, and favorite social networking sites

Front and Top Views

The following items can be found on the front and top of your device as illustrated.

1. **Charger/Accessory Port:** Allows you to connect a Travel Charger or other optional accessories such as a USB/data cable to sync music and files.
2. **Proximity and Light Sensors:** The Proximity sensor detects how close an object is to the surface of the screen. The Light sensor is used to control screen brightness automatically and when taking photos with the Front-facing Camera.
3. **External Speaker:** Used for music or video playback, notification tones, and for other sounds.
4. **Front-facing Camera Lens:** Used when taking photos.
5. **Menu Key:** Touch to display options for the current screen.
6. **Home Key:** Touch to display the Home screen. Touch and hold to display recent applications or to launch Task Manager. Touch to wake the screen for unlocking.
7. **Back Key:** Touch to return to the previous screen or option.



Side Views

The following items can be found on the sides of your device.

1. **Volume Key:** From a Home screen, press to adjust Master Volume. During music playback, press to adjust volume.
2. **Power/Lock Key:** Press and hold to turn the device on or off. Press to lock the device or to wake the screen for unlocking.



Back and Bottom Views

The following items can be found on the back and bottom of your device.

1. **Camera Lens:** Used to take photos or record videos.

2. **3.5mm Headset Jack:** Plug in for headphones, which also serve as an antenna. For more information, refer to “FM Radio” on page 70.
3. **External Speakers:** Used for music or video playback, notification tones, and for other sounds.
4. **Memory Card Slot:** Remove the cover to install a memory card for storage of files. For more information, refer to “Installing the Memory Card” on page 5.
5. **Microphone:** Used for voice recording or video chat.



Home Screen

The Home screen is the starting point for using your device.

Note: Unless stated otherwise, instructions in this User Manual start with the device unlocked, at the Home screen.

1. **Status Bar:** Presents icons to show notifications, battery power, and connection details. For a list of icons, see “*Status Bar*” on page 19.
2. **Widgets:** Applications that run on the Home screen. These widgets are found on the Home screen by default. For more information, refer to “*Widgets*” on page 21.
3. **Shortcuts:** Shortcuts to common applications. These shortcuts are found on the Home screen by default. For more information, refer to “*Shortcuts*” on page 22.
4. **Home screen:** The starting point for using your device. Place shortcuts, widgets, and other items to customize your device to your needs.
5. **Primary Shortcuts:** Shortcuts to common features. For more information, refer to “*Primary Shortcuts*” on page 21.



Extended Home Screen

The Home screen consists of the Home panel, plus six panels that extend beyond the display width to provide more space for adding shortcuts, widgets, and folders.

Slide your finger horizontally across the screen to scroll to the left or right side panels. As you scroll, the indicator at the top of the display shows your current position.

Customizing the Home Screen

To customize the Home screen to suit your preferences just navigate to the desired Home screen, then touch and hold on the screen to display the **Add to Home screen** menu. Then touch one of the options:

- **Widgets:** For more information, refer to “*Widgets*” on page 21.
- **Shortcuts:** For more information, refer to “*Shortcuts*” on page 22.
- **Folders:** For more information, refer to “*Folders*” on page 23.
- **Wallpapers:** For more information, refer to “*Wallpapers*” on page 24.

Display Settings

You can customize display settings to your preferences. For more information, refer to “*Display*” on page 110.

Adding and Removing Home Screen Panels

Your device comes with seven Home screen panels. You can customize the Home screen by removing or adding panels.

Note: The panel in the first position displays when you touch the **Home Key** .

1. From a Home screen, touch the **Menu Key**  → **Edit**.
2. Use these controls to configure panels:



Remove: Touch and drag a panel to the Trash Can to remove the panel from the Home screen.



Add: Touch to add a new panel, up to a total of seven. This option is available when less than seven panels have been added.

3. To rearrange the order of panels, touch and drag a panel to a new location.

Tip: You can also display **Edit** options by pinching the Home screen.

Navigating Your Device

Use command keys and the touch screen to navigate.

Command Keys


Menu Key

Touch the **Menu Key**  to display options for the current screen or feature.

Home Key

Touch the **Home Key**  to display the first Home screen.

Touch and hold the **Home Key**  to launch a menu of recent applications or to launch Task Manager.

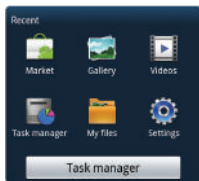

Back Key

Touch the **Back Key**  to return to the previous screen, option, or step.

Google Search

Touch the **Google Search**  widget to search the web and your device. The Google Search widget is found on the Home panel by default. For more information, refer to “Google Search” on page 65.

Context-Sensitive Menus

Context-sensitive menus offer options for features or screens. To access context-sensitive menus:

- Touch the **Menu Key** .
- Touch and hold on an item.

Finger Gestures

Touch

Touch items to select or launch them. For example:

- Touch the on-screen keyboard to enter characters or text.
- Touch a menu item to select it.
- Touch an application's icon to launch the application.

Touch and Hold

Activate on-screen items. For example:

- Touch and hold a widget on the home screen to move it.
- Touch and hold on a field to display a pop-up menu of options.

Swipe, Flick, or Slide

Swipe, flick, or slide your finger vertically or horizontally across the screen. For example:

- Unlocking the screen
- Scrolling the Home screens or a menu.

Pinch

Use two fingers, such as your index finger and thumb, to make an inward pinch motion on the screen, as if you are picking something up, or an outward motion by sweeping your fingers out. For example:



- Pinch the Home screen to show customization options.
- Pinch a photo in Gallery to zoom in.

Notification Panel

The Notification Panel shows information about connections, messages, and other items.

To display the Notification Panel:

- Sweep your finger downward from the top of the screen.

From the Notification Panel, the following options are available:

1. Touch an icon to activate the feature.
2. Touch to clear all notifications.
3. Touch a notification to open the application.
4. Touch and hold, then slide your finger up to close the Notification Panel or touch the Back Key .



Icons

Icons at the top of the Notification Panel show status for:

- **Wi-Fi:** Touch to enable or disable Wi-Fi. For more information, refer to “*Wi-Fi*” on page 81.
- **Bluetooth:** Touch to enable or disable Bluetooth. For more information, refer to “*Bluetooth*” on page 82.
- **GPS:** Touch to enable Standalone GPS services. For more information, refer to “*Use GPS Satellites*” on page 112.
- **Sound / Vibration:** Touch to toggle between sound and vibration.

- **Auto rotation:** Touch to enable or disable auto rotation. When enabled, the screen orientation changes when you rotate the device. When disabled, the screen locks in the current orientation (horizontal or vertical) and the orientation does not change when you rotate the device.

Clearing Notifications

1. Sweep your finger downward from the top of the screen to display the Notifications Panel.
2. Touch a notification to clear it.
— or —
Touch **Clear** to clear all notifications.

Status Bar

The Status Bar displays icons to show connection status, battery power, and other details.



System Alert: Check Notifications Panel for alerts.



Battery Full: Battery is fully charged. Disconnect device from power source.



Battery Level: Shown partially charged.



Device Power Critical: Battery has only three percent power remaining. Charge immediately.



Charging Indicator: Battery is charging. Displays when connected to a standard AC wall outlet or to a computer by way of a USB cable.



USB Connected: Device is connected to a computer using a USB cable.



Updates Available: Updates to the applications you have downloaded are available.



Download in Progress: An application is being downloaded to the device.



Download Successful: A recent software download was successfully downloaded.



Flight Mode: Indicates that the Flight Mode is active, which allows you to use many of your device's features, but it cannot access online information or applications.



New Email Message: You have new email.



New Gmail Message: You have new Gmail.



Google Talk Invitation: Someone has invited you to chat using Google Talk.



Refresh: An account is being refreshed.



Alarm Set: An alarm is active. For more information, refer to “*Clock*” on page 90.



Silent Mode: All sounds except media and alarms are silenced, and Vibrate mode is not active. See “*Silent Mode*” on page 108.



Vibrate Mode: All sounds are silenced, and Vibrate is set to Always or Only in Silent mode. For more information, refer to “*Vibrate*” on page 108.



Media Scanner: The media scanner is active.



Preparing SD Card: A memory card has been mounted and is being prepared for use. For more information, refer to “*SD Card and Device Storage*” on page 117.



Bluetooth Active: Bluetooth is turned on.



Music Player: A song is playing. Touch the Music icon or display the Notification Panel to see the song title and music player controls. For more information, refer to “*Music Player*” on page 68.



Wi-Fi Active: Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



Wi-Fi Action Needed: Action needed to connect to Wireless Access Point (WAP).



GPS Active: Displays when GPS is active.



Navigation Active: The Navigation app is active. For more information, refer to “*Navigation*” on page 63.

Primary Shortcuts

Primary Shortcuts appear at the bottom of the display.



Music: Play music stored on an optional installed memory card. For more information, refer to “*Music Player*” on page 68.



Videos: Play and manage videos stored on an installed memory card. For more information, refer to “*Videos*” on page 77.



Internet: Access the Internet. Appears on the Home screen by default. For more information, refer to “*Internet*” on page 55.



Applications: Access your device's applications. For more information, refer to “*Applications*” on page 25.

Widgets

Widgets are self-contained applications that you can place on the Home screen to access your favorite features.

Adding Widgets to the Home Screen

1. Navigate to the desired Home screen.
2. To display the **Add to Home screen** menu:
 - Touch and hold on the screen.
 - or —
 - Touch the **Menu Key**  → **Add**.
3. Touch **Widgets**, then touch a widget to add it to the Home screen.

Removing Widgets

- Touch and hold the Widget until **Remove**  appears at the bottom of the screen, then drag the Widget to the **Remove** icon to remove it.

Widgets



Calendar: Display a calendar. For more information, refer to “*Calendar*” on page 88.



Calendar clock: Display an analog clock with the current date.



Days: Display your daily diary. Touch to launch Mini Diary. For more information, refer to “*Mini Diary*” on page 97.



Dual clock: Display the date and time for two different locations. For more information, refer to *“Dual Clock”* on page 93.



Google Search: Display a Google Search bar. For more information, refer to *“Google Search”* on page 65.



Home screen tips: Display tips about the Home screen.



Latitude: Locate your friends on a map, and share or hide your location. For more information, refer to *“Latitude”* on page 62.



Market: Download applications from the Android Market. For more information, refer to *“Market”* on page 95.



Picture frame: Display a picture on a Home screen.



Power control: Control Wi-Fi, Bluetooth, and GPS connections, and set automatic synchronization and brightness settings. For more information, refer to *“Power Control”* on page 99.



Program Monitor: Display the number of active applications. Touch to launch Task Manager. For more information, refer to *“Task Manager”* on page 9.



Rate Places: Use Google Maps and the Places app to display information about your current place of interest so that you can rate it. For more information, refer to *“Places”* on page 64.



Traffic: Define a destination, name it, and use Google Maps to view the traffic from your location to the defined location. For more information, refer to *“Maps”* on page 60.



YouTube: Search YouTube and watch videos. For more information, refer to *“YouTube”* on page 66.

Shortcuts

Use Shortcuts for quick access to applications or features, such as Email or other applications.

Adding Shortcuts from a Home screen

1. Navigate to the desired Home screen.
2. To display the **Add to Home screen** menu:
 - Touch and hold on the screen.
 - or —
 - Touch the **Menu Key**  → **Add**.

3. Touch **Shortcuts**, then touch a selection. Follow the prompts to add it to the Home screen.



Applications: Launch an application. For a list, see “*Applications List*” on page 25.



Bookmark: Launch a bookmarked web page.



Directions & Navigation: Get directions and navigation from Google Maps.



Email: Access an Email account. Appears once an Email account is set up. For more information, refer to “*Email*” on page 50.



Gmail label: Access a Gmail label. Appears once a Gmail account is set up. For more information, refer to “*Setting Up Your Gmail Account*” on page 47.



Settings: Go to a specific setting.

Adding Shortcuts from Applications

1. Navigate to a Home screen.
2. Touch **Applications** .
3. Touch and hold on an application icon. The Shortcut icon is automatically placed on the selected Home screen.

Removing Shortcuts

- Touch and hold the Shortcut until **Remove**  appears, then drag the Shortcut to the **Remove** icon.

Folders

Place Folders on the Home screen to organize items together on the Home screen.

1. Navigate to the desired Home screen, then touch and hold on the screen to display the **Add to Home screen** menu.

2. Touch **Folders**, then touch a selection:



New folder: Create a new empty folder.



All contacts: Create a folder containing all contacts.



Contacts with phone numbers: Create a folder containing contacts with stored phone numbers.



Received list from Bluetooth: Create a folder containing a list of items received from Bluetooth.



Recent documents: Display the ThinkFree Office Recent Docs list. Tap an entry to open the associated document. For more information, refer to “*ThinkFree Office*” on page 101.

Removing Folders

- Touch and hold the Folder until **Remove**  appears, then drag the Folder to the **Remove** icon.

Wallpapers

You can choose a picture to display in the background of the Home screen. Choose from preloaded wallpaper images or select a photo you have downloaded or taken with the Camera.

1. From a Home screen, touch and hold on the screen to display the **Add to Home screen** menu, then touch **Wallpapers**.

— or —

From a Home screen, touch the **Menu Key** 
→ **Wallpaper**.

2. Choose a source for images:
 - **Gallery:** Access the Gallery to choose a picture from an installed memory card. Touch a picture to select it, then use the crop tool to resize the picture, if desired. Touch **Save** to save the picture as wallpaper.
 - **Live wallpapers:** Choose from pre-loaded interactive animated wallpapers. Touch a wallpaper to see an example. Touch **Set wallpaper** to save your choice.
 - **Wallpaper gallery:** Choose from pre-loaded wallpaper images. Touch a wallpaper, then touch **Set wallpaper**.

Applications

The Applications screen holds all applications on your wireless device. Applications that you download and install from the Android Market or from the web are also added to the Applications screen.

You can place shortcuts to applications on the Home screen for quick access to the application. For more information, refer to “*Adding Shortcuts from Applications*” on page 23.

1. From a Home screen, touch **Applications** .
2. Slide your finger across the screen left or right to scroll through the Applications screens.
3. Touch an icon to launch the application.

Customizing the Applications Screens

1. From a Home screen, touch **Applications** .
2. Touch the **Menu Key**  → **Edit**.
3. Touch and hold an application icon, then drag it to a new location.
4. When you are finished, touch the **Menu Key**  → **Save**.

Note: To discard changes to the Applications screens before you save them, touch the **Menu Key**  → **Cancel**, then touch **OK** to confirm.

Applications List

The following is an alphabetical list of the applications that come preloaded on your device:



AllShare: Synchronize your device with your TV. For more information, refer to “*AllShare*” on page 87.



Calculator: The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division. The calculator can also be used as a scientific calculator. For more information, refer to “*Calculator*” on page 88.



Calendar: Record events and appointments to manage your schedule. For more information, refer to “*Calendar*” on page 88.



Camera: Take photos or record videos. A shortcut to Camera appears on the Main Home screen by default. For more information, refer to “*Camera*” on page 72.



Clock: Schedule alarms to remind you of appointments or events, or as a wake-up. For more information, refer to “*Clock*” on page 90.



Contacts: Save and manage contact information for your friends and colleagues. For more information, refer to “*Contacts*” on page 40.



Downloads: Files, apps, and other items you download in Browser, Gmail, Email, or in other ways, are stored on your tablet's internal storage. Use the Downloads app to view, reopen, or delete what you have downloaded. For more information, refer to “*Downloads*” on page 92.



Email: Send and receive email from your device. For more information, refer to “*Email*” on page 50.



FM radio: The built-in FM radio in your device provides free music from your local FM radio stations. A shortcut to FM radio appears on the Main Home screen by default. For more information, refer to “*FM Radio*” on page 70.



Gallery: View and manage photos stored on your device or on an installed memory card. For more information, refer to “*Gallery*” on page 78.



Gmail: Send and receive email with Gmail, Google's web-based email. A shortcut to Gmail appears on the Main Home screen by default. For more information, refer to “*Gmail*” on page 47.



Google Search: Use the Google search engine to search the internet and your device. A shortcut to Google Search appears on the Main Home screen by default. For more information, refer to “*Google Search*” on page 65.



Internet: Access the Internet. By default, a shortcut to Internet appears on each Home screen as a Primary Shortcut. For more information, refer to “*Internet*” on page 55.



Latitude: Use Google Latitude to locate your friends on a map and share or hide your location. For more information, refer to “*Latitude*” on page 62.



Maps: Find locations and get directions with Google maps. A shortcut to Maps appears on the Main Home screen by default. For more information, refer to “*Maps*” on page 60.



Market: Browse, download, and install Android applications. A shortcut to Market appears on the Main Home screen by default. For more information, refer to “*Market*” on page 95.



Memo: Create text memos and use Bluetooth to send memos. For more information, refer to “*Memo*” on page 96.



Mini Diary: Record daily happenings. Also available as an Android Widget, Days. For more information, refer to “*Mini Diary*” on page 97.



Music: Play music stored on an optional installed memory card. By default, a shortcut to Music appears on each Home screen as a Primary Shortcut. For more information, refer to “*Music Player*” on page 68.



My files: Find, view and manage files stored on an optional installed memory card. For more information, refer to “*My Files*” on page 98.



Navigation: Use Google Maps Navigation to search for locations, with turn-by-turn directions. For more information, refer to “*Navigation*” on page 63.



Places: Use Google Maps to find places of interest, plus add your own favorite places. For more information, refer to “*Places*” on page 64.



Samsung Apps: Connect to Samsung Apps and make your smart device even smarter. Simply and easily download an abundance of applications to your device such as games, news, reference, social networking, navigation, and more. A shortcut to Samsung Apps appears on the Main Home screen by default. For more information, refer to “*Samsung Apps*” on page 100.



Settings: Configure your device to your preferences. For more information, refer to “*Settings*” on page 104.



Social Hub: Access your social networks, like Facebook, YouTube, and Twitter, all in one place. For more information, refer to “*Social Hub*” on page 100.



Talk: Chat with other Google Talk users. A shortcut to Talk appears on the Main Home screen by default. For more information, refer to “*Google Talk*” on page 53.



Task manager: View and manage active applications. For more information, refer to “*Task Manager*” on page 9.



ThinkFree Office: Provides access to a Microsoft® Office-compatible applications suite. It also provides a centralized location for the management of your online and offline files. For more information, refer to “*ThinkFree Office*” on page 101.



Videos: Play and manage videos stored on an installed memory card. By default, a shortcut to Video appears on each Home screen as a Primary Shortcut. For more information, refer to “*Videos*” on page 77.



Voice Recorder: Record your voice or other sounds, and share via Bluetooth or Gmail. For more information, refer to “*Voice Recorder*” on page 102.



Voice Search: Perform a Google search by speaking your search terms. For more information, refer to “*Voice Search*” on page 65.



YouTube: View and upload YouTube videos, right from your device. A shortcut to YouTube appears on the Main Home screen by default. For more information, refer to “*YouTube*” on page 66.

Section 3: Entering Text

This section describes how to enter words, letters, punctuation and numbers when you need to enter text.

Virtual QWERTY Keyboard

Your device uses a virtual QWERTY keyboard for text entry. Use the keyboard to enter letters, punctuation, numbers, and other characters into text entry fields or applications. Access the keyboard by touching any text entry field.

The virtual QWERTY keyboard displays at the bottom of the screen. By default, when you rotate the device, the screen orientation updates to display the keyboard at the bottom of the screen.



Swype Keyboard

Text Input Methods

Your device offers several text input methods. This section explains two of them.

- **Swype:** Swype™ is a new text input method that allows you to enter words by gliding your finger over the virtual QWERTY keyboard, lifting your finger between words. You can also enable Word prediction, which matches your key touches to common words.
- **Samsung Keypad:** The Samsung Keypad is a virtual QWERTY keyboard that allows you to enter text by touching keys on the screen. The Samsung Keypad includes predictive text, which matches your key touches to common words so that you can select the word to enter it into your text.

Changing the Input Method

When entering text, you can select the text input method.

1. Touch and hold a text field.

The Edit text pop-up displays.

2. Touch **Input method**.


The Select input method pop-up displays.

3. Touch an input method to activate it.


For more information, refer to “*Language and Keyboard*” on page 118.

Entering Text Using Swype

Swype™ is a new way to enter text on touch screens. Instead of touching each key, use your finger to trace over each letter of a word. For each word, place your finger on the first letter and glide to the subsequent letters, lifting on the last letter.

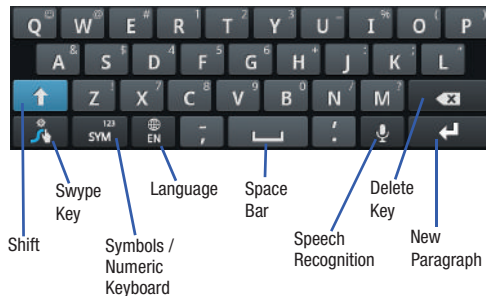

The following example shows how to enter the word “this”. Put your finger down on the “t” and, without lifting, glide it to the “h”, then to the “i”, then over to the “s”.

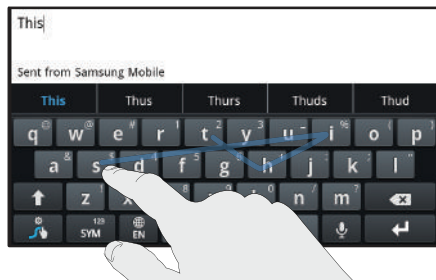

Here are a few tips to get you started:

- **Auto-spacing:** When you finish a word, just lift your finger and start the next word.
- **Double letters:** Just “scribble” on the key.
- **Auto-capitalization:** Swype recognizes and capitalizes the first word of sentences. If you want to capitalize a word that is not at the beginning of a sentence, just glide above the keyboard before gliding over the next letter.
- **Contractions:** Swype recognizes most words that include an apostrophe, just swype the letters of the word, including the apostrophe.
- **Punctuation:** Touch and hold a key to view a punctuation menu and make a selection.

- **Accented characters:** Just glide through the letters of the word. Swype usually recognizes the word and correctly accents the letters.
- **Error correction:** If you make a mistake, double-tap on the word you want to change.

Configuring Swype

Configure Swype to your preferences.

- For more information, refer to “*Swype Keypad*” on page 118.
- While entering text, touch and hold the **Swype Key**  to change input methods.

Swype Help

While entering text, you can get help for using Swype.

- Touch **Shift** , then touch and hold the **Swype Info Key**  to display Swype Help.
- Touch **Tutorial** for an interactive tutorial.
- Touch **Settings** to display Swype settings.

Entering Symbols and Numbers

Using the Swype Keyboard:

- Touch and hold on a key to enter the symbol or number at the top of the key.
- Touch and hold on a key until a menu of all characters available on that key appears, then touch a character to enter it.
- For more symbols, touch **Shift** , then touch the corresponding key.
- Touch  to switch to the symbols keyboard.
- To display the alphabetic keyboard, touch .
- Touch and hold  or  to display the numeric keyboard and quickly enter numbers and mathematical operators.
- Touch  to display the alphabetic keyboard.

Using Swype Speech Recognition

Enter text by speaking. Swype recognizes your speech and enters text for you.

- ▶ Touch . At the **Speak now** prompt, speak the text you want to enter.

Editing Keyboard

The Editing Keyboard provides a quick way to move the cursor and highlight text. If the application in which you are working supports editing, you can cut, copy, or paste highlighted text.

To display the Editing Keyboard:


1. Swipe from the **Swype Key**  to the **SYM**  key.
– or –
Swipe from the **Swype Info Key**  to the **ABC**  key.
2. Touch the edit key.



Entering Text Using the Samsung Keypad

The Samsung Keypad is a custom virtual QWERTY keyboard, featuring predictive text. Input characters by touching the on-screen keys with your finger or use speech recognition.

As you enter characters, predictive text matches your key touches to common words and displays them. Select a word from the display to insert it into your text.

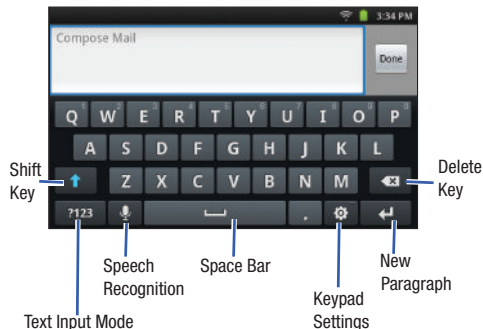

Configuring the Keypad

To configure the Samsung Keypad to your preferences:

- ▶ While entering text, touch **Settings** .

The Samsung keypad settings screen is displayed. For more information, refer to “*Samsung Keypad*” on page 119.

Entering Upper and Lower Case Letters

The default case is lower case (abc). Enter upper and lower case alphabet letters by touching the Shift key  to toggle the case, before touching the letter key(s).

- Touch once to switch from abc to Abc mode
- Touch and hold to switch to ABC mode

Entering Symbols and Numbers

To enter a number, touch , then touch the corresponding key.

To enter common symbols, touch  to switch to Symbols mode, then touch the corresponding key.

There are three pages of symbols. Touch  to switch to the next page.

Touch and hold a vowel key (A, E, I, O, U, or Y) or the C, N, or S key to open a small window where you can touch an accented vowel or other alternate letter.

Touch and hold the Period key (.) to open a small window with a set of common symbols and Emoticons.

Using XT9 Predictive Text

XT9 is a predictive text system that has next-letter prediction and regional error correction, which compensates for users touching the wrong keys on QWERTY keyboards.

1. Touch **Settings**  at the bottom of the keypad.

The Samsung keypad settings screen displays.


2. Touch the **XT9** field so a green check mark appears next to the field.
3. Touch the **XT9 advanced settings** field to modify XT9 associated settings. For more information, refer to “*Samsung Keypad*” on page 119.

Note: The XT9 option is available only when Abc mode has been selected.

4. Begin typing a word. A list of word options displays. Touch one of the words to replace the word that has already been typed.

— or —

Touch  and then touch **Add word** to register a new word to XT9.

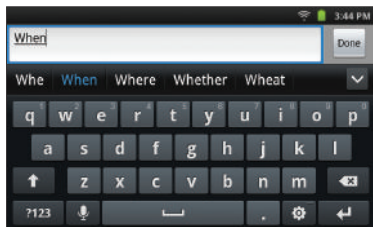

5. Continue typing your message. XT9 mode can be used in portrait or landscape mode.

Editing Text

You can edit the text you enter in text fields by cutting, copying, or pasting text. These operations can be performed within and across apps. However, some apps do not support editing some or all of the text displayed while others may offer their own way to select text.

Editing Existing Text

To edit text that you have entered:

1. Touch the text at the point you want to edit.
The **Cursor**  displays at the point you touched.
2. Touch and drag the **Cursor** to a better position, if necessary.
3. Enter additional text or delete text by repeatedly touching the **Delete**  key.

Copying, Deleting, or Replacing Text

To select and copy, delete, or replace text:

1. Touch and hold the text or word you want to select.
The Edit text pop-up displays.
2. Touch **Select word** or **Select all**.
The selected text is highlighted with a   tab at each end of the selection.
3. Drag a selection tab to expand or reduce the range of selected text.

4. On the pop-up, touch **Copy** to copy the selected text, **Cut** to copy and remove the selected text, or **Paste** to replace the selected text with text previously saved to the clipboard.

— or —

Enter text by typing or speaking to replace the selection with what you type.

— or —

Touch the **Delete**  key to delete the selected text.

Tip: Touch on another area of the screen to unselect the text.

Pasting Text

To paste previously copied text:

1. Touch the text at the point you want to paste the copied text.

The **Cursor**  displays at the point you touched.

2. Touch and hold the **Cursor** and touch **Paste** in the pop-up.

Closing the Keyboard

To close the keyboard:

- Touch the **Back Key** .

Using the Handwriting Feature

You can enter text simply by using your finger to handwrite letters on your screen.


1. From a screen where you can enter text, activate the keypad by touching a text input field on the screen.
2. If necessary, change to the Samsung keypad. For more information, refer to “*Changing the Input Method*” on page 29.
3. If necessary, touch **Settings**  → **Portrait keypad types**, then **Handwriting box 1** or **Handwriting box 2**.

Handwriting box 1 has four handwriting areas, two for characters (a), one for numbers (1), and one for symbols and special characters (?).


Handwriting box 2 has one handwriting area.

Note: Handwriting box 2 and Handwriting box 2 only display in portrait mode.

Handwriting box 1

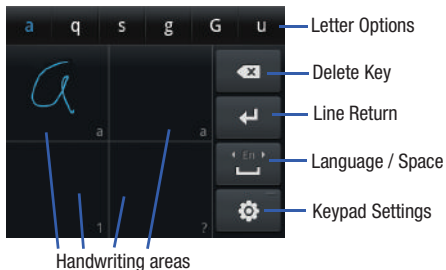

Handwriting box 2

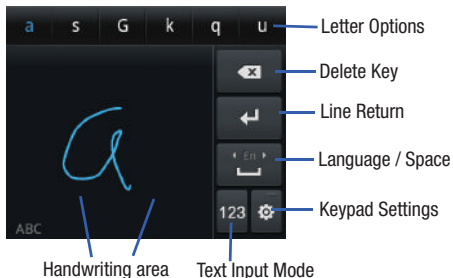

4. Use your finger tip to write out each character.
5. When you write single letters, suggestions are offered in the **Letter Options** area. The suggested letter appears in blue. If that suggestion is incorrect, touch one of the other letters.

Handwriting Tips

- For uppercase letters, write the letter larger than the lowercase letters.
- Write a dash (horizontal line) to add a space.
- To write numbers and symbols with Handwriting box 1, write numbers in the lower left area and symbols in the lower right area. For Handwriting box 2, touch the Text Input Mode key.

Handwriting Box Key

The keys are similar for both handwriting pads.

- **Delete:** Touch to delete letters or touch and hold to delete multiple letters.
- **Line Return:** Start a new line of text.
- **Language / Space:** Touch to add a space. If you have more than one language defined, touch and hold this key, then drag across the pop-up to change the language.
- **Keypad Settings:** Display the keypad settings. For more information, refer to “*Handwriting Settings*” on page 37.

- **Text Input Mode:** For Handwriting box 2, the current mode is displayed in the lower left corner of the handwriting area. Touch the Text Input Mode key to activate alphabetic (**ABC**), numeric (**123**), or symbols (**?#+**) mode.

Handwriting Settings

To change the Handwriting settings:

1. Touch **Settings** , then touch **Handwriting settings**.

The following settings can be changed:

- **Recognition time:** Set the time it takes for your tablet to recognize what you write. Choose from 0.1, 0.3, 0.5, 1, or 2 seconds.
 - **About:** View information on the handwriting tool manufacturer and view Gesture Methods for Space, Enter, and Back Space.
2. Touch  repeatedly to return to your message.

Using Speech Recognition

You can use your voice to enter text using the Voice input feature, which lets you enter text by speaking. Samsung Keypad recognizes your speech and enters text for you.

Note: Enable **Voice Input** in Samsung keypad settings. For more information, refer to “*Samsung Keypad*” on page 119.

1. Touch **Speech Recognition**  on the Samsung Keypad.
2. At the **Speak now** prompt, speak clearly and distinctly into the microphone.
3. **Working...** is displayed while the software is converting your voice to text.
The text is displayed in the message.
4. Touch **Speech Recognition**  again to speak and add more text.

Note: The feature works best when you break your message down into smaller segments.

Section 4: Contacts and Accounts

This section explains how to manage contacts and accounts.

Accounts

Your device can synchronize with a variety of accounts. With synchronization, information on your device is updated with any information that changes in your accounts.

- **Facebook:** Add your Facebook account to sync Contacts.
- **Twitter:** Add your Twitter SNS Service to sync Contacts.
- **MySpace:** Add your MySpace SNS Service to sync Contacts.
- **Microsoft Exchange:** Add your Exchange account to sync Contacts, Calendar and Email.
- **Google:** Add your Google account to sync your Contacts, Calendar, and Gmail.
- **Samsung account:** Add your Samsung account.

Note: You must register your device with your social networking site before using the device to access the network.

Setting Up Your Accounts

Set up and manage your synchronized accounts with the **Accounts and sync** setting.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Accounts and sync**.
2. Touch **Add account**, then touch the account type.
3. Follow the prompts to enter your account credentials to complete the set-up process.
4. The device communicates with account servers to set up your account. When complete, your account appears in the **Manage accounts** area of the **Accounts and sync** screen.

Note: Before you can set up an account, Wi-Fi must be enabled. For more information, refer to “Turning Wi-Fi On or Off” on page 104.

Setting Up a Facebook Account

Note: You must register your device with your social networking site before using the device to access the network.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Accounts and sync** → **Add account** → **Facebook**.

The Set up your Facebook account screen displays.

2. Touch **Next**.
3. Enter your **Email** address and **Password**, then touch **Login**.
4. Follow the prompts to complete the set-up.

Setting Up a Twitter Account

Note: You must register your device with your social networking site before using the device to access the network.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Accounts and sync** → **Add account** → **Twitter**.

The Set up your Twitter account screen displays.

2. Touch **Next**.

3. Enter your **Username or email** address and **Password**, then touch **Login**.
4. Follow the prompts to complete the set-up.

Setting Up a MySpace Account

Note: You must register your device with your social networking site before using the device to access the network.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Accounts and sync** → **Add account** → **MySpace**.

The Set up your MySpace account screen displays.

2. Touch **Next**.
3. Enter your **Email** and **Password**, then touch **Login**.
4. Follow the prompts to complete the set-up.

Contacts

Store contact information for your friends, family and colleagues, to quickly access information or to send a message.

To access Contacts:

- ▶ From a Home screen, touch **Applications** 
→ **Contacts** .

Creating Contacts

1. From a Home screen, touch **Applications** 
→ **Contacts**  → .
2. At the **Save contact to** prompt, touch an account for synchronizing the contact (available options depend on the accounts you have set up for synchronization).
3. Touch contact fields to enter information:
 - Touch the Photo ID to **Select photo** to identify the contact.
 - Touch **First name**, then enter a first name for the contact.
 - Touch **Last name**, then enter a last name for the contact. Touch  to enter a **Name prefix**, **Middle name**, **Name suffix**, **Phonetic given name**, **Phonetic middle name**, or **Phonetic family name**.
4. When you finish entering information, touch **Save**.
 - Touch **Phone** to enter a phone number, then touch the Label button to choose a label, from **Mobile**, **Home**, **Work**, **Work Fax**, **Home Fax**, **Pager**, **Other**, **Custom** to create a custom label, or **Call back**. To add another number, touch .
 - Touch **Email** to enter an email address, then touch the Label button to choose a label, from **Work**, **Home**, **Mobile**, **Other**, or **Custom** to create a custom label. To add another address, touch .
 - Touch **IM** to enter an instant message address, then touch the Label button to choose a label, from **Google Talk**, **AIM**, **Windows Live**, **Yahoo**, **Skype**, **QQ**, **ICQ**, **Jabber**, or **Custom** to create a custom label. To add another IM, touch .
 - Touch **Groups** to assign the contact to a group. For more information about Groups, see “Groups” on page 44.
 - Touch **Postal address** fields to enter a physical address.
 - Touch **Organization** fields to enter a company name or association.
 - To add more fields, touch **More** to choose **Notes**, **Nickname**, **Website**, **Internet call**, **Birthday**, and **Anniversary**.

Updating Contacts

Make changes to update an existing contact.

1. From a Home screen, touch **Applications**  → **Contacts**  .
2. Touch and hold a contact, then touch **Edit**.
— or —
Touch a contact to view its information, then touch the **Menu Key**  → **Edit**.
3. Continue entering contact information. For more information, refer to “*Creating Contacts*” on page 40.
4. To delete a contact, touch the **Menu Key**  → **Delete**. At the prompt, touch **OK**.

Linked Contacts

Your device can synchronize with multiple accounts, including Google, Corporate Exchange, and other email providers, plus social networking sites like Facebook, Twitter, and MySpace. When you synchronize contacts from these accounts with your device, you may have multiple contacts for one person.

Linking, or joining, imported contact records allows you to see all the contact's numbers and addresses together in one Contact entry. Linking also helps you keep your contacts updated, because any changes that your contacts make to their information in the respective accounts is automatically updated the next time you synchronize with the account.

Linking contacts

1. From a Home screen, touch **Applications**  → **Contacts**  .
2. Touch a contact to display its information.
3. Touch the **Menu Key**  → **Join contact** and then touch another contact to link.

Unlinking contacts

1. From a Home screen, touch **Applications**  → **Contacts**  .
2. Touch a contact to display its information.
3. Touch the **Joined contacts** field to display linked contacts.
4. Touch  next to the contact to unlink it from the displayed contact.

Get Friends

Use the Get Friends feature to sync with your accounts. You can choose an account you have already added or add a new account.

For more information about setting up accounts on your device, see “*Setting Up Your Accounts*” on page 38.

1. From a Home screen, touch **Applications**  → **Contacts** .
2. Touch the **Menu Key**  → **Get SNS friends**.
3. Touch **Add account**, then touch an account. For more information, refer to “*Setting Up Your Accounts*” on page 38.
4. Touch the **Menu Key**  → **Sync now**.

Contacts Display Options

1. From a Home screen, touch **Applications**  → **Contacts** .
2. Touch the **Menu Key**  → **More** → **Display options** to set options:
 - Touch **Only contacts with phones** to restrict display to contacts with phone numbers.
 - Touch **Sort by** to list contacts by **First name** or **Last name**.

- Touch **Display contacts by** to list contacts by **First name first** or **Last name first**.
- Touch **My device** to choose groups to display or touch an account to choose display categories.

3. Touch **Done** to save options.

Sending Emails

You can send an email to a contact from the Contacts application.

1. From a Home screen, touch **Applications**  → **Contacts** .
2. Touch the **Menu Key**  → **More** → **Send email**.
3. Touch contact(s) to mark them for sending, then touch **Add**. A check mark indicates marked contacts.
4. At the prompt, choose a sending method, then follow the prompts to send the email:
 - **Email**: For more information, refer to “*Email*” on page 50.
 - **Gmail**: For more information, refer to “*Composing and Sending Gmail*” on page 48.

Sending a Namecard (vCard)

You can send contact namecards as vCards by way of Bluetooth to other Bluetooth devices or in an Email or Gmail as an attachment.

Note: Not all Bluetooth devices accept contacts and not all devices support transfers of multiple contacts. Check the target device's documentation.

1. From a Home screen, touch **Applications**  → **Contacts** .
2. Touch the **Menu Key**  → **Import/Export** → **Send namecard via**.

Touch contact(s) to mark them for sending, then touch **Send**. A check mark indicates marked contacts.

— or —

Touch a contact to display its information.

Touch the **Menu Key**  → **Send via**.

3. At the prompt, choose a sending method, then follow the prompts to send the namecard:
 - **Bluetooth:** For more information, refer to “*Bluetooth*” on page 82.

- **Email:** For more information, refer to “*Email*” on page 50.
- **Gmail:** For more information, refer to “*Composing and Sending Gmail*” on page 48.

Note: Touch **Use by default for this action** to use the selected sending method every time you send a namecard.

Exporting and Importing Contacts

You can export your contact list to an installed memory card or import contacts (previously exported) from a memory card.

1. From a Home screen, touch **Applications**  → **Contacts** .
2. Touch the **Menu Key**  → **Import/Export**.
3. Touch **Import from SD card** or **Export to SD card**, then follow the prompts to complete the operation.

My Profile

My profile is your own contact record. You can send My profile as a vCard by way of Bluetooth or as an attachment by way of Email or Gmail.

1. From a Home screen, touch **Applications**  → **Contacts** .
2. Touch the **Menu Key**  → **My profile**.

3. Add your profile information and touch **Save**.

– or –

Touch the **Menu Key**  → **Edit** to update your profile information

For more information, refer to “*Creating Contacts*” on page 40.

Sending My Profile

You can send My Profile as a vCard by way of Bluetooth to other Bluetooth devices or as an attachment to a Gmail or other email.

1. From a Home screen, touch **Applications**  → **Contacts** .
2. Touch the **Menu Key**  → **My profile** to display your contact information.
3. Touch the **Menu Key**  → **Send namecard via**.
4. At the prompt, choose a sending method, then follow the prompts to send the profile:
 - **Bluetooth**: For more information, refer to “*Bluetooth*” on page 82.
 - **Email**: For more information, refer to “*Email*” on page 50.

- **Gmail**: For more information, refer to “*Composing and Sending Gmail*” on page 48.

Note: Touch **Set as default** to use the selected sending method every time you send My Profile.

Groups

Assign contacts to Groups to make searching for contacts faster or to quickly send messages to group members.

Creating a New Group

1. From a Home screen, touch **Applications**  → **Contacts** , then touch the **Groups** tab.
2. Touch the **Menu Key**  → **Create**.
3. Touch the **Group name** field to enter a group name.
4. Touch **Save** to save the new group.

Deleting a Group

1. From a Home screen, touch **Applications**  → **Contacts** , then touch the **Groups** tab.
2. Touch the **Menu Key**  → **Delete**.
3. Touch a group to mark it or touch **Select all** to mark all groups. A check mark indicates marked groups.

4. Touch **Delete**, then touch **Group only**, to only delete the group, or **Group and group members**, to delete the group and the members of that group.

Editing a Group

1. From a Home screen, touch **Applications** 
→ **Contacts**  → **Groups**.
2. Touch a Group to display it.
3. Touch the **Menu Key**  → **Edit group**.
4. Touch **Save** to save the changes.

Adding and Removing Group Members

1. From a Home screen, touch **Applications** 
→ **Contacts**  → **Groups**.
2. Touch a Group to display it.
3. Touch the **Menu Key**  → **Add member**.
— or —
Touch the **Menu Key**  → **Remove member**.

4. To add a contact, touch the contact name on the left side of the screen or touch **Select all** to add all contacts listed.
Touch **Add**.
— or —
5. To remove a contact from the group, touch the contact name on the left side of the screen or touch **Select all** to remove all contacts listed. Touch **Remove**.

Tip: You can also change a contact's group associations by editing the contact. For more information, refer to *"Creating Contacts"* on page 40.

Sending a Message to Group Members

1. From a Home screen, touch **Applications** 
→ **Contacts**  → **Groups**.
2. Touch a **Group** to display it.
3. Touch the **Menu Key**  → **Send email** to create a new email.
4. Touch contacts to mark them as recipients for the new message, then touch **Send**.

5. At the prompt, choose a sending method, then follow the prompts to send the message:
- **Email:** For more information, refer to “*Email*” on page 50.
 - **Gmail:** For more information, refer to “*Composing and Sending Gmail*” on page 48.

Note: Touch **Set as default** to use the selected sending method every time you send My Profile.

6. The new message displays with marked contacts as recipients. For more information, refer to “*Composing and Sending Email*” on page 51.

Activities

The Activities option allows you to view updated contact information that has been synchronized with Facebook, Twitter, or MySpace.

1. From a Home screen, touch **Applications** 
→ **Contacts**  → **Activities**.

Note: You must log in to an SNS account (Facebook, Twitter, or MySpace) before you can view the Updates.

2. The updates are displayed.

Note: Activity updates will not appear unless you have synchronized your device with your accounts. For more information, refer to “*Accounts and Sync*” on page 115.

Section 5: Messaging

This section describes how to send and receive messages and other features associated with messaging.

Types of Messages

Your device supports these types of messages:

- **Gmail:** Send and receive Gmail from your Google account.
- **Email:** Send and receive email from your email accounts, including Corporate Exchange mail.
- **Google Talk:** Chat with other Google Talk users.

Note: Your Wi-Fi-only device does NOT support voice calling and messaging services. Please disregard any “dial” and “message” related menus because some Gmail options are identically set in all Android devices.

Gmail

Send and receive email with Gmail, Google’s web-based email.

Tip: To set up your Google account on your device, use **Accounts and sync** settings. For more information, refer to “*Accounts and Sync*” on page 115.

► From the Home screen, touch **Gmail** .

– or –

From a Home screen, touch **Applications** .

→ **Gmail** .

Setting Up Your Gmail Account

The first time you launch Gmail, your device prompts you to set up your Google account.

Note: You can use more than one Google account on your device. To add another account, use the **Menu Key**  → **Accounts** → **Add accounts** option.

1. From the Home screen, touch **Gmail** .
2. At the Add a Google Account screen, touch **Next** to begin, then touch an option:
 - **Create:** Follow the prompts to create a new account.
 - **Sign in:** Enter your Google Username and Password, then touch Sign In.
3. The device communicates with the Google server to set up your account and synchronize your email. When complete, your Gmail appears in the Inbox.

Refreshing Your Gmail Account

Refresh your account to update your device from the Gmail servers.

1. From the Home screen, touch **Gmail** .
2. Touch the **Menu Key**  → **Refresh**.

Managing Your Gmail Account

Use menu options to manage your Gmail.

1. From the Home screen, touch **Gmail** .
2. Touch the **Menu Key**  for these options:
 - **Refresh**: Update your device from the Gmail servers.
 - **Compose**: Create and send new Gmail.
 - **Accounts**: Choose a Gmail account or add a Google account.
 - **Go to labels**: View Gmail by label.
 - **Search**: Enter keywords to search mail.
 - **More**:
 - **Settings**: Configure settings. For more information, refer to “*Gmail account settings*” on page 49.
 - **Help**: Learn about using Gmail.
 - **About**: View information about Gmail.

Composing and Sending Gmail

1. From the Home screen, touch **Gmail** .
2. Touch the **Menu Key**  → **Compose**.
3. Touch the **To** field to enter recipients. As you enter names or email addresses, matching contacts display. Touch a contact to add it to the field.
4. Touch the **Subject** field to enter a subject.
5. Touch **Compose Mail** to enter the text of your email.
6. While composing a message, touch the **Menu Key**  for these options:
 - **Send**: Send the message.
 - **Save draft**: Save the message as a draft for sending later.
 - **Add Cc/Bcc**: Create Cc (copy) and Bcc (blind copy) fields in the message. After creating the fields, touch to enter recipients.
 - **Attach**: Launch Gallery to select a photo to add to the message.
 - **Discard**: Close the message without saving.
 - **Help**: Learn about using Gmail.
7. Touch  to send the message or  to save the message as a draft.

Gmail account settings

1. From the Home screen, touch **Gmail** .
2. Touch the **Menu Key**  → **More** → **Settings** for settings:

General preferences

- **Message Actions:** Set how you want message actions to show at the top of the screen. Options are: Always show, Only show in portrait, and Don't show.
- **Clear search history:** Remove previous searches you performed.
- **Clear "Show pictures":** Restores the default setting (do not show pictures automatically) for all the people who send you email, including those whose Show pictures setting you may have changed when reading messages from them.

Account settings

- **General settings**
 - **Priority Inbox:** This setting is only available if you have configured Gmail on the web to show Priority Inbox. If available, you can set Priority Inbox as the conversation list to open when you have new mail, rather than Inbox.
 - **Signature:** Create a text signature to add to outgoing messages.

- **Confirm actions:** Have your device prompt you to confirm Archive, Delete, and Send actions.
- **Reply all:** Enable or disable Reply All as the default action when responding to messages.
- **Auto-advance:** Choose a screen to show after you delete or archive a conversation.
- **Message text size:** Set the size of text in message displays.
- **Batch operations:** Allow changes to labels on more than one conversation.
- **Sync inboxes and labels:** Choose which labels are synchronized.
- **Notification settings:**
 - **Email notifications:** When enabled, notifications for new email appear in the Status Bar.
 - **Labels to notify:** Set notification preferences for synced labels. Touch **Inbox** or **Priority Inbox** to set your preferences.

Add account

- Touch **Google** or **Samsung account** to add a new account.

Email

Use Email to view and manage all your email accounts in one application.

Setting Up Email Accounts

1. From a Home screen, touch **Applications** 
→ **Email** .
2. At the Set up email account screen, enter an **Email address** and **Password** and touch **Next**.
3. Enter an account name for the email account just added, which is displayed on the inbox for the email account.
4. Enter your name, which is displayed on outgoing messages.
5. Touch **Done**.

The device communicates with the appropriate server to set up your account and synchronize your email. When complete, your email appears in the Inbox for the account.

6. Enter account credentials, then complete set-up by following the prompts to configure account options. Available options vary, depending on the provider.

If the account includes synchronization of contacts and calendars, you can choose whether to synchronize these features with your device.

Adding Additional Email Accounts

To add additional email accounts:

1. From a Home screen, touch **Applications** 
→ **Email** .

The list of email accounts displays.

Note: If you only have one email account set up, touch **Menu Key**  → **Add account** to display the list of email accounts.

2. Touch the **Menu Key**  → **Add account**.
3. Enter the **Email address**, **Password**, and so on.

Managing Emails

You can view emails you receive for all accounts in the Combined inbox screen or you can view email accounts individually.

1. From a Home screen, touch **Applications** 
→ **Email** .

Note: If you only have one email account set up, touch **Menu Key**  → **Add account** to display the list of email accounts.

2. Touch one of the following:
 - **Combined inbox:** View all emails in a combined inbox.
 - **<account name>:** Only view emails for one email account.
3. While viewing the Combined inbox, touch the **Menu Key**  for these options:
 - **Compose:** Create and send new email.
 - **Accounts:** Displays all email accounts. Touch an account or Combined inbox.
4. While viewing emails for one email account, touch the **Menu Key**  for these options:
 - **Compose:** Create and send new email. For more information, refer to “*Composing and Sending Email*” on page 51.
 - **Refresh:** Update your device from the email server.
 - **Search:** Enter keywords to search email.

- **Accounts:** Displays all email accounts. Touch an account or Combined inbox.
- **List by:** View email for this account by Date, Sender, or Read/Unread.
- **More:**
 - **Account settings:** Configure settings. For more information, refer to “*Configuring Email Account Settings*” on page 52.
 - **Text size:** Choose the text size for email in this account. Options are: Small, Medium, and Large.
 - **View mode:** Set the view mode to Standard view or Conversation view.

Composing and Sending Email

1. From a Home screen, touch **Applications** 
→ **Email** .
2. Touch an account, if you have set up more than one account.
3. Touch the **Menu Key**  → **Compose**.
4. Touch the **To** field to enter recipients. As you enter names or email addresses, matching contacts display. Touch a contact to add it to the field.
– or –

Touch **Recent**, **Contacts**, or **Group** and select contacts, then touch **Add** or **Submit** when all contacts have been selected.

5. Touch **Cc/Bcc** to enter recipients in the **Cc** or **Bcc** fields.
6. Touch the **Subject** field to enter a subject.
7. Touch the text field to enter the email text.
8. Touch **Attach** to add an attachment. Choices are:
 - **File**: Select a file from My files.
 - **Pictures**: Select a picture from Gallery.
 - **Videos**: Select a video from Gallery.
 - **Audio**: Select an audio file from My files.
 - **Take picture**: Open the camera and take a picture.
 - **Capture video**: Open the video recorder and shoot a video.
 - **Record audio**: Open the voice recorder and make a recording.
 - **Contacts**: Open your contact list so contacts can be selected to attach a contact namecard file.
 - **Calendar**: Open your calendar so calendar events, like birthdays and anniversaries, can be selected to attach an invite file.
 - **Memo**: Open the Memo app and attach a memo.

The selected or created file is attached. Touch  to remove the attachment.

9. While composing a message, touch the **Menu Key**  for these options:
 - **Save as draft**: Save the message in Drafts.
 - **Add text**: Lets you add text to your email from:
 - **Contacts**: Touch contact information to select it, then touch **Submit**.
 - **Calendar**: Touch one or more calendar events, then touch **Add**.
 - **Memo**: Touch one or more memos, then touch **Attach**.
10. Touch **Send** to send the message or **Discard** to cancel the email.

Configuring Email Account Settings

Account Settings lets you use settings to configure handling of email on your device.

Note: Available settings may depend on the email account and include setting how much email to synchronize, creating signatures for emails you send, and other handling options.

To configure email account settings at any time:

1. From a Home screen, touch **Applications** 
→ **Email** .
2. Touch an account, if you have set up more than one account.

3. Touch the **Menu Key** → **More** → **Account settings**.

The following options display depending on the type of account:

General settings

- **Account name:** Enter a name to identify this account.
- **Your name:** Enter your name, to appear on emails from this account.
- **Email check frequency:** Lets you configure how often the device queries the remote server for new email changes. Options are: **Never**, **Every 5 minutes**, **Every 10 minutes**, **Every 15 minutes**, **Every 30 minutes**, or **Every hour**.
- **Default account:** When enabled, email from your device is automatically sent from this account.

Notification settings

- **Email notifications:** When enabled, the New Email icon appears in the Status Bar when a new email arrives.
- **Select ringtone:** Choose a ringtone for email notifications for this account.
- **Vibrate:** When enabled, email notifications for this accounts are accompanied by vibration.

Server settings

- **Incoming settings:** Configure server settings.

- **Outgoing settings:** Configure outgoing settings.
- **Sync contacts:** When enabled, contacts from your account are synchronized with your device's Contacts.
- **Sync calendar:** When enabled, events from your account are synchronized with your device's Calendar.

Common Settings

- **Recent messages:** Set the number of recent messages. Options are: **25**, **50**, **75**, **100**, **200**, or **Total**.
- **Forward with files:** Enable or disable forwarding of file attachments.
- **Add signature:** Enable or disable adding a signature.
- **Signature:** Enter a signature to add to emails from this account.

Google Talk

Google Talk is a free Windows and web-based application for instant messaging offered by Google. Conversation logs are automatically saved to a Chats area in your Gmail account. This allows you to search a chat log and store them in your Gmail accounts.

Tip: Talk requires that you have a Google account. To set up your Google account on your device use **Accounts and sync** settings. For more information, refer to “Accounts and Sync” on page 115.

1. From the Home screen, touch **Talk** .
– or –
From a Home screen, touch **Applications**  → **Talk** .
2. Touch **Next** to set up a Google account or to Sign in.
3. Touch **Create** to create a new Google account.
– or –
Touch **Sign in**, if you have an existing Google account.

Note: If you have already set up your Google account, you are automatically logged in.

4. After entering your user name and password, touch **Done**.
5. Touch **Sign in**.
Once sign in is complete, the Talk screen displays.

6. Touch the **Menu Key**  to display the following options:
 - **All friends / Most popular:** List all friends or the most popular friends.
 - **Add friend:** Use the keypad to enter an invitation to a friend, then touch **Send invitation**.
 - **Search:** Enter a search term and search Google Talk.
 - **Sign out:** Close Google Talk and display the Home screen.
 - **Settings:** Offers various settings for Google talk.
 - **More:** Displays the following options:
 - **Close all chats:** Terminates any chats that you have open.
 - **Invites:** Lists any pending invitations that you have sent.
 - **Blocked:** Lists any friends that you have blocked.
7. Touch and hold a Friend entry to display the following options: **Start chat**, **Friend info**, **Block friend**, **Remove friend**, **View contact**, **Auto show friend / Always show friend**, and **Hide friend**.

Note: If you touch the **Hide friend** option, touch **Menu Key**  → **Add friend** → **Send invitation** to make the Friend visible again.

8. Touch a Friend's entry to display the Chat entries for that Friend.

Section 6: Web and Social Networking

Internet

Your device is equipped with a full HTML Browser that allows you to access the internet.

- ▶ From a Home screen, touch **Internet** .

Tip: Internet appears by default as a Primary shortcut on the Home screen.


Navigating the Web

Command Keys

- Touch the **Back Key**  to return to the previous page.
- Touch  to display Bookmarks, Most visited, and History.
- Touch the **Menu Key**  → **Forward** to go forward to a recent page.

Touching and dragging

- Touch and drag your finger on the screen to navigate pages and to reposition pages within the screen.

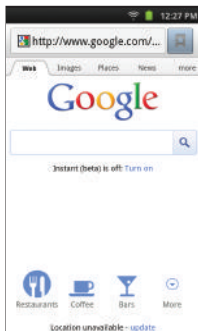

Entering text in a field

- While browsing, touch a text field to display the virtual QWERTY keyboard to enter text.

Zoom

- Tap the screen twice to zoom in or out.
- Use two fingers, such as your index finger and thumb, to zoom out by making an inward pinch motion on the screen. To zoom in, make an outward motion by sweeping your fingers out.



Tip: For convenient browsing, you can rotate the device to landscape mode.

Selecting items on a page

While browsing, use gestures and menus to navigate:

- Touch an item to select it.
- Touch a hyperlink to follow the link.
- Touch and hold on a hyperlink for these options:
 - **Open:** Open the linked page.
 - **Open in new window:** Open a new window to display the linked page.
 - **Bookmark link:** Create a bookmark to the page (without loading it).
 - **Save link:** Save the linked page to Download history.
 - **Share link:** Send the link by way of Bluetooth, Email, or Gmail.
 - **Copy link URL:** Save the link's URL to the clipboard.

Using Internet Windows

You can have multiple windows open at one time and easily switch between windows.

1. From a Home screen, touch **Internet** .
2. Touch the **Menu Key** .
3. To open a new window, touch **New window**.
– or –
Touch **Windows** → **New window**.
4. To switch to another open window, touch **Windows**, then touch another open window to display it.
5. To close an open window, touch **Windows**, then touch  in the upper right corner of the window you want to close.

Entering a URL

Access a web site quickly by entering the URL.

1. From a Home screen, touch **Internet** .
2. Touch the **URL** field at the top of the screen, then enter the URL using the virtual QWERTY keyboard.
As you enter characters, potential matches display.

3. Touch a match to complete the URL.
– or –

Continue entering characters and touch  to load the page.

Copying Fields or Text

Copy information from a web page to the clipboard for pasting, searching, or sharing.

Selecting Text

1. From a Home screen, touch **Internet** .
2. Browse to a web page.
3. On the web page, touch and hold on the text until the text viewer displays. When you see the text you want highlighted, stop touching the screen.
The text is highlighted.
4. Touch and drag the left  or right  text selector to select more or less text.

5. To copy the highlighted text, touch .

To search for the highlighted text, touch , then touch **Google**, **Google translate**, **Wikipedia**, or **Dictionary**.

To share the highlighted text, touch , then touch **Share as text** or **Share as image**. Then touch **Bluetooth**, **Email**, **Gmail**, or **Picasa**.

Copying a Hyperlink or URL

1. From a Home screen, touch **Internet**  and browse to a web page.
2. Touch and hold on the link or URL
3. Touch and hold on the link or URL, then touch **Copy link URL** on the pop-up menu.

Pasting Text, Hyperlinks, or URLs

To paste copied text, hyperlinks, or URLs:

1. Navigate to the desired field or to another application.
2. Touch and hold in a text field.
3. Touch **Paste** on the pop-up menu.

Using Bookmarks

While browsing, bookmark a site to quickly access it later.

Creating a Bookmark

1. From a Home screen, touch **Internet**  and browse to a web page.
2. Touch  → **Bookmarks**.
3. Touch **Add**.

The **Add bookmark** prompt displays.

4. Confirm the Name and URL for the bookmark, then touch **OK** to save the bookmark.

Accessing Bookmarks, Most Visited, and History

Launch a bookmarked page or most visited page, or reload recent pages.

1. From a Home screen, touch **Internet** .
2. Touch .
3. On the **Bookmarks** tab, use these options:
 - Touch a bookmark to load the page.
 - Touch and hold on a bookmark for these options:
 - **Open**: Launch the bookmarked page.
 - **Open in new window**: Open the linked page in a new window.

- **Edit bookmark:** Change the bookmark name or URL.
 - **Add shortcut to Home:** Create a bookmark on the Home screen.
 - **Share link:** Use Bluetooth, Email, or Gmail to send the link.
 - **Copy link URL:** Save the link's URL to the clipboard.
 - **Delete bookmark:** Remove the bookmark.
 - **Set as homepage:** Assign the bookmarked link as the home page.
4. On the **Most visited** tab, use these options:
- Touch a link to reload it.
 - Touch the star next to a link to bookmark or unbookmark it.
 - Touch and hold on a link for these options:
 - **Open:** Launch the web page.
 - **Open in new window:** Launch the web page in a new window.
 - **Add bookmark/Remove from Bookmarks:** Bookmark the page or remove the bookmark for this page.
 - **Share link:** Use Bluetooth, Email, or Gmail to send the link.
 - **Copy link URL:** Save the link's URL to the clipboard.
 - **Remove from history:** Remove the record of this page.
 - **Set as homepage:** Assign the bookmarked link as the home page.
5. On the **History** tab, use these options:
- Touch a link to load it.
 - Touch **Today**, **Yesterday**, **Last 7 days**, **Last month**, or **Older** for lists of recent pages.
 - Touch the star next to a link to bookmark or unbookmark it.
 - To clear the history, touch the **Menu Key**  → **Clear history**.

- Touch and hold on a link for these options:
 - **Open:** Launch the web page.
 - **Open in new window:** Launch the web page in a new window.
 - **Add bookmark/Remove from Bookmarks:** Bookmark the page or remove the bookmark for this page.
 - **Share link:** Use Bluetooth, Email, or Gmail to send the link.
 - **Copy link URL:** Save the link's URL to the clipboard.
 - **Remove from history:** Remove the record of this page.
 - **Set as homepage:** Assign the bookmarked link as the home page.

Internet Menu

While viewing a web page, touch the **Menu Key**  for the following options:

- **New window:** Open a window.
- **Windows:** View the windows you have open.
- **Refresh:** Redisplay the current web page.
- **Forward:** Go forward to a recent page.
- **Add bookmark:** Create a bookmark for the current page.
- **More:**
 - **Add shortcut to Home:** Create a bookmark on the Home screen.
 - **Add RSS feeds:** Adds RSS (Really Simple Syndication) feeds. RSS is a family of web feed formats used to publish frequently updated works, such as blog entries, news headlines, audio, and video.
 - **Find on page:** Search for content on the current page.
 - **Page info:** View information about the current page, including the URL.
 - **Share page:** Use Bluetooth, Email, or Gmail to send the page's URL.

- **Downloads:** View and manage recent downloads.
- **Settings:** Customize the Internet settings (see “*Internet Settings*” on page 59).

Internet Settings

1. From a Home screen, touch **Internet** .
2. Touch the **Menu Key**  → **More** → **Settings** for the following options:

Page content settings

- **Default zoom:** Choose a default zoom level for web pages.
- **Open pages in overview:** When enabled, displays an overview of newly-opened pages.
- **Text encoding:** Choose a default character set for web pages.
- **Block pop-up windows:** When enabled, blocks pop-up windows.
- **Load images:** When enabled, images are automatically loaded when you visit a page. When disabled, images are indicated by a link, which you can touch to download the picture.
- **Auto-fit pages:** When enabled, the Browser automatically sizes web pages to fit your device's display.
- **Landscape view only:** When enabled, all pages display in the wider landscape orientation (rotate your device to view pages in landscape mode).
- **Enable JavaScript:** When enabled, the Browser automatically runs JavaScript scripts on pages you visit.

- **Enable plug-ins:** When enabled, the Browser automatically loads and runs plug-ins on pages you visit.
- **Open in background:** When enabled, new windows open behind the current window.
- **Set home page:** View and set the default first page that displays when you launch the Browser.
- **Default storage:** The default location for downloads.

Privacy settings

- **Clear cache:** Delete content and databases stored on the device.
- **Clear history:** Delete the list of previously-visited pages.
- **Accept cookies:** When enabled, allows Browser to save and read cookie information used by web pages.
- **Clear all cookie data:** Delete cookie information saved to the device.
- **Remember form data:** When enabled, stores information you enter into forms to make future forms easier.
- **Clear form data:** Deletes saved form information.
- **Enable location:** When enabled, sites you visit can request access to your location.
- **Clear location access:** Clear location access for all web sites.

Security settings

- **Remember passwords:** When enabled, saves usernames and passwords for sites you visit, to make future visits easier.
- **Clear passwords:** Clear all saved usernames and passwords.
- **Show security warnings:** When enabled, the Browser warns you if there is a problem with a site's security.

Advanced settings

- **Select search engine:** Select the search engine you want to use. Choices are: Google, Yahoo!, and Bing.
- **Website settings:** View and manage settings for individual web sites.
- **Reset to default:** Clear all browser data and reset all settings to the factory defaults.

Maps

Use Google Maps to find your current location, get directions, and other location-based information.

Tip: The Google Maps shortcut appears on the main Home screen by default. For information about adding shortcuts to a Home screen, see *"Adding Shortcuts from a Home screen"* on page 22.

Note: You must enable location services to use Maps. Some features require Standalone or Google location services. For more information, refer to *"Location and Security"* on page 111.

► From the Home screen, touch **Maps** .

– or –

From a Home screen, touch **Applications** .

→ **Maps** .

Navigating the Map

Zooming

- Double-tap on the screen to zoom in.
- Touch Zoom in or Zoom out .

Scrolling

- Touch and drag on the screen to reposition the map in the display.

Touch

- Touch an icon on the map to display information about the location.

Maps Menu

1. From a Home screen, touch **Maps** .
2. While viewing a map, touch the **Menu Key**  for these options:
 - **Search:** Find a location.
 - **Directions:** Get driving, public transport, or walking directions.
 - **My Places:** Display starred locations.
 - **Clear Map:** Remove search results from the map.
 - **Join Latitude / Latitude:** Join or display Latitude, to share your location with friends you choose and Google.
 - **More:**
 - **Labs:** Access experimental features.
 - **Sign In:** Enter your Google Username and Password, then touch **Sign In**.
 - **Cache Settings:** Set your **Automatic caching** preference and **Clear map tile cache**, if necessary.
 - **Help:** Learn about Google maps.
 - **Terms, Privacy & Notices:** View information about Google Maps, including the Terms and Conditions, Privacy Policy, Legal Notices, and Web History.
 - **About:** View information about Maps.

Other Map Options

Touch the indicated icon to use these additional Map options:



Search Maps: Use the keypad to enter your request to Search the map for a city, location, and so on. Suggestions are displayed as you type. Touch  to speak a city, location, and so on, to display.



Places: Launch the Places app. For more information, refer to “Places” on page 64.



Layers: Enable or disable a map layer to display. Choose from Traffic, Satellite, Terrain, Transit Lines, Latitude, My Maps, Bicycling, or Wikipedia. Touch **Clear Map** to remove previous layers.



Compass: Set the map to always display north at the top of the screen or to automatically rotate like a compass, keeping north on the map facing north, and so on. Your device may have to be calibrated the first time you use this feature. Follow the on-screen instructions.

Latitude

With Google Latitude, you can see the location of all of your friends on a map or on a list. You can also share or hide your location.

You must first set up your tablet to use wireless networks to help pinpoint your location. Also, Latitude works best when Wi-Fi is enabled.

To enable Wi-Fi:

1. From a Home screen, touch the **Menu Key**  → **Settings**.
2. Touch **Location and security** → **Use wireless networks**.
A green check mark  indicates the feature is enabled.
3. Touch **Wireless and network** → **Wi-Fi settings** → **Wi-Fi** to turn Wi-Fi on. For more information, refer to “Wi-Fi” on page 81.
4. Log on to your Google account.

Note: To create a Google account or set up your Google account on your device use **Accounts and sync** settings. For more information, refer to “Accounts and Sync” on page 115.

5. Touch **Home**  → **Applications**  → **Latitude** .

Your location is displayed on the map, accurate to 30 meters.

Sharing Your Location with Friends

1. From the Latitude map screen, touch the **Menu Key**  → **Latitude** to display your Latitude list of friends. At first, only your name is displayed.
2. Touch the **Menu Key**  → **Add friends**.
3. Touch **Select from Contacts** or **Add via email address**.
4. Touch a contact.
– or –
Enter an email address and touch **Add friends**.
5. At the **Send sharing requests** prompt, touch **Yes**.

Your friend will receive an email or text message with your location marked on a map. They will also receive instructions on how to view your location from the web or use Latitude on their device, if it is available. Once they acknowledge your request, their location will display on your device. They can share their location from their computer, phone, or device.

For more information, go to <http://www.google.com/latitude>.

Latitude Menu

1. From a Home screen, touch **Applications** 
→ **Latitude** .
2. Touch the **Menu Key**  → **Latitude** to display your Latitude list of friends.
3. Touch the **Menu Key**  for these options:
 - **Refresh friends:** Update your Latitude list of friends.
 - **Check in:** Automatically check in at specific places you designate, and you will be checked in when you are there.
 - **See map:** Display the map screen.
 - **Add friends:** Share your location with friends. For more information, refer to “*Sharing Your Location with Friends*” on page 62.
 - **Settings:** Used to set various Latitude options.

Location reporting

- **Detect your location:** Enable or disable whether your location is updated automatically.
- **Set your location:** Set your location manually.
- **Do not update your location:** Your friends cannot see your automatic location.

Location History settings

- **Enable location history:** This history is only seen by you.

Check-in settings

- **Enable automatic check-ins:** Checks you in to places that you have designated.
- **Enable check-in notifications:** Enables notifications that suggest places to check in.
- **Manage your places:** View and modify your automatic check-ins and muted places.

Account settings

- **Sign out of Latitude:** Sign out of Latitude and launch the Maps application.

For the remaining options, see “*Maps Menu*” on page 61.

Navigation

Use Google Navigation to find a destination and to get walking or driving directions.

Note: You must first create a Wi-Fi connection to use Navigation.

1. From a Home screen, touch **Applications** 
→ **Navigation** .

The **Set Destination** screen displays.

2. Touch either **Driving** or **Walking** at the top of the screen to describe the type of directions you want.

3. Touch **Map** at the top of the screen to see a map (Driving) or a satellite image (Walking) of your area.
4. If Driving, touch **Route options**  to set whether directions should **Avoid highways** and **Avoid tolls**.
5. To find a destination, touch an option:
 - **Speak Destination**: Say the name or address of your destination.
 - **Type Destination**: Enter the destination.
 - **Contacts**: Choose a destination from a contact record.
 - **Starred Places**: Choose destinations you have marked as favorites.
 - **Recent Destinations**: Choose from recent destinations. This option is not available until a destination has been requested.
6. While navigating, touch the **Menu Key**  for options:
 - **Search**: Find a location.
 - **Route Info**: View information about the current route.
 - **Layers**: Choose map layers to display.
 - **Mute/Unmute**: Mute to silence voice-guided prompts.
 - **Exit Navigation**: Close Navigation and discard route information.

- **More**:
 - **Directions List**: View directions in a step-by-step list.
 - **Set Destination**: Choose or enter a destination.
 - **Help**: Learn about Google maps.
 - **Terms, Privacy & Notices**: View information about Google Maps, including the Terms and Conditions, the Privacy Policy, and Legal Notices.

Places

Google Places uses your location to help you find nearby destinations, such as restaurants, bars, hotels, attractions, ATMs, and gas stations, or you can enter a location.

1. From a Home screen, touch **Applications** 
→ **Places** .
2. Touch a category or touch **Add**  to enter criteria.
3. Touch a destination to view details and for map and navigation options.

Google Search

Search the internet, and your device, using the Google search engine.

Tip: The Google Search widget appears on the main Home screen by default. For information about displaying widgets on the Home screen, see *"Adding Widgets to the Home Screen"* on page 21.

1. From the Home screen, touch the **Google Search** widget



— or —

From a Home screen, touch **Applications** 

→ **Google Search** .

2. Use the keypad to enter search criteria to display matching searches.

Suggestions display below the text entry area.

3. Touch a suggestion to search for that term.

— or —

Touch  to start the search.

A browser window displays the search results.

4. Touch **Voice Search** , on the **Google Search** widget, to search using spoken commands.

Voice Search

Voice Search offers voice-activated Google searches. Voice Search uses your location to improve search results and offer other services.

Tip: Voice Search is also available on the Google Search widget, which appears on a Home screen by default.

1. From a Home screen, touch **Applications** 
→ **Voice Search** .
2. Touch **Agree** to allow location-based searches or **Disagree** to disallow.
3. Touch **Speak now**, then speak your search criteria slowly and clearly. Google searches for the information and displays results.

YouTube

View and upload YouTube videos right from your device.

Tip: The YouTube widget appears on the main Home screen by default. For information about displaying widgets on the Home screen, see “*Adding Widgets to the Home Screen*” on page 21.

1. From the Home screen, touch **YouTube** .

— or —

From a Home screen, touch **Applications** .

→ **YouTube** .

2. The first time you open YouTube, read the Terms of Service, then touch **Accept** to continue.
3. Browse and select videos for viewing.

YouTube Menu

While browsing or viewing a YouTube page, touch the **Menu Key**  for the following options:

- **Home:** Display the main YouTube screen.
- **Browse:** View videos by category such as Comedy, Education, or Music.
- **Search:** Enter criteria to find videos.
- **My Channel:** Add an account and configure account settings.
- **Upload:** Transfer a video from your device to YouTube.
- **Settings:** Configure display and search settings and view information about the application.

YouTube Settings

1. From the Home screen, touch **YouTube** .
2. Touch the **Menu Key**  → **Settings** for the following options:

General settings

- **High quality on mobile:** Enable or disable high quality video mode.
- **Caption font size:** Set the caption font size to **Small**, **Medium**, **Large**, or **Extra Large**.

Search settings

- **Clear search history:** Clear previous YouTube searches from displaying in the Search box.
- **SafeSearch filtering:** Set the video search filter to **Don't filter**, **Moderate**, or **Strict**.

About


- **Help:** Displays the YouTube Help web site.
- **Feedback:** Displays the YouTube feedback form. You must be at least 18 years old to fill out the form.
- **Google Mobile Terms of Service / YouTube Terms of Service / Google Mobile Privacy Policy / YouTube Privacy Policy:** Tap one of the items to read the selected terms of service or privacy policy information.
- **Application version:** Displays the YouTube version number.

Section 7: Music

Music Player

The Music Player plays songs from an installed memory card.

1. From a Home screen, touch **Music** .
2. Music Player scans your memory card and displays songs on the **All**, **Playlists**, **Albums**, or **Artists** tabs.
3. Touch a song or playlist to begin playback.

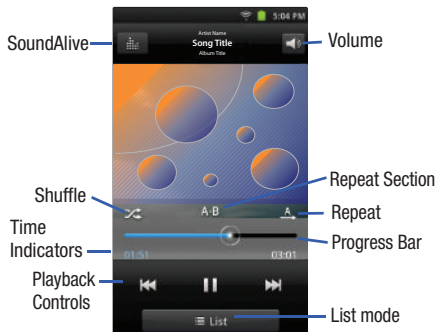

4. During playback, use the sound and playlist controls:

- **SoundAlive:** Touch to set SoundAlive options. For more information, refer to “*Music Player Settings*” on page 70.
- **Volume:** Touch to activate on-screen volume control, then touch and drag on the scale to set volume. You can also press the Volume Key on the side of the device to adjust playback volume.

Note: Tap the screen to display the Shuffle, Repeat Section, and Repeat icons, the Progress Bar, and time indicators.

- **Shuffle:** When enabled, songs play in random order. When disabled, songs play in the order they appear in List view.
- **Repeat Section:** Touch to select a section you want to repeat. Touch once to set the start of the section (A). Touch again to set the end of the section (B) and start the repeating section. Touch **Clear A-B** to clear and stop the repeating section.
- **Repeat:** Touch to repeat the current song, repeat all songs, or disable repeat mode.
- **Progress Bar:** Touch and drag the end of the progress bar to scan forward or backward through the current song.
- **Time indicators:** The time indicators show, in minutes and seconds, how much of the song has played (left) and the length of the song (right).

- **Playback controls:**

- Touch  to advance to the next song. Touch and hold  to scan forward through the current song.
- Touch  to go back to the previous song. Touch and hold  to scan backward through the current song.
- Touch  to pause playback. Touch  to resume playback.

- **List mode:** Touch to switch to the All tab, which lists all songs.

Music Player Options

To access additional options while playing a song, follow these steps:

1. From a Home screen, touch **Music** , then touch a song or playlist to begin playback.
2. Touch the **Menu Key** .

The follow options are available:

- **Add to quick list / Go to quick list:** Adds the current music file to the Quick list or display the Quick list.
- **Via Bluetooth:** Scan for devices and pair with a Bluetooth headset.
- **Share music via:** Share your music by using AllShare, Bluetooth, Email, or Gmail.
- **Set as alarm tone:** Create an alarm that uses the current song as the tone.

- **Add to playlist:** Add the current music file to a selected playlist.

- **More:** Access the following additional options:

- **Settings:** Change your music player settings. For more information, refer to “*Music Player Settings*” on page 70.
- **Details:** View media information such as artist name, song title, album title, track length, genre, recording date, and so on.

Creating a Playlist

1. From a Home screen, touch **Music** , then touch the **Playlists** tab.
2. Touch the **Menu Key**  → **Create**, then touch the name field to enter a name for the playlist.
3. Touch **Save** to save the new playlist.

Adding Songs to Playlists

1. From a Home screen, touch **Music** , then touch the **Playlists** tab.
2. Touch a playlist
3. Touch **Add music**.
– or –
Touch the **Menu Key**  → **Add**.

4. Touch songs to select them or touch **Select all**.

A check mark indicates selected songs.

5. Touch **Add** to add the selected songs to the playlist.

Adding a song to a playlist during playback

1. From a Home screen, touch **Music** .
2. Touch a song to play it.
3. Touch the **Menu Key**  → **Add to playlist**.
4. Choose one of these options:
 - Touch a playlist to add the selected song to the playlist.
 - Touch **Create playlist** to create a new playlist for the song.

Music Player Settings

1. From a Home screen, touch **Music** .
2. Touch the **Menu Key**  → **Settings** for these options:
 - **SoundAlive**: Touch to select a sound effect. Touch **User1** or **User2** to define your own sound settings.
 - **Music menu**: Choose the types of menus to display as tabs in Music Player.
 - **Music play screen**: Select a visualization to be displayed during playback.

FM Radio

The built-in FM radio in your device provides free music from your local FM radio stations. You can manually or automatically scan for stations and create a Station List of your favorite stations.

To use the radio:


1. From the Home screen, touch **FM radio** .

— or —

From a Home screen, touch **Applications** 
→ **FM radio** .

The FM radio screen displays.

2. To turn the radio on, touch the **On**  button.
An **Earphone not connected** message displays, if you have not plugged in your headphones, which serve as an antenna for your FM radio.
3. Turn the Station Dial clockwise or counter-clockwise to find FM stations as indicated by the Current Radio Station indicator at the top of the display.
4. Touch the **Mute / Unmute** button to turn on or turn off the sound.

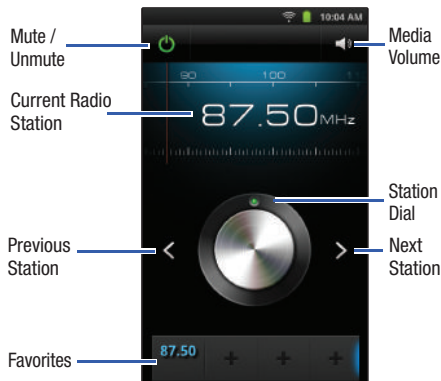

5. Touch **Media Volume** to adjust the volume.
6. Touch the **Previous Station**  button or the **Next Station**  button to step through the available stations.
7. Touch a **Favorites**  button to set the current station as a favorite. Once a Favorites button is set, touch the button to go to that station.

8. Touch the **Menu Key**  to display the following options:

- **Via speaker / Via earphones:** Toggle between the headset and the device speakers.
- **Scan:** Removes the existing Station List, if one exists, scans for FM stations, and adds them to the Station List. Touch **All channels** to remove your Favorites or **Retaining favorites** to keep your favorites.
- **All channels:** Display the list of stations found after a scan and you favorites. This list may be empty, if no scan has been performed and no favorites have been set. Touch **Scan Channels** to scan for FM stations and add them to the list.

Touch the **Menu Key**  for the following options:

- **Remove:** Touch **Select all** or touch individual stations to remove them from the Station List. Touch **Remove** once you have made your selection.
- **Rename:** Touch the station you want to rename, enter the new name, and touch **Save**.
- **Settings:** Displays the following options:
 - **Region:** Touch the region that best describes where you are using FM radio. Choices are: **Worldwide** and **USA**.
 - **Background playing:** Enable the FM radio to play in the background after closing the application. Remove the check mark to disable this feature.
 - **FM auto off:** Enable the Fm radio to play and then automatically turn off after 30 minutes, 1 hour, or 2 hours. Touch **Off** to disable this feature.

Section 8: Photos and Videos

Camera


Use your device's built-in camera to take photos and record video.

► From the Home screen, touch **Camera** .

— or —

From a Home screen, touch **Applications** .

→ **Camera** .

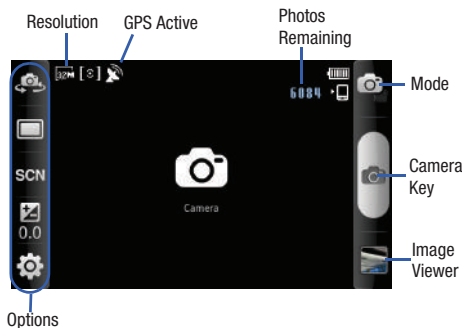

Important!: Do not take photos of people without their permission.
Do not take photos in places where cameras are not allowed.
Do not take photos in places where you may interfere with another person's privacy.

Taking Photos

1. From the Home screen, touch **Applications** 
→ **Camera** .
2. Using the display as a viewfinder, compose your photo by aiming the lens at the subject. To configure settings, see “*Camera Options*” on page 73.
3. To take the photo, touch the **Camera Key**.
4. After taking a photo, touch **Image Viewer** to view the photo.
While viewing the photo, use these options:
 - Pinch the screen or double-tap on the screen to zoom all the way in or out. For more information, refer to “*Pinch*” on page 18.
 - Touch the screen to display the following options:
 - **Share:** Send the photo by using AllShare, Bluetooth, Email, Gmail, or Picasa.

- **Set as:** Assign the photo as **Contact icon**, **Home screen wallpaper**, or **Lock screen wallpaper**.
- **Delete:** To erase the photo, touch **OK**.
- Touch the **Back Key**  to return to the Camera to take more photos.

Camera Options

Camera options are represented by icons on the left side of the screen. While in Camera mode, touch the following icons to configure the camera:



Self shot: Touch to switch to the front-facing camera lens and take a photo of yourself.



Shooting mode: Choose an automatic shooting mode, from:

- **Single shot:** Take a single photo.
- **Smile shot:** Touch the Camera button to automatically focus on the subject's face and take the photo.
- **Continuous:** Take consecutive photos by pressing and holding the Camera key.

- **Panorama:** Touch the Camera button to take a photo, then use the on-screen guideline to move the viewfinder and take the next 7 shots automatically.
- **Add me:** Combine people with existing background. Touch the screen to pick which side of the screen to focus on. Touch the camera key. Focus on a background and touch the camera key a second time.
- **Action shot:** detects action and creates a panorama of the moving object.



Scene mode: Choose an automatic scene mode from None, Portrait, Landscape, Night, Sports, Party/Indoor, Beach/Snow, Sunset, Dawn, Fall color, Firework, Text, Candlelight, or Backlight.



Exposure value: Set the brightness of the photo.



Settings: Touch  for the following options:

- **Outdoor visibility:** Allows you to take better pictures when outdoors.
- **Macro:** Set Macro mode to take close-up pictures. Face detection causes the camera to automatically recognize if there is a face in the shot. It then optimizes the focus and exposure the face.
- **Timer:** Set a 2, 5, or 10 second timer.
- **Resolution:** Set a size for the image. Options are: 3.2M (2048x1536), 2M (1600x1200), 1.3M (1280x960), or 0.3M (640x480).
- **White balance:** Set the light source. Options are: Auto, Daylight, Cloudy, Incandescent, or Fluorescent.
- **Effects:** Apply an effect to photos. Options are: Normal, Negative, Black and white, or Sepia.
- **ISO:** Set the imaging sensitivity. Options are: Auto, ISO100, ISO200, or ISO400.
- **Metering:** Set how the camera measures or meters the light source: Center-weighted, Spot, or Matrix.



- **Image quality:** Choose a quality setting for photos. Options are: Superfine, Fine, or Normal.
- **Adjust:** Used to adjust Contrast, Saturation, and Sharpness.

Settings: Touch  for the following options:

- **Guidelines:** Used to enable or disable the guidelines.
- **Review:** Activate the instant review feature, which displays images immediately after capture (On or Off, or 2 seconds for Camera mode).
- **GPS:** Enable or disable tagging of photos with your GPS location.  displays on the screen when this option is active.


Caution! Be aware that your location may be present on a photo when posting your photos on the internet.

- **Shutter sound:** Enable or disable one of the camera's three shutter sounds.
- **Storage:** Set the storage location. Options are: Internal memory or SD card.
- **Reset:** Set all Camera settings back to the defaults.

Camcorder

Use your device's built-in Camcorder to record high-definition video in 720p resolution.

1. From the Home screen, touch **Camera** .
2. Touch the **Mode** icon to switch from the Camera  to the Camcorder .

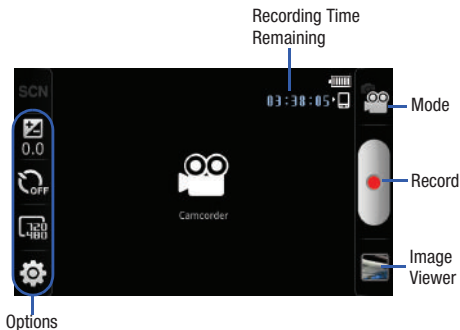

Important!: Do not take videos of people without their permission.
Do not take videos in places where cameras are not allowed.
Do not take videos in places where you may interfere with another person's privacy.

Capturing Video

1. From the Home screen, touch **Camera** .
2. Touch the **Mode** icon to switch from the Camera  to the Camcorder .
3. Using the display as a viewfinder, compose your shot by aiming the lens at the subject. To configure settings, see “Camcorder Options” on page 76.
4. To start recording, touch **Record** . During recording, the button changes to **Pause** . Touch **Pause** to temporarily stop recording. To resume recording, touch **Record**  again.

Tip: Use the **Volume key**  to zoom in or out while recording.

5. To stop recording, touch the **Stop**  button.
6. After recording, touch **Image Viewer** to review your videos. The first frame of each video is displayed.

7. Sweep across the screen to review all videos. While reviewing the videos:

- Double-tap on the screen to zoom all the way in or out.
- Touch the screen to display the following options:
 - **Share:** Send the video by using AllShare, Bluetooth, Email, Gmail, or YouTube.
 - **Play:** Play video being displayed.
 - **Delete:** Erase the video being displayed.
- Touch the **Back Key**  to return to the Camcorder.

Camcorder Options

Configure the camcorder.

Camcorder options are represented by icons on the left side of the screen. While in Camcorder mode, touch the following icons to configure the camcorder:



Scene: Not available for videos.



Exposure value: Set the brightness of the video.



Timer: Set a timer for how long to wait before recording a video. Options are: Off, 2 sec, 5 sec, and 10 sec.



Resolution: Set the video size to either: 720x480, 640x480, 320x240, or 176x144.



Settings: Touch  for the following options:

- **Outdoor visibility:** Allows you to take better videos when outdoors.
- **White balance:** Set the light source. Options are: Auto, Daylight, Cloudy, Incandescent, or Fluorescent.
- **Effects:** Apply an effect to videos. Options are: Normal, Negative, Black and white, or Sepia.
- **Video quality:** Choose a quality setting for videos. Options are: Superfine, Fine, or Normal.
- **Adjust:** Used to adjust Contrast, Saturation, and Sharpness.



Settings: Touch  for the following options:

- **Guidelines:** Used to enable or disable the guidelines.
- **Audio recording:** Enable to record sound along with video.
- **Review:** Enable or disable the instant review feature, which displays videos immediately after capture.
- **Storage:** Set the storage location. Options are: Internal memory or Memory card.
- **Reset:** Set all Camcorder settings back to the defaults.

Videos

Your device's 4-inch 800x480 Super Clear LCD touch screen provides playback of videos. Use Videos to view and manage videos stored on an installed memory card.

1. From a Home screen, touch **Videos** .
2. While viewing the Videos list, touch the **Menu Key**  for options:
 - **Remove:** Touch videos to select them or touch **Select all** to remove all videos.
 - **List by:** Display videos by Size, Name (default), Date, or Type.
3. Touch a video to play it. While playing a video, touch the screen to display or hide on-screen playback controls.
4. During playback, touch the **Menu Key**  for options:
 - **Share video:** Send the video by AllShare, Bluetooth, YouTube, Email, or Gmail.
 - **Details:** Provides details about the photo such as File name, Format, Resolution, File size, Date & Time, and Forwarding.
 - **Via Bluetooth:** Scans for a Bluetooth device on which to play the video.
 - **Play speed:** Use the slider to adjust the video play speed.
 - **Settings:** Set the video to repeat, brightness, colour tone, and outdoor visibility.
 - **Subtitles:** View subtitles for the video, if available.

While viewing a video, you can also adjust the screen view. Screen view allows you to select Original Size, Full-Screen, or Full-Screen in Ratio to view your video.

Note: The screen view icons are a three-way toggle. The icon that is displayed, is the mode that appears after the icon is touched.

- **Original Size** (): Play the video in its original size.
- **Full-Screen in Ratio View** (): Enlarge the video as much as possible without becoming distorted.
- **Full-Screen View** (): Use the entire screen, which may cause some minor distortion.
- **5.1 ch:** Touch  to activate 5.1 Virtual Surround Sound.
- **Volume:** Touch  and use the slider to adjust the video volume.
- **Pause / Resume:** Touch  to pause the video being played. Touch  to resume playing.
- **Previous / Rewind:** Touch  to jump to the previously played video or touch and hold to restart the video.
- **Next / Fast Forward:** Touch  to jump to the previously played video or touch and hold to fast forward to the end of the video.
- **Exit:** To return to the videos list, touch  in the top right corner of the screen.

Gallery

Your device's 4-inch 800x480 Super Clear LCD touch screen provides high-resolution display of photos and videos.

Use Gallery to view, capture, and manage photos and videos.

Gallery Options

When you open the Gallery, various photo and video folders are displayed. The folders can be on your device or on your external memory card.

To manage these folders:

1. From a Home screen, touch **Applications** 
→ **Gallery** .

2. Touch the **Menu Key** .

Select all and **Unselect all** appears at the top of the screen.

Check marks also display on each folder of pictures or videos.

3. Touch **Select all** or touch the folders you want to select (the check mark turns white  when a folder is selected), then touch one of these options:

- **Share:** Send each selected folder and its contents by Bluetooth, Picasa (photos), YouTube (videos), Email, or Gmail.
- **Delete:** Touch **Confirm deletions** to delete the selected folders.
- **More:**
 - **Details:** Displays details about the folders selected.

4. Touch a folder to display the folder's contents.

5. Touch the **Menu Key** .

Select all and **Unselect all** appears at the top of the screen. Check marks also display on each picture or video.

6. **Select all** or touch the pictures or videos you want to select (the check mark turns white  when an item is selected), then touch one of these options:

- **Share:** Send each selected item by AllShare, Bluetooth, Picasa (photos), YouTube (videos), Email, or Gmail.
- **Delete:** Touch **Confirm deletions** to delete the selected items.
- **More:**
 - **Details:** Displays details about the items selected.

Access the Camera from Gallery

To access the Camera from the Gallery:

1. From a Home screen, touch **Applications**  → **Gallery** .
2. Touch  at the top of the screen. For more information, refer to “Camera” on page 72.

Viewing Videos

1. From a Home screen, touch **Applications**  → **Gallery** .
2. Touch a category, then touch a video to play it.

Note: Videos are marked with a Play  button.

3. While viewing a video, touch the **Menu Key**  for these options:
 - **Share video:** Send the video by AllShare, Bluetooth, YouTube, Email, or Gmail.
 - **Details:** Displays details about the video such as File name, Format, Resolution, File size, Date & Time, and Forwarding.

- **Via Bluetooth:** Scans for a Bluetooth device on which to play the video.
- **Play speed:** Use the slider to adjust the video play speed.
- **Subtitles:** View subtitles for the video, if available.

For more information, refer to “Videos” on page 77.

Viewing Photos

1. From a Home screen, touch **Applications**  → **Gallery** .
2. Touch a category, then touch a photo to view it.
3. While viewing a photo, touch the screen for these options:
 - **Slideshow:** Touch to view a slideshow of photos.
 - **Menu:** Touch to display the following options:
 - **Share:** Share the selected photo by AllShare, Bluetooth, Picasa, Email, or Gmail.
 - **Delete:** Touch **Confirm deletions** to delete the selected folders.
 - **More:** Touch for more options:
 - **Details:** Display details about the photo.
 - **Show on map:** Show on a map where the picture was taken, if available.
 - **Set as:** Use the picture as Home screen wallpaper, Lock screen wallpaper, or as a Contact icon.

- **Crop:** Allows you to crop the image. Touch and drag the sides of the crop box to create the crop area, then touch **Save**. Touch **Discard** to stop without cropping the picture.
- **Rotate left:** Allows you to rotate the picture counterclockwise 90 degrees.
- **Rotate right:** Allows you to rotate the picture clockwise 90 degrees.

Setting a Photo as a Contact Icon

1. From a Home screen, touch **Applications**  → **Gallery** .
2. Touch a category, then touch a photo to select it.
3. Touch **Menu** → **More** → **Set as** → **Contact icon**.
4. Touch a contact entry, crop the picture, if necessary, and touch **Save** to save the selected photo as the contact's icon.

Setting a Photo as Wallpaper

1. From a Home screen, touch **Applications**  → **Gallery** .
2. Touch a category, then touch a photo to select it.
3. Touch **Menu** → **More** → **Set as**

4. Touch **Home screen wallpaper**.

— or —

Touch **Lock screen wallpaper**.

5. Touch and drag the edges of the crop box inward or outward to edit the photo, then touch **Save** to set the edited photo as the Home or Lock screen wallpaper.

Sharing Photos and Videos

Share photos and videos with your friends.

1. From a Home screen, touch **Applications**  → **Gallery** .
2. Touch a category to display thumbnails, then select items for sharing:
 - To select an entire category, touch the **Menu Key**  while viewing categories, then touch **Select all** → **Share**.
 - To select multiple photos or videos from a category, touch the **Menu Key**  while viewing the thumbnails. Touch thumbnails to mark them for sharing, then touch **Share**.
3. Touch **Bluetooth**, **Picasa** (photos only), **YouTube** (videos only), **Email**, or **Gmail**, then follow the prompts.

Section 9: Connections

Your device includes features to connect to the internet and to other devices by using Wi-Fi, Bluetooth, or a USB cable. Your device also supports removable microSD™ or microSDHC™ memory cards for storing music, photos, videos, and files.

Wi-Fi

Wi-Fi is a wireless networking technology that provides access to local area networks. Use your device's Wi-Fi feature to:

- Access the internet for browsing or to send and receive email.
- Access your corporate network.
- Use hotspots provided by hotels or airports while traveling.

Wi-Fi communication requires access to an existing Wireless Access Point (WAP). WAPs can be Open (unsecured, as with most hotspots) or Secured (requiring you to provide login credentials). Your device supports the 802.11 b/g/n/a Wi-Fi protocol.

Configuring Wi-Fi Settings

For more information about configuring your device's Wi-Fi settings, see *"Wi-Fi Settings"* on page 104.

Finding Wi-Fi Networks

You can have your device automatically notify you of available networks. For more information, refer to *"Network Notification"* on page 105.

Turning Wi-Fi On or Off

Turn your device's Wi-Fi service on or off. When you turn Wi-Fi service on, your device automatically searches for available, in-range WAPs (Wireless Access Points).

Turning Wi-Fi On

1. From any screen, sweep your finger downward from the top to display the Notification Panel.
2. Touch **Wi-Fi** to turn Wi-Fi On.

Turning Wi-Fi Off

1. From any screen, sweep your finger downward from the top to display the Notification Panel.
2. Touch **Wi-Fi** to turn Wi-Fi Off.

Scanning and Connecting to a Wi-Fi Network

When you turn on Wi-Fi, your device searches for available Wi-Fi connections, then displays them on screen.

1. From any screen, sweep your finger downward from the top to display the Notification Panel.
2. Touch **Wi-Fi** to turn Wi-Fi On. Your device automatically scans for available Wireless Access Points.
3. When the scan is complete, touch a Wi-Fi network to connect. If the Wi-Fi network is open, your device automatically connects. If the Wi-Fi network is secured, enter the password at the prompt to connect.

Adding a Wi-Fi Network Manually

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Wireless and network** → **Wi-Fi settings**.
2. Touch **Wi-Fi** to turn Wi-Fi On.
3. Touch **Add Wi-Fi network**, then enter information about the network:
 - **Network SSID:** Enter the name of the Wi-Fi Wireless Access Point.
 - **Security:** Select the type of security used by the WAP.
 - **Password:** If the WAP is secured, enter the password or hex key.

Note: Depending on the Security protocol used by the WAP, additional network information may be required.

4. Touch **Save** to save the settings.

Bluetooth

Bluetooth is a short-range wireless communications technology for exchanging information over a distance of about 30 feet.

You do not need to line up the devices to send information with Bluetooth. If the devices are in range, you can exchange information between them, even if they are in different rooms.

Configuring Bluetooth Settings

Configure your device's Bluetooth settings. For more information, refer to “*Bluetooth Settings*” on page 106.

Turning Bluetooth On or Off

Turning Bluetooth On

1. From any screen, sweep your finger downward from the top to display the Notification Panel.
2. Touch **Bluetooth** to turn Bluetooth on.

Note: When Bluetooth is on, the **Bluetooth** icon  displays in the Status Bar.

Turning Bluetooth Off

1. From any screen, sweep your finger downward from the top to display the Notification Panel.
2. Touch **Bluetooth** to turn Bluetooth off.

Pairing with a Bluetooth Device

Search for a Bluetooth device and pair with it, to exchange information between your device and the target device.

Tip: After pairing, your device and the target device recognize each other and exchange information without having to enter a passcode or PIN.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Wireless and network** → **Bluetooth settings**.
2. Touch **Bluetooth** to turn on Bluetooth.
3. Enable the target device's discoverable or visible mode.
4. Touch **Scan devices**.
5. From the list of scanned devices, touch the target device, then follow the prompts to complete the pairing:
 - If the target device requires a PIN, enter a PIN for the target device and touch **OK**. When prompted, enter the PIN on the target device.

- If the device allows automatic or smart pairing, your device attempts to pair with the device automatically. Follow the prompts on your device and the target device to complete the pairing.

Samsung Kies

Samsung Kies is a software that enables you to update your device firmware by connecting to the PC.

To learn more about Samsung Kies and Samsung applications, browse featured applications and download Kies at:

www.samsungapps.com.

Connecting With Samsung Kies

1. Install Samsung Kies software on your PC.
2. From a Home screen, touch the **Menu Key**  → **Settings** → **Wireless and network** → **USB settings**, then touch **Samsung Kies**.

Warning!: Close any running applications before connecting your device to a PC.

3. Using an optional PC data cable, connect the multifunction jack on your device to a PC.

Note: PC connection is only available in idle mode. Touch the Home Key , if necessary.

4. Cancel the pop-up window when it displays on the PC.
5. Run Samsung Kies and follow the prompts to update your device firmware.
6. Refer to Samsung Kies Help for more information.

Memory Card

Your device supports removable microSD™ or microSDHC™ memory cards for storing music, photos, videos, and files.

Installing and Removing a Memory Card

For more information about installing and removing a memory card, see “*Setting Up Your Device*” on page 5.

Important! To prevent damage to information stored on the memory card, always unmount the card before removing it from the device.

Formatting a Memory Card

Formatting erases all content from the memory card and prepares it for use with your device.

Formatting a memory card using your device

1. From a Home screen, touch the **Menu Key**  → **Settings** → **SD card and device storage**
2. Touch **Unmount SD card**.

3. After unmounting the SD card, touch **Format SD card**.
4. Follow the prompts to confirm the formatting of the card.

Formatting a memory card using your computer

Consult your computer and/or memory card reader documentation for information about formatting memory cards.

Synchronizing with Windows Media Player

Ensure that Windows Media Player is installed on your PC.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Wireless and network** → **USB settings**, then touch **Media player**.
2. Attach your device to the computer with the USB cable.

Note: PC connection is only available in idle mode. Touch the Home Key , if necessary.

Your computer recognizes the connection and displays the Portable Device screen.

3. Click the option to open **Windows Media Player** to synchronize music files.
4. Select and drag the music files you want to the sync list and begin synchronizing.

5. When finished, exit Windows Media Player and disconnect the USB cable.

Connecting as a Mass Storage Device

You can connect your device to a PC as a removable disk and access the file directory. If you insert a memory card in the device, you can also access the files directory from the memory card by using the device as a memory card reader.

Note: The file directory of the memory card displays as folder external_sd, separate from the internal memory.

1. Insert a memory card into the device to transfer files from or to the memory card.
2. From a Home screen, touch the **Menu Key**  → **Settings** → **Wireless and network** → **USB settings**, then touch **Mass storage**.
3. Attach your device to the computer with the USB cable. Your device recognizes the connection and displays the USB mass storage screen.
4. Touch **Connect storage to PC**.
A pop-up window displays on the PC when connected.
5. Open the folder to view files.
6. Copy files from the PC to the memory card.
7. When finished, close the PC folder and disconnect the USB cable.

Section 10: Applications and Widgets

This section contains a description of each application that is available in the Applications Menu, its function, and how to navigate through that particular application. If the application is already described in another section of this user manual, then a cross reference to that particular section is provided. Various widgets are also described.

Tip: To open applications quickly, add the icons of frequently-used applications to one of the Home screens. For details, see “*Adding Shortcuts from Applications*” on page 23.

GPS Applications

GPS applications allow you to achieve real-time, GPS-enabled, turn-by-turn navigation and to access local searches based on a variety of category parameters.

To receive better GPS signals, avoid using your device in the following conditions:

- inside a building or between buildings
- in a tunnel or underground passage
- in poor weather
- around high-voltage or electromagnetic fields
- in a vehicle with tinted windows

Global GPS turn-by-turn navigation, mapping, and Point of Interest content is available for three continents, including North America (U.S., Canada, and Mexico), Western Europe, and China, where wireless coverage is available.

Important! If you touch or cover the internal GPS antenna while using GPS services, it may impede the GPS signal resulting in the GPS services not working in an optimal manner. Refer to the following diagram to locate the approximate location of the internal GPS antenna.



Location of Internal
GPS Antenna

(Back view of device)

AllShare

Use AllShare to share multimedia content from your device through Wi-Fi with DLNA (Digital Living Network Alliance) certified devices. With AllShare, you can:

- Play multimedia content from your device on another player, such as a Wi-Fi-capable TV or other playback device.
- Play multimedia content from another source, such as a wireless media server, on your device.
- Play multimedia content from another source, such as a wireless media server, on another device. Your device retrieves content from the source and uses Wi-Fi to deliver it to another device and acts as a remote to control playback.

Note: AllShare uses your device's Wi-Fi services. For more information about Wi-Fi, see “Wi-Fi” on page 81.

Configuring AllShare

Configure AllShare settings to identify your device as a server, connect to Wi-Fi, and set treatment of copied files.

1. From a Home screen, touch **Applications** 
→ **AllShare** .

2. Touch **Settings** to configure these settings:

Note: In the following settings, references to *phone* are actually references to your *Player*.

- **Media server name:** Use the keypad to enter a new media server name, if desired (the default is your device's default name), then touch **Save**.
 - **Share media:** Allows you to restrict what is shared from your device. Touch the items you want to share and touch **OK**.
 - **Access point network:** Turn on your Wi-Fi service and connect to an available Wi-Fi Access Point.
 - **Upload from other devices:** Set your device's treatment of files copied from other devices. Choose from **Always allow**, **Always ask**, or **Never allow**, then touch **OK**.
 - **Default memory:** Choose the default location for saving downloaded files, from **Phone** or **Memory card**.
3. Touch one of the following options:
 - **Play file from my phone on other player:** You can enjoy multimedia content saved on your device on your TV or Hi-Fi. You can then use your device like a remote control.
 - **Play file from server on my phone:** You can enjoy multimedia content saved on other devices, such as your PC or laptop, on your device.

- **Play file from server on other player via my phone:** You can enjoy multimedia content saved on your PC or laptop using other devices like your TV or Hi-Fi. You can then use your device like a remote control.

4. Follow the on-screen instructions.

Calculator

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication, and division. You can also use this as a scientific calculator.

1. From a Home screen, touch **Applications**  → **Calculator** .
2. Enter the first number using the numeric keys.
3. Enter the operation for your calculation by touching the + (add), - (subtract), × (multiply), or ÷ (divide) key.
4. Enter the next number.
5. To view the result, touch the = (equals) key.
6. Repeat steps 3 through 5 as many times as required.

Rotate your device to display the scientific calculator in landscape mode.

Calendar

Record events and appointments to manage your schedule.

1. From a Home screen, touch **Applications**  → **Calendar** .
2. Touch a tab to choose a calendar view:
 - **Month:** Display the current month and scroll to other months.
 - **Week:** Display the current week and scroll to other weeks.
 - **Day:** Display today's schedule and scroll to other days.
 - **List:** Display events in a chronological list.
3. Touch the **Menu Key**  for these options:
 - **Search:** Search the calendar for a particular word or words.
 - **Create:** Create a new event for any day or time period.
 - **Go to:** Display a specific date.
 - **Today:** Displays today's date, if it is not already being displayed.
 - **Delete:** Delete an event.
 - **Settings:** Customize the calendar. For more information, refer to "*Customizing the Calendar*" on page 89.

Creating a Calendar Event

To create a calendar event:

1. From a Home screen, touch **Applications**  → **Calendar** .
2. Touch the date for which you want to enter an event.
3. Enter the event information in the Create event screen, then touch **Save**.

Customizing the Calendar

1. From a Home screen, touch **Applications**  → **Calendar** .
2. Touch the **Menu Key**  → **Settings** to configure settings:

View settings

- **Calendars:** View all your calendars.
- **Calendar sync:** Synchronize calendars from multiple accounts.
- **Default view:** Set the view to display when you open the Calendar.
- **View days as:** Set how the Day views should be formatted, either **Time grid** or **Event list**.
- **First day of week:** Choose whether **Sunday** or **Monday** is the first day of the week.

- **Hide declined events:** Enable or disable display of events.
- **Lock time zone:** Allows you to lock event times and dates based on your selected time zone, which is defined by the following field.
- **Select time zone:** If **Lock time zone** is enabled, used this option to select a time zone to lock event times and dates.

Notification settings

- **Set alerts & notifications:** Set alert behavior for calendar notifications.
- **Vibrate:** Set vibration behavior for calendar notifications.
- **Select ringtone:** Choose a tone for calendar notifications.

Sending Calendar Events

Send events as vCalendar files by using Bluetooth or as attachments to Email.

Note: Depending on the type of event, the **Send via** option may not be available.

1. From a Home screen, touch **Applications**  → **Calendar** .
2. Touch an event, then touch the **Menu Key**  → **Send via**.

3. Choose a sending method:

- **Bluetooth:** For more information about Bluetooth pairing and sending, see *“Pairing with a Bluetooth Device”* on page 83.
- **Email:** This option is displayed once an email account has been added. For more information, refer to *“Email”* on page 50.

Camera

Take photos and record video with your device's built in Camera. For more information, refer to *“Camera”* on page 72.

Tip: A shortcut to Camera appears on the main Home screen by default. For information about adding shortcuts to a Home screen, see *“Adding Shortcuts from a Home screen”* on page 22.

► From the Home screen, touch **Camera** .

– or –

From a Home screen, touch **Applications** .

→ **Camera** .

Clock

Use Clock to set an alarm, view the World clock, or access the Stopwatch or Timer.

Alarm

Set alarms for reminders or for wake-up times.

Setting Alarms

1. From a Home screen, touch **Applications** 
→ **Clock** .
2. Touch the **Alarm** tab at the top of the Clock screen.
3. Touch **Create alarm** or touch the **Menu Key**  → **Create**.
4. Touch fields to configure the alarm:
 - **(Time):** Set a time for the alarm to sound.
 - **Alarm repeat:** Choose One-time event, days, Daily, Every weekday (Mon-Fri), or Weekly for the alarm to repeat.
 - **Name:** Enter a name for the alarm.

Notification

- **Snooze:** Set a snooze duration of 3, 5, 10, 15, or 30 minutes or a snooze repeat of 1, 2, 3, 5, or 10 times.
- **Smart alarm:** Set an alarm duration of 3, 5, 10, 15, or 30 minutes and a tone. Tone possibilities are: Morning, Breeze, Mist, Forest, Light, and Rain.

Sound

- **Alarm type:** Choose an alarm type of Melody, Vibration, Vibration and melody, or Voice.
 - **Alarm tone:** Set an alarm tone from Sounds or Go to My files.
 - **(Volume):** Use the slider to hear and set the alarm volume.
5. Touch **Save** to save the alarm.

Editing an Alarm

1. From a Home screen, touch **Applications** 
→ **Clock** .
2. Touch an alarm in the list of alarms.
3. Touch and edit the desired fields as described in “*Setting Alarms*” on page 90.

Deleting Alarms

1. From a Home screen, touch **Applications** 
→ **Clock** .
2. Touch the **Menu Key**  → **Delete**.
3. Touch alarms to mark them for removal or touch **Select All**.
4. Touch **Delete** to remove the selected alarms.

World Clock

View the date and time in any time zone.

1. From a Home screen, touch **Applications** 
→ **Clock** .
2. Touch the **World clock** tab at the top of the Clock screen.
3. Touch **Add city** or touch the **Menu Key**  → **Add**.
4. Choose a city by typing a city name or scrolling through the list.
5. Touch the **Menu Key**  for the these additional options:
 - **Delete:** Select cities to remove from the display.
 - **DST settings:** Touch  for a city to set daylight savings time.
 - **Change order:** Touch the buttons  on an entry and drag the entry to a new position in the list. Touch **Save** to change the order.
6. Touch and hold a city in the for these options:
 - **Delete:** Remove the city from the display.
 - **DST settings:** Set daylight savings time to Off, 1 hour, or 2 hours.

Stopwatch

You can use this option to measure intervals of time.

1. From a Home screen, touch **Applications** 
→ **Clock** .
2. Touch the **Stopwatch** tab at the top of the Clock screen.
3. Touch **Start** to start the stopwatch and touch **Lap** to mark a unit of time per lap.
4. Touch **Stop** to stop the stopwatch.
5. Touch **Restart** to continue or touch **Reset** to erase all times recorded.

Timer

You can use this option to set a countdown timer. Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).

1. From a Home screen, touch **Applications** 
→ **Clock** .
2. Touch the **Timer** tab at the top of the Clock screen.
3. The **min** field is highlighted and set to 1 minute. Use the keypad to set the number of minutes you want.

4. Touch the **hr** field to set hours, if desired. As you touch different fields, they are highlighted.
5. Touch the **sec** field to set seconds.
6. Touch **Start** to begin the timer and touch **Stop** to pause the timer.
7. After stopping, touch **Restart** to continue or touch **Reset** to set the timer back to 1 minute.

Contacts

Store contact information for your friends, family and colleagues, to quickly access information or to send a message. For more information, refer to “*Contacts*” on page 40.

- From a Home screen, touch **Applications** 
→ **Contacts** .

Downloads

Files, apps, and other items you download in Browser, Gmail, Email, or in other ways, are stored on your tablet's internal storage. Use the Downloads app to view, reopen, or delete what you have downloaded.

1. From a Home screen, touch **Applications** 
→ **Downloads** .
2. Touch the **Internet downloads** or **Other downloads** tab.

3. Touch a download item to open it.
4. Touch headings for earlier downloads to view them.
5. To delete items, touch the check box to the left of each item you want to delete. Then touch **Delete**. Touch **Deselect all** to remove all check marks.

Warning! When you delete an item, it is deleted from your device's storage or SD card.

6. Touch the **Menu Key**  and the touch **Sort by size** or **Sort by time** to switch back and forth.

Dual Clock

Display the date and time for two different locations.

1. Navigate to the desired Home screen, then touch and hold on the screen to display the **Add to Home screen** menu.
2. Touch **Widgets** → **Dual clock** .

The Dual clock widget displays, which is actually two widgets. Each widget displays the digital time, the date, and a city name.

3. Touch either widget to choose a different city than the one currently displayed.

Email

Send and receive email using popular email services. For more information, refer to “*Email*” on page 50.

- From a Home screen, touch **Applications**  → **Email** .

FM Radio

The built-in FM radio in your device provides free music from your local FM radio stations. For more information, refer to “*FM Radio*” on page 70.

Tip: A shortcut to FM radio appears on the Main Home screen by default.

- From the Home screen, touch **FM radio** .
- or –
- From a Home screen, touch **Applications**  → **FM radio** .

Gallery

Use Gallery to view, capture, and manage photos and videos. For more information, refer to “*Gallery*” on page 78.

- From a Home screen, touch **Applications**  → **Gallery** .

Gmail

Send and receive email with Gmail, Google's web-based email. For more information, refer to “*Gmail*” on page 47.

Tip: A shortcut to Gmail appears on the Main Home screen by default.

► From the Home screen, touch **Gmail** .

— or —

From a Home screen, touch **Applications** .

→ **Gmail** .

Google Search

Search the internet, and your device, using the Google™ search engine. For more information, refer to “*Google Search*” on page 65.

Tip: The Google Search widget appears by default on the main Home screen.

► From the Home screen, touch **Google Search** .

— or —

From a Home screen, touch **Applications** .

→ **Google Search** .

Internet

Your device includes a full HTML Browser, to access the internet. For more information, refer to “*Internet*” on page 55.

Tip: By default, Internet appears as a Primary Shortcut on Home screens.

► From a Home screen, touch **Internet** .

Latitude

With Google Latitude, you can see the location of all of your friends on a map or on a list. You can also share or hide your location.

You must first set up your device to use wireless networks to help pinpoint your location. Also, Latitude works best when Wi-Fi is enabled.

► From a Home screen, touch **Applications** .

→ **Latitude** .

Maps

Use Google Maps to find your current location, get directions, and other location-based information. For more information, refer to “*Maps*” on page 60.

Tip: A shortcut to Google Maps appears on the Main Home screen by default.

► From the Home screen, touch **Maps** .

— or —

From a Home screen, touch **Applications** .

→ **Maps** .

Note: You must enable location services to use Maps. Some features require Standalone or Google location services. For more information, refer to “*Location and Security*” on page 111.

Market

Browse for new Android applications, games, or downloads for your device. You must have a Google account set up on your device to download a new application.

Tip: A shortcut to Market appears on the Main Home screen by default.

1. From the Home screen, touch **Market** .

— or —

From a Home screen, touch **Applications** .

→ **Market** .

2. The first time you open Market, read the Terms of Service, then touch **Accept** to continue.
3. Browse for items to install **Apps**, **Games**, **Books**, and **Movies**, which includes new downloads and updates to applications already installed on your device.
4. Touch the **FEATURED** tab to view featured items. Touch the **CATEGORIES** tab to narrow your search. Touch tabs such as **TOP SELLING**, **TOP PAID**, and **TOP FREE** to view items in order of popularity.
5. While browsing, touch the **Menu Key**  for the following options:
 - **My Apps / Books / Movies:** Displays Apps, Games, Books, and Movies already on your device. Touch an item for more information about the item and to install, open, update, or uninstall it.
 - **Settings:** Display settings for the Market app.
 - **Accounts:** Touch the account you want to use.
 - **Help:** Get help for using Android Market.

Memo

Create and manage text memos and use Bluetooth to send memos to paired Bluetooth devices.

Composing a Memo

1. From a Home screen, touch **Applications** 
→ **Memo** .
2. Touch **Create memo**.
– or –
Touch the **Menu Key**  → **Create**.
3. Compose the memo, then touch **Save**.

For more information, refer to “*Entering Text Using the Samsung Keypad*” on page 32.

Memo List Options

While viewing the list of Memos:

1. Touch the **Menu Key**  for the following options:
 - **Create**: Create a new memo.
 - **Maximise / Minimize**: Show a maximum or minimum number of lines for each memo.
 - **Delete**: Select one or all memos and touch **Delete**.
 - **Search**: Find a word or words in your memos.

2. Touch and hold a memo in the list to display the following option:
 - **Send via**: Touch **Bluetooth** or **Email** to send the memo by the selected method. For more information, refer to “*Bluetooth*” on page 82.
3. Touch **Edit**  on a memo in the list to open and edit the memo.
4. Touch **Delete**  on a memo to display the **Delete** option. Touch **OK** to delete the selected memo.

Memo Options

1. From a Home screen, touch **Applications** 
→ **Memo** .
2. Touch **Edit**  on a memo in the list to open and edit the memo.
3. Touch one of the color examples at the bottom of the screen to change the color of the memo being displayed. Touch **Save** to accept the color.
4. Touch the **Menu Key**  for the following option:
 - **Send via**: Touch **Bluetooth** or **Email** to send the memo by the selected method. For more information, refer to “*Bluetooth*” on page 82.

Mini Diary

Use Mini Diary to record daily happenings.

Note: Mini Diary includes weather information for your location. Sending location details to get weather information requires connection to the network.

1. From a Home screen, touch **Applications**  → **Mini Diary** .
The Select city screen displays.
2. Touch **Add**, enter a city to search for, touch the desired city, and touch **Add**.
3. Touch **Create diary**.
4. Touch **Tap to add photo** to add a photo, then touch **Camera** to take a new picture or touch **Images** to choose a picture from the Gallery.
5. Touch **Add location** to enter a location. Touch **Done** to save the location or **Cancel** exit without saving.
6. Touch **Tap to create memo** to enter a text memo. Touch **Done** to save the memo or **Cancel** exit without saving.

7. Touch **AccuWeather.com** to check the latest weather data or touch the weather icon  in the upper left corner and select a weather condition from the list.
8. Touch **Save** to save your diary entry.

Tip: Mini Diary is also available through the Days Samsung Widget, to display diary entries right on the Home screen. For information about displaying widgets on the Home screen, see “Adding Widgets to the Home Screen” on page 21.

Publishing a Diary Entry

You can publish your diary entries to Facebook.

1. From a Home screen, touch **Applications**  → **Mini Diary** .
2. Touch a diary entry to display it, then touch **Menu Key**  → **Publish**.
3. Choose **Facebook** or **MySpace**, then follow the prompts to update your status.

Note: If you have not set up your Facebook or MySpace account, you will be asked to do so before you can publish your diary entries.

Music

Play music files from an installed memory card. For more information, refer to “*Music Player*” on page 68.

Tip: By default, Music appears as a Primary Shortcut on Home screens.

- ▶ From a Home screen, touch **Music** .

My Files

Find, view, and manage folders and files stored on an installed memory card. If the file is associated with an application on your device, you can launch the file in the application.

1. From a Home screen, touch **Applications** 
→ **My files** .
2. Touch a folder and scroll down or up until you locate a file.
3. Touch a file to launch it in the associated application, if the file is associated with an application.
4. While browsing files, touch **Up**  to go to a higher directory or touch the **Menu Key**  for these options:
 - **Share:** Touch **AllShare**, **Bluetooth**, **Picasa**, **Email**, **Gmail**, or **YouTube**, select files, and touch **OK** to send the selected files.
 - **Create folder:** Create a new folder for storing files.

- **Delete:** Select one or more files or folders to delete.
- **View by:** Select how you want to view your files. Options are: **List**, **List and details**, or **Thumbnail**.
- **List by:** Select how you want to list your files. Options are: **Time**, **Type**, **Name**, or **Size**.
- **More:** Select from these additional options:
 - **Move:** Move files or folders to a new location.
 - **Copy:** Copy files or folders to a new location.
 - **Rename:** Select and rename files or folders.
 - **Bluetooth visibility:** Enable or disable Bluetooth visibility of files.
 - **Settings:** Use this option to enable or disable **Show hidden files** and **Show file extension**. Also, touch **Set Home directory** to set or create a home directory.

Navigation

Use Google Navigation to find a destination and get walking or driving directions. For more information, refer to “*Navigation*” on page 63.

- ▶ From a Home screen, touch **Applications** 
→ **Navigation** .

Places

Google Places uses your location to help you find nearby destinations, such as restaurants, bars, hotels, attractions, ATMs and gas stations, or you can enter a location. For more information, refer to “Places” on page 64.

- From a Home screen, touch **Applications** 
→ **Places** .

Power Control

Active applications, Wi-Fi, Bluetooth, GPS, Synchronization, or the LCD Brightness functionality all act to drain your battery.

The Power Control widget is designed to quickly activate (turn on) or deactivate (turn off) those functions or applications that use the most battery power.

The following is a list of helpful tips that can help conserve your battery power:

- Reduce your backlight time.
- Turn off Bluetooth, Wi-Fi, and Synchronization when not in use.
- Deactivate the GPS when it is not needed. Most applications that use this function periodically query the GPS satellites for the current location. Each query drains your battery.
- Turn off Automatic application synchronization.
- Close any applications that may be running in the background (such as Music Player).

To use the Power Control shortcut bar:

1. From the Home screen, touch and hold an empty area until the **Add to Home screen** menu displays.
2. Touch **Widgets** → **Power control**.

The Power Control shortcut is added to the Home screen.

3. Touch one of the icons on the Power Control widget to activate the application (Wi-Fi, Bluetooth, GPS, Synchronization, or LCD Brightness).



A green bar displayed beneath the icon means the application is activated (turned on).

4. Touch one of the icons a second time to deactivate the application.

The green bar is removed from beneath the icon, which means the application is deactivated (turned off).

Samsung Apps

Connect to Samsung Apps and make your smart device even smarter. Simply and easily download an abundance of applications to your device, such as games, news, reference, social networking, navigation, and more.

Tip: A shortcut to Samsung Apps appears on the Main Home screen by default.

- ▶ From the Home screen, touch **Samsung Apps** .
- or –
- From a Home screen, touch **Applications** 
→ **Samsung Apps** .

Settings

Configure your device to your preferences. For more information, refer to “*Settings*” on page 104.

- ▶ From a Home screen, touch the **Menu Key**  → **Settings**.
- or –
- From a Home screen, touch **Applications** 
→ **Settings** .

Social Hub

Access your social networks, like Facebook, Twitter, and MySpace all in one place.

- ▶ From a Home screen, touch **Applications** 
→ **Social Hub** .

To add an account:

1. Touch **Add account**, if you have not added any accounts, or touch the **Menu Key**  → **Accounts and sync**.
The Accounts and sync screen displays.
2. Touch **Add account** at the bottom of the screen.
The Add an account screen displays.
3. Touch the account you want to add and then enter the required information, such as email address and password.
The added account now appears on the Social Hub screen with any other accounts.
4. Touch an account entry to start the application.

Talk

Google Talk is a free Windows and web-based application for instant messaging offered by Google. Conversation logs are automatically saved to a Chats area in your Gmail account. This allows you to search a chat log and store them in your Gmail accounts. For more information, refer to “*Google Talk*” on page 53.

Tip: A shortcut to Talk appears on the Main Home screen by default.

- From the Home screen, touch **Talk**  .
– or –

From a Home screen, touch **Applications**  → **Talk**  .

Task Manager

View and manage active applications on your device. For more information, refer to “*Task Manager*” on page 9.

Tip: To quickly launch Task Manager at any time, touch and hold the **Home Key** , then touch **Task manager**.

- From a Home screen, touch **Applications** 
→ **Task manager**  .

ThinkFree Office

ThinkFree Office Mobile for Android is a Microsoft Office compatible office suite. This application provides a central place for managing your documents online or offline.

1. From a Home screen, touch **Applications** 
→ **ThinkFree Office**  .
2. Read the End User License Agreement, then touch **Accept** if you agree with the terms of use.
3. Touch **Activate now** and then touch **Close** to activate ThinkFree Office on your device.
– or –

Touch **Later**, if you would prefer to activate ThinkFree Office at another time.

Four tabs display:

- **Home:** Displays the introduction to ThinkFree Office and lists a short description of each of the tabs and what type of information they provide.
- **My Docs:** This is where you keep your documents on this device. You can manage documents, or send them to others, and upload the documents to ThinkFree Online.
- **Online:** This provides your online storage information. You can also share your documents to others without using email attachments.

Videos

View and manage videos stored on an optional installed memory card.

For more information, refer to “Videos” on page 77.

Tip: By default, Videos appears as a Primary Shortcut on Home screens.

- From a Home screen, touch **Videos** .

Voice Recorder

The Voice Recorder allows you to record an audio file and then immediately share it using Bluetooth, Email, or Gmail.

1. From a Home screen, touch **Applications** 
→ **Voice Recorder** .
2. To start recording, touch **Record**  and speak into the microphone.
3. During the recording process you can touch **Stop**  to stop and save the recording or touch **Pause**  to temporarily halt the recording. After pausing, touch **Record**  to resume recording. Touch **Cancel**  to cancel the recording. Otherwise, once the audio recording stops, the message is automatically saved.

4. Touch **List**  to display a list of all your voice recordings, then touch the **Menu Key**  to display the following options:
 - **Share:** Share one or all recordings using Bluetooth, Email, or Gmail.
 - **Delete:** Touch recordings to mark them for removal or touch **Select all**. Touch **Delete** to delete the selected recordings.
 - **Rename:** Touch a recording, enter the new name, and touch **OK**.
 - **Settings:** The following settings are available:
 - **Storage:** Touch **Device** or **Memory card** to choose where your recordings are saved.
 - **Default name:** Enter a name prefix for your recordings. For example, if your Default name is **Voice**, your recordings are named Voice 001, Voice 002, Voice 003, and so on.
 - **Recording time:** Touch a recording time. Options are: 1, 2, 3, 4, 5, or 60 minutes, or 12 hours.
5. Touch a voice recording in the recordings list to play it. Touch **Pause**  to temporarily stop the playback, touch **Play**  to resume the playback, touch **Stop**  to stop the playback, or touch the **Menu Key**  to display the following options:
 - **Delete:** Touch **OK** to delete the recording.
 - **Rename:** Enter the new name and touch **OK**.
 - **Share:** Share the recording using Bluetooth, Email, or Gmail.

Voice Search

Perform Google searches by speaking your search terms. For more information, refer to “*Voice Search*” on page 65.

- ▶ From a Home screen, touch **Applications** 
→ **Voice Search** .

Tip: Voice Search is available on the Google Search bar widget, which appears on the Main Home screen by default.

YouTube

View and upload YouTube videos right from your device. For more information, refer to “*YouTube*” on page 66.

Tip: A shortcut to YouTube appears on the Main Home screen by default.

- ▶ From the Home screen, touch **YouTube** .
- or —
- From a Home screen, touch **Applications** 
→ **YouTube** .

Section 11: Settings

This section explains Settings for customizing your device.

Accessing Settings

There are two ways to access your device settings:

- From a Home screen, touch the **Menu Key**  → **Settings**.
– or –

From a Home screen, touch **Applications** 
→ **Settings** .

The first method is used in this section.

Wireless and Network

Control your device's wireless connections.

Flight Mode

Flight mode allows you to use many of your device's features, such as Camera, Games, and more, when you are in an airplane or in any other area where accessing data is prohibited.

Important! When your device is in Flight Mode, it cannot access online information or applications.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Wireless and network**.
2. Touch the **Flight mode** check box to enable Flight mode. A check mark  displayed next to the feature indicates Flight mode is active.

Wi-Fi Settings

Your device supports Wi-Fi b/g/n/a. Use Wi-Fi settings to manage your device's Wi-Fi connections.

For more information about using your device's Wi-Fi features, see “Wi-Fi” on page 81.

Turning Wi-Fi On or Off

Turn your device's Wi-Fi service on or off. When you turn Wi-Fi service on, your device automatically searches for available, in-range Wireless Access Points (WAPs).

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Wireless and network**.
2. Touch **Wi-Fi settings**, then touch **Wi-Fi** to turn Wi-Fi On or Off. When on, a check mark  appears in the check box.

Network Notification

Have your device alert you to new Wireless Access Points (WAPs).

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Wireless and network**.
2. Touch **Wi-Fi settings**, then touch **Network notification** to turn notifications On or Off. When on, a check mark  appears in the check box.

WPS Button Connection

The WPS (Wi-Fi Protected Setup) button is a standard for easy and secure wireless network set up and connections. To use WPS, the connecting device must support WPS and be compatible with Wi-Fi Protected Access (WPA) security. WPS can automatically set up a random network name and WPA wireless security for wireless Wi-Fi phones, routers, access points, computers, adapters, and other electronic devices.

WPS allows you to push buttons instead of entering a network name and wireless security PIN.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Wireless and network** → **Wi-Fi settings**.
2. Touch **WPS button connection**.

3. Press the WPS button on your Wi-Fi access point within 2 minutes.

Advanced Settings

Set up and manage wireless access points.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Wireless and network** → **Wi-Fi settings**.
2. Touch the **Menu Key**  → **Advanced** for these settings:
 - **Advanced:**
 - **Wi-Fi sleep policy:** By default, Wi-Fi turns off when the screen times out and data connections switch to mobile data. Use Wi-Fi sleep policy settings to specify when to switch from Wi-Fi to mobile data for data communications. Touch to choose from **When screen turns off**, **Never when plugged in**, or **Never**.
 - **MAC address:** View your device's MAC address, required when connecting to some secured networks (not configurable).
 - **Proxy:** Touch to enter a proxy number.
 - **Port:** Touch to enter a port number.
 - **IP Settings:** Enter IP settings for configuring a connection to a network using a static IP, including:
 - **Use static IP:** Touch to turn static IP On or Off.
 - **IP address:** Enter the IP address.
 - **Gateway:** Enter the gateway.
 - **Netmask:** Enter the netmask.

- **DNS 1:** Enter the DNS1.
- **DNS 2:** Enter the DNS2.

Bluetooth Settings

Use Bluetooth settings to manage Bluetooth connections, set your device's name, and control your device's visibility.

Turning Bluetooth On or Off

To turn your device's Bluetooth service On or Off:

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Wireless and network** → **Bluetooth settings**.
2. Touch **Bluetooth** to turn Bluetooth On or Off. When On, a check mark  appears in the check box.

For more information about using Bluetooth to exchange information with other Bluetooth devices, see “*Bluetooth*” on page 82.

Additional Bluetooth Settings

When Bluetooth is on, additional settings are available.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Wireless and network** → **Bluetooth settings**.
2. Touch a setting to configure Bluetooth:

- **Device Name:** Your device's default name appears on screen. Touch to change the device name. Available when Bluetooth is turned On.
- **Discoverable:** Control your device's visibility to other devices' Bluetooth searches. Touch to turn On or Off. Available when Bluetooth is turned On.
- **Scan devices:** Touch to scan for nearby discoverable devices. After searching, touch a device to pair with it. For more information, refer to “*Pairing with a Bluetooth Device*” on page 83.

USB Settings

Configure how your device is identified when you attach it to a computer with a USB cable.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Wireless and network**.
2. Touch **USB settings** to choose a setting:
 - **Samsung Kies:** Samsung Kies is a software suite that allows you to search and download applications directly from a PC. The applications are then installed onto a mobile device when synced with a PC, providing instant back up and peace of mind for application downloads. For more information, refer to “*Samsung Kies*” on page 83.
 - **Media player:** When connected, your device syncs with media applications on your computer to copy purchased music or videos, or other files, to your device.

- **Mass storage:** When connected, your device is treated as a mass storage device for transferring files.

VPN Settings

The VPN settings menu allows you to set up and manage Virtual Private Networks (VPNs).

Important!: Before you can use a VPN you must establish and configure one.

Adding a VPN

Before you add a VPN you must determine which VPN protocol to use: PPTP (Point-to-Point Tunneling Protocol), L2TP (Layer 2 Tunneling Protocol), L2TP/IPSec PSK (Pre-shared key based L2TP/IPSec), or L2TP/IPSec CRT (Certificate based L2TP/IPSec).

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Wireless and network** → **VPN settings**.
2. Touch **Add VPN**.
3. To establish a PPTP (Point-to-Point Tunneling Protocol):
 - Touch **Add PPTP VPN**.
 - Touch **VPN name**, add a name for this connection using the keypad, then touch **OK**.
 - Touch **Set VPN server**, add a name using the keypad, then touch **OK**.

- Touch **Enable Encryption** to make a check mark , if desired.
 - Touch **DNS search domains**, add a name for DNS search using the keypad, then touch **OK**.
4. To establish a L2TP (Layer 2 Tunneling Protocol):
 - Touch **Add L2TP VPN**.
 - Touch **VPN name**, add a name for this connection using the keypad, then touch **OK**.
 - Touch **Set VPN server**, add a name using the keypad, then touch **OK**.
 - Touch **Enable L2TP secret** to make a check mark , if desired.
 - Touch **Set L2TP secret** and enter a password, if desired, then touch **OK**.
 - Touch **DNS search domains**, add a name for DNS search using the keypad, then touch **OK**.
 5. To establish a L2TP/IPSec PSK (Pre-shared key based L2TP/IPSec):
 - Touch **Add L2TP/IPSec PSK VPN**.
 - Touch **VPN name**, add a name for this connection using the keypad, then touch **OK**.
 - Touch **Set VPN server**, add a name using the keypad, then touch **OK**.
 - Touch **Set IPsec pre-shared key**, enter a key and touch **OK**.

- Touch **Enable L2TP secret** to make a check mark , if desired.
 - Touch **Set L2TP secret** and enter a password, if desired, then touch **OK**.
 - Touch **DNS search domains**, add a name for DNS search using the keypad, then touch **OK**.
6. To establish a L2TP/IPSec CRT (Certificate based L2TP/IPSec):
- Touch **Add L2TP/IPSec CRT VPN**.
 - Touch **VPN name**, add a name for this connection using the keypad, then touch **OK**.
 - Touch **Set VPN server**, add a name using the keypad, then touch **OK**.
 - Touch **Enable L2TP secret** to make a check mark , if desired.
 - Touch **Set L2TP secret** and enter a password, if desired, then touch **OK**.
 - Touch **Set user certificate**, then touch **OK**.
 - Touch **Set CA certificate**, then touch **OK**.
 - Touch **DNS search domains**, add a name for DNS search using the keypad, then touch **OK**.

Sound

General

Silent Mode

Temporarily silence all the sounds your device makes except for media playback and alarms.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Sound**.
2. Touch **Silent mode** to enable or disable silent mode. When enabled, a check mark  appears in the check box.

Vibrate

Vibrate mode allows your device to vibrate instead of a tone.

1. From the Home screen, touch the **Menu Key**  → **Settings** → **Sound** → **Vibrate**.
2. Touch **Always**, **Never**, **Only in Silent mode**, or **Only when not in Silent mode**.

Volume

Set the volume level for all types of sounds.

Note: You can only set volume when Silent Mode is disabled.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Sound** → **Volume**.
2. Touch and drag the sliders to set:
 - **Incoming call volume:** Adjust the sound for incoming calls.
 - **Media volume:** Playback of music, videos, and other multimedia content.
 - **System volume:** Application sounds and other sounds made by your device.
 - **Notification volume:** Sounds for alerts to new messages and other events.

Note: The **Notification volume** option does not appear if **Use Incoming call volume for notifications** is checked.

3. Touch **OK** to save your setting.

Tip: You can also set **Media volume** from the Home screen by pressing the **Volume Key**.

Notifications

Notification Ringtone

Select a default ringtone for message, alarm, and other notifications.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Sound** → **Notification ringtone**.
2. Touch a ringtone to hear a sample and select it.
3. Touch **OK** to save the setting.

Feedback

Audible Selection

When enabled, tones play when you touch screen items.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Sound**.
2. Touch **Audible selection** to enable or disable tones. When enabled, a check mark  appears in the check box.

Screen Lock Sounds

When enabled, tones play when unlocking and locking the screen.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Sound**.
2. Touch **Screen lock sounds** to enable or disable tones. When enabled, a check mark  appears in the check box.

Haptic Feedback

When enabled, the device vibrates to indicate screen touches and other interactions.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Sound**.
2. Touch **Haptic feedback** to enable or disable vibration. When enabled, a check mark  appears in the check box.

Vibration Intensity

Set the intensity of vibration for screen touch feedback.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Sound** → **Vibration intensity**.
2. Touch and drag the slider to set Vibration intensity.
3. Touch **OK** to save your setting.

Display

Font Style

Set the font for screen displays.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Display**.
2. Touch **Font style** to choose a font style or touch **Get fonts online** to browse and download a new font.

Brightness

Set the default screen brightness.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Display** → **Brightness**.
2. Touch and drag the slider to set the brightness or touch **Automatic brightness**.
3. Touch **OK** to save the setting.

Auto-Rotate Screen

Switch orientation automatically when rotating your device.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Display**.
2. Touch **Auto-rotate screen** to enable or disable the mode. When enabled, a check mark  appears in the check box.

Animation

Set the level of animations for transitions between screens.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Display** → **Animation**.
2. Touch **No animation**, **Some animations**, or **All animations**.

Screen Time-out

Set the length of delay between the last key press or screen touch and the automatic screen time-out (dim and lock).

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Display** → **Screen time-out**.
2. Touch a setting to select it.

Power Saving Mode

When enabled, your device automatically analyzes the screen and adjusts the brightness to conserve battery power.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Display**.
2. Touch **Power saving mode** to enable or disable the mode. When enabled, a check mark  appears in the check box.

Horizontal Calibration

Horizontal calibration allows you to horizontally calibrate your display using the accelerometer.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Display** → **Horizontal calibration**.
2. Place your device on a level surface and touch **Calibrate**.

Location and Security

You value your privacy. So, by default, your device only acquires your location when you dial 911. To use Location-Based Services, you must first enable location services on your device.

My Location

Use Wireless Networks

Before you use applications such as Google Maps and find your location or search for places of interest, you must enable the Use wireless networks option or enable the GPS satellites.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Location and security**.
2. Touch **Use wireless networks** to enable location information using the wireless network.

Use GPS Satellites

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Location and security**.
2. Touch **Use GPS satellites** to enable the GPS satellite.

Use Sensor Aiding

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Location and security**.
2. Touch **Use sensor aiding** to enable the sensor aiding, which enhances positioning and saves power by using sensors.

Screen Unlock Settings

Set Screen Lock

Choose settings for unlocking your screen. For more information about using the lock and unlock features, see “*Securing Your Device*” on page 10.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Location and security**.
2. Touch **Set screen lock/Change screen lock** for these settings:
 - **None:** Touch to disable all screen lock settings.
 - **Pattern:** A screen unlock pattern is a touch gesture you create and use to unlock your device. Follow the prompts to create or change your screen unlock pattern.
 - **PIN:** Touch to create a Personal Identification Number (PIN) for unlocking the screen.
 - **Password:** Touch to create a password for unlocking the screen.

Passwords

Visible Passwords

When enabled, password characters display briefly as you touch them while entering passwords.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Location and security**.
2. Touch **Visible passwords** to enable or disable brief displays of password characters. When enabled, a check mark  appears in the check box.

Device Administration

Add or remove device administrators.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Location and security**.
2. Touch **Select device administrators**.

Credential Storage

Use Secure Credentials

You can install credentials from an installed memory card and use Credential storage settings to allow applications to access the secure certificates and other credentials.

Note: You must have installed encrypted certificates from a memory card to use this feature.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Location and security**.
2. Touch **Use secure credentials** to enable or disable. When enabled, a check mark  appears in the check box.

Install Encrypted Certificates

Install encrypted certificates from an installed memory card.

Note: You must have installed a memory card containing encrypted certificates to use this feature.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Location and security**.
2. Touch **Install encrypted certificates from SD card**, then choose a certificate and follow the prompts to install.

Set Password

Set or change a password to protect credentials.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Location and security**.
2. Touch **Set password**, then follow the prompts.

Clear Storage

Clear stored credentials and reset the password.

Note: This setting only appears if you have installed encrypted certificates.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Location and security**.
2. Touch **Clear storage** to clear stored credentials and reset the password.

Applications

You can download and install applications from Android Market or create applications using the Android SDK and install them on your device. Use Applications settings to manage applications.

Warning!: Because this device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

Unknown Sources

When enabled, you can install applications from sources other than the Android Market.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Applications**.

2. Touch **Unknown sources** to enable or disable the setting. When enabled, a check mark  appears in the check box.

Manage Applications

Manage and remove applications from your device.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Applications** → **Manage applications**.
2. Touch an application to view and update information about the application, including memory usage, default settings and permissions.

Running Services

View and control services running on your device.

Warning!: Not all services can be stopped. Stopping services may have undesirable consequences on the application or Android System.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Applications** → **Running services**.
2. To stop a service, touch the service, then touch **Stop** at the confirmation prompt.

Development

Set options for application development.

USB Debugging

When enabled, allows debugging when the device is attached to a PC by a USB cable.

Note: This setting is used for development purposes.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Applications** → **Development**.
2. Touch **USB debugging** to enable or disable the setting. When enabled, a check mark  appears in the check box.

Allow Mock Locations

This setting is used by developers when developing location-based applications.

Note: This setting is used for development purposes.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Applications** → **Development**.
2. Touch **Allow mock locations** to enable or disable the setting. When enabled, a check mark  appears in the box.

Samsung Apps

Using the Samsung Apps option, the device notifies you when there are new applications in Samsung Apps.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Applications** → **Samsung Apps**.
2. For new application notification, touch **On**. Touch **Off** to disable new application notification.
3. To delete Samsung Apps' locale data, touch **Reset locale** and then touch **OK**.

Accounts and Sync

Set up and manage accounts, including your Google and Backup Assistant accounts.

General Sync Settings

Background Data

When enabled, all accounts can sync, send, and receive data at any time, in the background.

Important!: Disabling background data can extend battery life and lower data use. Some applications may still use the background data connection, even if this setting is disabled.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Accounts and sync**.
2. Touch **Background data** to enable or disable the setting. When enabled, a check mark  appears in the check box.

Auto-Sync

When enabled, all accounts sync data at any time, automatically.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Accounts and sync**.
2. Touch **Auto-sync** to enable or disable the setting. When enabled, a check mark  appears in the check box.

Manage Accounts

Use Manage accounts to set up and configure your accounts.

Note: Available settings depend on the type of account. Not all settings are available for all accounts.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Accounts and sync**.

2. Under **Manage accounts**, touch the account to modify its settings.

For more information about accounts, see “*Setting Up Your Accounts*” on page 38.

Adding an Account

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Accounts and sync**.
2. Under **Manage accounts**, touch **Add account** and follow the prompts to enter your credentials and set up the account.

Tip: For more information about adding accounts, see “*Setting Up Your Accounts*” on page 38.

Removing an Account

Important! Removing an account also deletes all of its messages, contacts and other data from the device.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Accounts and sync**.
2. Touch an account to display its settings.

3. Touch **Remove account**, then touch **Remove account** at the prompt to remove the account and delete all its messages, contacts and other data.

Privacy

Manage your device's use of personal information.

Device Backup and Restore

Back Up My Data

Enable or disable backup of your settings to the Google server.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Privacy**.
2. Touch **Back up my data** to enable or disable backup of settings to the Google server.

Automatic Restore

When enabled, backed-up settings are restored when you reinstall an application.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Privacy**.
2. Touch **Automatic restore** to enable or disable automatic restoration of settings from the Google server.

Personal Data

Factory Data Reset

Use Factory data reset to return your device to its factory defaults. This setting erases all data from the device, including Google or other email account settings, system and application data and settings, and downloaded applications. It does not erase current system software and bundled applications or files, such as music or photos, stored on an installed memory card.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Privacy**.
2. Touch **Factory data reset**, then follow the prompts to perform the reset.

SD Card and Device Storage

Manage the use of memory resources in your device's internal memory and on an installed memory card.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **SD card and device storage**.

Note: **Total space** and **Available space** settings cannot be configured.

2. Under **SD card**:

- **Total memory** and **Available memory** display memory usage on an installed memory card (not user-configurable).
- Touch **Unmount SD card** to prepare the memory card for safe removal or formatting. For more information, refer to “*Removing a Memory Card*” on page 6.
- Touch **Format SD card** to erase the memory card and prepare it for use with your device. For more information, refer to “*Formatting a Memory Card*” on page 84.

3. Under **USB storage**:

- **Total memory** and **Available memory** display usage of the internal device memory.
- Touch **Format USB storage** to format (erase) all data in internal memory. Read the warning and then touch **Format USB storage**.

4. Under **System storage**:

- **Available memory** displays usage for your device's 2GB internal memory.

Language and Keyboard

Select Locale

Set the language used by your device.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Language and keyboard** → **Select locale**.
2. Touch a language/locale from the list.

Text Settings

Configure text entry options to your preferences.

Select Input Method

Choose the default text entry method.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Language and keyboard** → **Select input method**.
2. Touch **Samsung keypad** or **Swype** to set the default method.

Swype Keypad

Configure Swype keypad settings. For more information about entering text with the Swype keypad, see “*Entering Text Using Swype*” on page 30.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Language and keyboard**.
2. Under **Text settings**, touch **Swype** to display a screen where you can touch items to configure the Swype settings.

Settings include:

Preferences

- **Language:** Allows you to select the languages available from the Swype keyboard. To choose the desired language, touch the language key .
- **Audio Feedback:** Play sounds as you enter text.

- **Vibrate on keypress:** The device vibrates on text entry.
- **Show tips:** Show helpful tips from Swype.

Swype Advanced Settings

- **Word suggestion:** Suggest possible matching words as you enter text.
- **Auto-spacing:** Insert spaces automatically when you pause entering text.
- **Auto-capitalization:** Automatically capitalize the first letter of the first word in a sentence.
- **Show complete trace:** Briefly display the Swype trace.
- **Speed vs. accuracy:** Set the sensitivity of Swype text recognition.
- **Personal dictionary:** Add or remove words from your personal dictionary.
- **Reset Swype's dictionary:** Delete all the words you have added to Swype's dictionary.

Help

- **Swype help:** View the Swype User Manual.
- **Tutorial:** View a tutorial for learning how to Swype.

About

- **Version:** View the current Swype software version.

Samsung Keypad

Configure Samsung keypad settings. For more information about entering text with the Samsung keypad, see *“Entering Text Using the Samsung Keypad”* on page 32.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Language and keyboard**.
2. Under **Text settings**, touch **Samsung keypad** to display a screen where you can touch items to configure the Samsung keypad settings. Settings include:
 - **Portrait keypad types:** Select a text input method:
 - Qwerty Keypad
 - 3x4 Keypad
 - Handwriting box 1
 - Handwriting box 2
 - **Input languages:** Set a default text entry language.
 - **XT9:** Touch to enable or disable XT9 predictive text, to have the system suggest words matching your text entries, and, optionally, complete common words automatically.

- **XT9 advanced settings:** When **XT9** is enabled, the following options display:
 - **Word completion:** Enable or disable automatic word completion for words matching your text entries.
 - **Word completion pt:** Choose the number of letters for the system to use to predict words for automatic completion.
 - **Spell correction:** Enable or disable automatic spell checking and correction.
 - **Next word prediction:** When enabled, the system predicts the next word based on common usage patterns.
 - **Auto-append:** When enabled, the most common predicted word is automatically added to your text.
 - **Auto-substitution:** When enabled, the system automatically replaces words you enter with words from the XT9 auto-substitution list.
 - **Regional corrections:** When enabled, the system automatically changes the spelling of words based on norms for your locale.
 - **Recapture:** When enabled, the system re-displays matching words when you make corrections to a word inserted by the system.
 - **XT9 my words:** Add words to your XT9 predictive text dictionary.
 - **XT9 auto-substitution:** Manage the list of words the system uses for auto-substitution (Auto-substitution setting must be enabled).
- **Keypad sweeping:** Sweep the keypad to change from alphabetic (ABC) to symbols/numeric (?123) mode.
- **Auto-capitalization:** The system automatically capitalizes words in your text based on common usage, such as at the beginning of sentences.
- **Handwriting settings:** Touch to display the following options:
 - **Recognition time:** Set the time it takes to recognize each handwritten letter. The longer the time, the more accurate.
 - **About:** View information on the handwriting tool manufacturer and view Gesture Methods for Space, Enter, and Back Space.
- **Voice input:** When enabled, you can choose to enter text by speaking the words, using Google's networked speech recognition feature.
- **Auto-full stop:** When you double space in a message, a period and space are added and the keyboard is placed into uppercase mode so you can start the new sentence with a capital letter.
- **Tutorial:** Help for using Samsung keypad and XT9 predictive text.

Voice Input and Output

Use Voice input and output settings to customize your device's voice recognition feature and audible readout of text, for example, the contents of email messages.

Voice Input

Voice Recognition Settings

1. From a Home screen, touch the **Menu Key**  → **Settings**
→ **Voice input and output**.

2. Touch **Voice recognition settings** to configure:
 - **Language:** Choose a language for your voice input.
 - **SafeSearch:** Set the sensitivity for filtering of explicit images from the results of your voice-input Google searches.
 - **Block offensive words:** Enable or disable blocking of recognized offensive words from the results of your voice-input Google searches.

Voice Output

Text-to-Speech Settings

Voice output provides audible readout of text, for example, the contents of email messages.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Voice input and output**.
2. Touch **Text-to-speech settings** to configure:
 - **Text-to-speech settings:**
 - **Listen to an example:** Play a sample of speech synthesis (available if voice data is installed).
 - **Always use my settings:** When enabled, settings you make override the application's default settings.

- **Default settings:** Configure settings to your preferences. When Always use my settings is enabled, these settings override the application's default settings.
 - **Default engine:** Choose the default text-to-speech engine application.
 - **Install voice data:** Download and install the speech synthesis data needed to activate Text-to-speech from Android Market (free).
 - **Speech rate:** Set the speed at which the text is spoken.
 - **Language:** Set the language voice for spoken text.
- **Engines:** Configure settings for installed voice recognition engine(s).
 - **Pico TTS:** Install text-to-speech engine applications.

Accessibility

Accessibility services are special features to make using the device easier for those with certain physical disabilities. Use the Accessibility settings to activate these services.

Note: You can download accessibility applications from Android Market and manage their use here.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Accessibility**.
2. Touch **Accessibility** to activate or deactivate accessibility services. When activated, a check mark  appears in the check box.

Accessibility Services

Enable or disable accessibility services.

Note: You must activate **Accessibility services** before enabling services.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Accessibility**.

If no accessibility applications are found, a *No accessibility applications found* message displays. Touch **OK** to download a screen reader from Android Market and install it.

Note: TalkBack, when installed and enabled, recites menu options, application titles, contacts, and other items when scrolling and making selections.

2. Touch a service to enable or disable the service. When enabled, a check mark  appears in the check box.

Date and Time

By default, your device receives date and time information from the wireless network. When you are outside network coverage, you may want to set date and time information manually using the Date & time settings.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **Date and time**.
2. Touch a setting to configure:
 - **Set date:** Enter the current date (only available when the Automatic setting is disabled).
 - **Select time zone:** Choose your local time zone (only available when the Automatic setting is disabled).
 - **Set time:** Enter the current time (only available when the Automatic setting is disabled).
 - **Use 24-hour format:** Set the format for time displays.
 - **Select date format:** Set the format for date displays.

About Device

View information about your device, including status, legal information, hardware and software versions, and a tutorial.

1. From a Home screen, touch the **Menu Key**  → **Settings** → **About device**.
2. Touch items to view details:
 - **Status:** View Battery status, Battery level, Wi-Fi MAC address, Bluetooth address, and Up time.
 - **Battery use:** Display processes and applications that are running. Touch and hold on an item to view details.

- **Legal Information:** Display **Open source licenses**, **License settings**, and **Google legal** information.

Tip: To find your device's DivX[®] registration code and information about registering your device to play DivX protected video, touch **License settings** → **DivX[®] VOD**.

- **Model number:** Display your device's model number.
- **Firmware version:** Display the firmware version of your device.
- **Kernel version:** Display the kernel version of your device.
- **Build number:** Display your device's build number.

Section 12: Health and Safety Information

This section outlines the safety precautions associated with using your Galaxy Player. The terms “GALAXY” or “mobile device” are used in this section to refer to your Galaxy Player. **Read this information before using your GALAXY.**

Exposure to Radio Frequency (RF) Signals

Although GALAXY is not a cell phone, it can operate on the same network as cell phones and can use the same Radio Frequency (RF) signals to communicate with the network as a cell phone. Therefore, although the following information refers specifically to RF exposure from wireless phones, it may apply similarly to GALAXY when it is being used on a cell phone network.

The U.S. Food and Drug Administration (FDA) has published information for consumers relating to Radio Frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

Do cell phones pose a health hazard?

Many people are concerned that cell phone radiation will cause cancer or other serious health hazards. The weight of scientific evidence has not linked cell phones with any health problems.

Cell phones emit low levels of Radio Frequency (RF) energy. Over the past 15 years, scientists have conducted hundreds of studies

looking at the biological effects of the radio frequency energy emitted by cell phones. While some researchers have reported biological changes associated with RF energy, these studies have failed to be replicated. The majority of studies published have failed to show an association between exposure to radio frequency from a cell phone and health problems.

The low levels of RF cell phones emit while in use are in the microwave frequency range. They also emit RF at substantially reduced time intervals when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects.

The biological effects of radio frequency energy should not be confused with the effects from other types of electromagnetic energy.

Very high levels of electromagnetic energy, such as is found in X-rays and gamma rays, can ionize biological tissues. Ionization is a process where electrons are stripped away from their normal locations in atoms and molecules. It can permanently damage biological tissues including DNA, the genetic material.

The energy levels associated with radio frequency energy, including both radio waves and microwaves, are not great

enough to cause ionization of atoms and molecules. Therefore, RF energy is a type of non-ionizing radiation. Other types of non-ionizing radiation include visible light, infrared radiation (heat), and other forms of electromagnetic radiation with relatively low frequencies.

While RF energy does not ionize particles, large amounts can increase body temperatures and cause tissue damage. Two areas of the body, the eyes and the testes, are particularly vulnerable to RF heating because there is relatively little blood flow in them to carry away excess heat.

Research Results to Date: Is there a connection between RF and certain health problems?

The results of most studies conducted to date say no. In addition, attempts to replicate and confirm the few studies that have shown a connection have failed.

The scientific community at large therefore believes that the weight of scientific evidence does not show an association between exposure to Radio Frequency (RF) from cell phones and adverse health outcomes. Still the scientific community has supported additional research to address gaps in knowledge. Some of these studies are described below.

Interphone Study

Interphone is a large international study designed to determine whether cell phones increase the risk of head and neck cancer. A report published in the International Journal of Epidemiology (June, 2010) compared cell phone usage for more than 5,000 people with brain tumors (glioma and meningioma) and a similar number of healthy controls.

Results of this study did NOT show that cell phones caused brain cancer. In this study, most people had no increased risk of brain cancer from using cell phones. For people with the heaviest use of cell phones (an average of more than ½ hour per day, every day, for over 10 years) the study suggested a slight increase in brain cancer. However, the authors determined that biases and errors prevented any conclusions being drawn from this data. Additional information about Interphone can be found at http://www.iarc.fr/en/media-centre/pr/2010/pdfs/pr200_E.pdf.

Interphone is the largest cell phone study to date, but it did not answer all questions about cell phone safety. Additional research is being conducted around the world, and the FDA continues to monitor developments in this field.

International Cohort Study on Mobile Phone Users (COSMOS)

The COSMOS study aims to conduct long-term health monitoring of a large group of people to determine if there are any health issues linked to long-term exposure to radio frequency energy from cell phone use. The COSMOS study will follow approximately 300,000 adult cell phone users in Europe for 20 to 30 years. Additional information about the COSMOS study can be found at <http://www.ukcosmos.org/index.html>.

Risk of Brain Cancer from Exposure to Radio Frequency Fields in Childhood and Adolescence (MOBI-KIDS)

MOBI-KIDS is an international study investigating the relationship between exposure to radio frequency energy from communication technologies including cell phones and brain cancer in young people. This is an international multi-center study involving 14 European and non-European countries. Additional information about MOBI-KIDS can be found at http://www.creal.cat/programes-recerca/en_projectes-creal/view.php?ID=39.

Surveillance, Epidemiology, and End Results (SEER) Program of the National Cancer Institute

The National Cancer Institute (NCI) actively follows cancer statistics in the United States to detect any change in rates of new cases for brain cancer. If cell phones play a role in risk for brain cancer, rates should go up, because heavy cell phone use

has been common for quite some time in the U.S. Between 1987 and 2005, the overall age-adjusted incidence of brain cancer did not increase. Additional information about SEER can be found at <http://seer.cancer.gov/>.

Cell Phone Industry Actions

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the cell phone industry to take a number of steps, including the following:

- Support-needed research on possible biological effects of RF for the type of signal emitted by cell phones;
- Design cell phones in a way that minimizes any RF exposure to the user; and
- Cooperate in providing users of cell phones with the current information on cell phone use and human health concerns.

Reducing Exposure: Hands-Free Kits and Other Accessories

Steps to Reduce Exposure to Radio Frequency Energy

If there is a risk from being exposed to Radio Frequency (RF) energy from cell phones — and at this point we do not know that there is — it is probably very small. But, if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your RF exposure.

- Reduce the amount of time spent using your cell phone;

- Use speaker mode or a headset to place more distance between your head and the cell phone.

Hands-Free Kits

Hands-free kits may include audio or Bluetooth® headsets and various types of body-worn accessories such as belt-clips and holsters. Combinations of these can be used to reduce RF energy absorption from cell phones.

Headsets can substantially reduce exposure because the phone is held away from the head in the user's hand or in approved body-worn accessories. Cell phones marketed in the U.S. are required to meet RF exposure compliance requirements when used against the head and against the body.

Because there are no known risks from exposure to RF emissions from cell phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used for convenience and comfort. They are also required by law in many states if you want to use your phone while driving.

Cell Phone Accessories that Claim to Shield the Head from RF Radiation

Because there are no known risks from exposure to RF emissions from cell phones, there is no reason to believe that accessories which claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike “hands-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption.

Children and Cell Phones

The scientific evidence does not show a danger to any users of cell phones from RF exposure, including children and teenagers. The steps adults can take to reduce RF exposure apply to children and teenagers as well.

- Reduce the amount of time spent on the cell phone;
- Use speaker mode or a headset to place more distance between the head and the cell phone.

Some groups sponsored by other national governments have advised that children be discouraged from using cell phones at all. For example, The Stewart Report from the United Kingdom made such a recommendation in December 2000. In this report, a group of independent experts noted that no evidence exists that using a cell phone causes brain tumors or other ill effects. Their recommendation to limit cell phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations (updated 10/1/2010):

- FCC RF Safety Program: <http://www.fcc.gov/oet/rfsafety/>.
- Environmental Protection Agency (EPA): <http://www.epa.gov/radtown/wireless-tech.html>.
- Occupational Safety and Health Administration (OSHA): <http://www.osha.gov/SLTC/radiofrequencyradiation/>.
Note: This web address is case sensitive.
- National Institute for Occupational Safety and Health (NIOSH): <http://www.cdc.gov/niosh/>.
- World Health Organization (WHO): <http://www.who.int/peh-emf/en/>.
- International Commission on Non-Ionizing Radiation Protection: <http://www.icnirp.de>.
- Health Protection Agency: <http://www.hpa.org.uk/Topics/Radiation/>.

- US Food and Drug Administration: <http://www.fda.gov/Radiation-EmittingProducts/RadiationEmittingProductsandProcedures/HomeBusinessandEntertainment/CellPhones/default.htm>.

Specific Absorption Rate (SAR) Certification Information

Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for Radio Frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government.

These FCC exposure limits are derived from the recommendations of two expert organizations: the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE).

In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile devices employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless devices to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg).

The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the mobile device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the mobile device while operating can be well below the maximum value. This is because the mobile device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model mobile device is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model of a device are performed in positions and locations (e.g. near the body) as required by the FCC.

For typical operations, this mobile device has been tested and meets FCC RF exposure guidelines.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this mobile device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model device as reported in the FCC equipment authorization grant are:

- Head: 0.257 W/kg.
- Body-worn: 0.111 W/kg.

SAR information on this and other model devices can be viewed online at <http://www.fcc.gov/oet/ea/fccid>. To find information that pertains to this particular model GALAXY, this site uses the FCC ID number, which is usually printed somewhere on the case of the device.

Follow the instructions on the website and it should provide values for typical or maximum SAR for a particular mobile device. Additional product specific SAR information can also be obtained at <http://www.fcc.gov/cgb/sar>.

Smart Practices While Driving

The primary responsibility of every driver is the safe operation of his or her vehicle.

Responsible drivers understand that no secondary task should be performed while driving whether it be eating, drinking, talking to passengers, or using a mobile device — unless the driver has assessed the driving conditions and is confident that the secondary task will not interfere with their primary responsibility.

Do not engage in any activity while driving a moving vehicle which may cause you to take your eyes off the road or become so absorbed in the activity that your ability to concentrate on the act of driving becomes impaired. Samsung is committed to promoting responsible driving and giving drivers the tools they need to understand and address distractions.

Notice regarding legal restrictions on mounting this device in an automobile:

Laws in some states may prohibit mounting this device on or near the windshield of an automobile. In other states, the law may permit mounting this device only in specific locations in the automobile. Be sure to consult the state and local laws or ordinances where you drive before mounting this device in an automobile. Failure to comply with these restrictions could result in fines, penalties, or other damages.

Never mount this device in a manner that will obstruct the driver's clear view of the street and traffic.

Never use wireless data services such as Web browsing or e-mail while operating a vehicle.

Never watch videos, such as a movie or clip, or play video games while operating a vehicle.

For more information, go to <http://www.ctia.org>.

Battery Use and Safety

The battery in GALAXY is not intended to be replaced by the consumer. If you believe the battery is damaged or needs to be replaced, take the GALAXY to a service center for inspection and replacement.

- **Do not let the GALAXY or battery come in contact with liquids.**

Liquids can get into the GALAXY's circuits, leading to corrosion. Even when the GALAXY appears to be dry and appears to operate normally, the circuitry could slowly corrode and pose a safety hazard. If the GALAXY and/or battery get wet, have them checked by your service provider or contact Samsung, even if they appear to be working properly.

- **Do not place your battery in or near a heat source.** Excessive heating can damage the GALAXY or the battery and could cause the GALAXY or the battery to explode. Do not dry a wet or damp battery with an appliance or heat source such as a microwave oven, hair dryer, iron, or radiator. Avoid leaving your GALAXY in your car in high temperatures.
- **Do not dispose of the GALAXY or the battery in a fire.** The GALAXY or the battery may explode when overheated.
- **Avoid dropping the GALAXY.** Dropping the GALAXY, especially on a hard surface, can potentially cause damage to the GALAXY. If you suspect damage to the GALAXY or battery, take it to a service center for inspection.
- **Never use any charger or battery that is damaged in any way.**

Important!: Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers which are specifically designed for your GALAXY.

WARNING!

Use of a non-Samsung-approved battery or charger may present a risk of fire, explosion, leakage, or other hazard. Samsung's warranty does not cover damage to the GALAXY caused by non-Samsung-approved batteries and/or chargers.

- **Do not use incompatible batteries and chargers.** Some websites and second-hand dealers not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers. Consumers should purchase manufacturer or carrier-recommended products and accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.
- **Misuse or use of incompatible batteries and charging devices could result in damage to the equipment and a possible risk of fire, explosion, or leakage, leading to serious injuries, damages to your phone, or other serious hazard.**

Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile devices and genuine Samsung accessories, and other unwanted electronics, in accordance with local regulations and through an approved recycler.

Proper disposal of your mobile device and its battery is not only important for safety, it benefits the environment. Batteries must be recycled or disposed of properly.

For more information about recycling your GALAXY, go to: <http://mobile.samsungusa.com/recycling/index.jsp> or call 1-800-822-8837 for more information.

To find the nearest recycling location, go to:
www.samsung.com/recyclingdirect or call 1-877-278-0799.

Warning!: Never dispose of batteries in a fire because they may explode.

UL Certified Travel Charger

The Travel Charger for this mobile device has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines:

**FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY
LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE
PROPERTY DAMAGE.**

**IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE
INSTRUCTIONS.**

**DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC
SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.**

FOR CONNECTION TO A SUPPLY NOT IN NORTH
AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF
THE PROPER CONFIGURATION FOR THE POWER
OUTLET.

THIS POWER UNIT IS INTENDED TO BE CORRECTLY
ORIENTED IN A VERTICAL OR HORIZONTAL OR FLOOR
MOUNT POSITION.

Display / Touch-Screen

Please note the following information when using your mobile device:

WARNING REGARDING DISPLAY

The display on your mobile device is made of glass or acrylic and could break if your mobile device is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

WARRANTY DISCLAIMER: PROPER USE OF A TOUCH-SCREEN MOBILE DEVICE

If your mobile device has a touch-screen display, please note that a touch-screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch-screen may damage the tempered glass surface and void the warranty. For more information, refer to *"Standard Limited Warranty"* on page 139.

GPS

GALAXY can use a Global Positioning System (GPS) signal for location-based applications. A GPS uses satellites controlled by the U.S. Government that are subject to changes implemented in accordance with the Department of Defense policy and the 2008 Federal Radio navigation Plan (FRP). Changes may affect the performance of location-based technology on your mobile device.

Your Location

Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile devices which are connected to a wireless network transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. The location-based information may be shared with third-parties, including your wireless service provider, applications providers, Samsung, and other third-parties providing services.

Navigation

Maps, directions, and other navigation data may contain inaccurate or incomplete data, and circumstances can and do change over time. In some areas, complete information may not be available. Therefore, **you should always visually confirm that the navigational instructions are consistent with what you see before following them. All users should pay attention to road conditions, closures, traffic, and all other factors that may impact safe driving or walking. Always obey posted road signs.**

Emergency Communication

GALAXY should not be relied upon for essential communications (medical emergencies, calls to 911, or communications to emergency services). GALAXY is not designed or intended to be used for such communications. Voice Over Internet Protocol (VOIP) services which may be used on GALAXY to make phone calls do not support 911 calls and are only intended for talking with friends.

Care and Maintenance

Your mobile device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years:

Keep your Samsung Mobile Device away from:

Liquids of any kind

Keep the mobile device dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits. If the mobile device does get wet, do not accelerate drying with the use of an oven, microwave, or dryer, because this may damage the mobile device and could cause a fire or explosion. Do not use the mobile device with a wet hand. Doing so may cause an electric shock to you or damage to the mobile device.

Extreme heat or cold

Avoid temperatures below 0°C / 32°F or above 45°C / 113°F.

Microwaves

Do not try to dry your mobile device in a microwave oven. Doing so may cause a fire or explosion.

Dust and dirt

Do not expose your mobile device to dust, dirt, or sand.

Cleaning solutions

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the mobile device. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.

Shock or vibration

Do not drop, knock, or shake the mobile device. Rough handling can break internal circuit boards.

Paint

Do not paint the mobile device. Paint can clog the device's moving parts or ventilation openings and prevent proper operation.

Responsible Listening

Caution!: Avoid potential hearing loss.

Damage to hearing occurs when a person is exposed to loud sounds over time. The risk of hearing loss increases as sound is played louder and for longer durations. Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cell phones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds, and Bluetooth® or other wireless devices). Exposure to very loud sound has also

been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound, and distorted hearing. Individual susceptibility to noise-induced hearing loss and potential hearing problem varies. Additionally, the amount of sound produced by a portable audio device varies depending on the nature of the sound, the device settings, and the headphones that are used. As a result, there is no single volume setting that is appropriate for everyone or for every combination of sound, settings, and equipment.

You should follow some common sense recommendations when using any portable audio device:

- Always turn the volume down before plugging the earphones into an audio source.
- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- Be aware that you can adapt to higher volume settings over time, not realizing that the higher volume may be harmful to your hearing.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise. By blocking background environment noise, noise cancelling

headphones should allow you to hear the music at lower volumes than when using earbuds.

- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech, or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet: <http://www.audiology.org/Pages/default.aspx>

National Institute on Deafness and Other Communication Disorders

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD 20892-2320

Email: nidcdinfo@nih.gov

Internet: <http://www.nidcd.nih.gov/>

National Institute for Occupational Safety and Health (NIOSH)

395 E Street, S.W.

Suite 9200

Patriots Plaza Building

Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4674)

1-800-CDC-INFO (1-800-232-4636)

Outside the U.S. 513-533-8328

Email: cdcinfo@cdc.gov

Internet: <http://www.cdc.gov/niosh/topics/noise/default.html>

1-888-232-6348 TTY

Operating Environment

Remember to follow any special regulations in force in any area, and always switch your mobile device off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the mobile device or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

Using Your Mobile Device Near Other Electronic Devices

Most modern electronic equipment is shielded from Radio Frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless mobile device. Consult the manufacturer to discuss alternatives.

Implantable Medical Devices

A minimum separation of six (6) inches should be maintained between a handheld wireless mobile device and an implantable medical device, such as a pacemaker or implantable cardioverter defibrillator, to avoid potential interference with the device.

Persons who have such devices:

- Should ALWAYS keep the mobile device more than six (6) inches from their implantable medical device when the mobile device is turned ON;
- Should not carry the mobile device in a breast pocket;
- Should turn the mobile device OFF immediately if there is any reason to suspect that interference is taking place;

- Should read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your wireless mobile device with an implantable medical device, consult your health care provider.

For more information see:

<http://www.fcc.gov/oet/rfsafety/rf-faqs.html#>.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your mobile device off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle before using your mobile device in a motor vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your mobile device off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your mobile device off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised to switch the mobile device off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Restricting Children's Access to Your Mobile Device

Your mobile device is not a toy. Do not allow children to play with it because they could hurt themselves and others, damage the mobile device, or use services that increase your mobile device bill.

Keep the mobile device and all its parts and accessories out of the reach of small children.

FCC Notice and Cautions

FCC Notice

The mobile device may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the mobile device if such interference cannot be eliminated. Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association.

Cautions

Any changes or modifications to your mobile device not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and void the mobile device warranty if said accessories cause damage or a defect to the mobile device. Although your mobile device is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the mobile device. Faulty service may be dangerous and may invalidate any warranty applicable to the device.
- Ensure that any mobile devices or related equipment used in your vehicle are securely mounted.
- Check regularly that all wireless mobile device equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the mobile device, its parts, or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including portable wireless equipment near or in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your mobile device off before boarding an aircraft. The use of wireless mobile devices in aircraft is illegal and may be dangerous to the aircraft's operation. Check with appropriate authorities before using any function of a mobile device while on an aircraft.
- Failure to observe these instructions may lead to the suspension or denial of network services to the offender, or legal action, or both.

Section 13: Warranty Information

Standard Limited Warranty

What is covered and for how long?

SAMSUNG ELECTRONICS AMERICA, INC. ("SAMSUNG") warrants that SAMSUNG's devices and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase by the first consumer purchaser and continuing for the following specified period of time after that date:

Device	1 Year
Batteries (Including Internal Batteries)	1 Year
Case/Pouch/Holster	90 Days
Other Device Accessories	1 Year

What is not covered?

This Limited Warranty is conditioned upon proper use of the Product. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abnormal use, abnormal conditions, improper storage, exposure to liquid, moisture, dampness, sand or dirt, neglect, or unusual physical, electrical or electromechanical stress; (b) scratches, dents and

cosmetic damage, unless caused by SAMSUNG; (c) defects or damage resulting from excessive force or use of a metallic object when pressing on a touch screen; (d) equipment that has the serial number or the enhancement data code removed, defaced, damaged, altered or made illegible; (e) ordinary wear and tear; (f) defects or damage resulting from the use of Product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (g) defects or damage resulting from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by SAMSUNG; (h) defects or damage resulting from external causes such as collision with an object, fire, flooding, dirt, windstorm, lightning, earthquake, exposure to weather conditions, theft, blown fuse, or improper use of any electrical source; (i) defects or damage resulting from cellular signal reception or transmission, or viruses or other software problems introduced into the Product; or (j) Product used or purchased outside the United States. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery; (ii) any of the seals on the battery are

broken or show evidence of tampering; or (iii) the battery has been used in equipment other than the SAMSUNG device for which it is specified.

What are SAMSUNG's obligations?

During the applicable warranty period, provided the Product is returned in accordance with the terms of this Limited Warranty, SAMSUNG will repair or replace the Product, at SAMSUNG's sole option, without charge. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product, or may replace the Product with a rebuilt, reconditioned or new Product. Repaired/replaced cases, pouches, and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Products will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for ninety (90) days, whichever is longer. All replaced Products, parts, components, boards and equipment shall become the property of SAMSUNG. Except to any extent expressly allowed by applicable law, transfer or assignment of this Limited Warranty is prohibited.

What must you do to obtain warranty service?

To obtain service under this Limited Warranty, you must return the Product to an authorized service facility in an adequate container for shipping, accompanied by the sales receipt or comparable proof of sale showing the original date of purchase,

the serial number of the Product and the seller's name and address. To obtain assistance on where to deliver the Product, please call SAMSUNG Customer Care at 1-888-987-4357. If SAMSUNG determines that any Product is not covered by this Limited Warranty, you must pay all parts, shipping, and labor charges for the repair or return of such Product.

You should keep a separate backup copy of any contents of the Product before delivering the Product to SAMSUNG for warranty service, as some or all of the contents may be deleted or reformatted during the course of warranty service.

What are the limits on SAMSUNG's liability?

THIS LIMITED WARRANTY SETS OUT THE FULL EXTENT OF SAMSUNG'S RESPONSIBILITIES, AND THE EXCLUSIVE REMEDY REGARDING THE PRODUCTS. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SAMSUNG BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR FOR, WITHOUT LIMITATION, COMMERCIAL LOSS OF ANY SORT; LOSS OF USE, TIME, DATA, REPUTATION, OPPORTUNITY, GOODWILL, PROFITS OR SAVINGS; INCONVENIENCE; INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES; OR DAMAGES ARISING FROM THE USE OR INABILITY TO USE THE PRODUCT. SOME

STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE DISCLAIMER OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND DISCLAIMERS MAY NOT APPLY TO YOU. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT USED IN CONJUNCTION WITH THE PRODUCT, OR THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE. RESPONSIBILITY FOR THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT RESTS SOLELY WITH THE USER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT.

Nothing in the Product instructions or information shall be construed to create an express warranty of any kind with respect to the Products. No agent, employee, dealer, representative or reseller is authorized to modify or extend this Limited Warranty or to make binding representations or claims, whether in advertising, presentations or otherwise, on behalf of SAMSUNG regarding the Products or this Limited Warranty. This Limited

Warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

What is the procedure for resolving disputes?

ALL DISPUTES WITH SAMSUNG ARISING IN ANY WAY FROM THIS LIMITED WARRANTY OR THE SALE, CONDITION OR PERFORMANCE OF THE PRODUCTS SHALL BE RESOLVED EXCLUSIVELY THROUGH FINAL AND BINDING ARBITRATION, AND NOT BY A COURT OR JURY. Any such dispute shall not be combined or consolidated with a dispute involving any other person's or entity's Product or claim, and specifically, without limitation of the foregoing, shall not under any circumstances proceed as part of a class action. The arbitration shall be conducted before a single arbitrator, whose award may not exceed, in form or amount, the relief allowed by the applicable law. The arbitration shall be conducted according to the American Arbitration Association (AAA) Commercial Arbitration Rules applicable to consumer disputes. This arbitration provision is entered pursuant to the Federal Arbitration Act. The laws of the State of Texas, without reference to its choice of laws principles, shall govern the interpretation of the Limited Warranty and all disputes that are subject to this arbitration provision. The arbitrator shall decide all issues of interpretation and application of this arbitration provision and the Limited Warranty. For any arbitration in which your total damage claims, exclusive of attorney fees and expert witness fees, are \$5,000.00 or less

("Small Claim"), the arbitrator may, if you prevail, award your reasonable attorney fees, expert witness fees and costs as part of any award, but may not grant SAMSUNG its attorney fees, expert witness fees or costs unless it is determined that the claim was brought in bad faith. In a Small Claim case, you shall be required to pay no more than half of the total administrative, facility and arbitrator fees, or \$50.00 of such fees, whichever is less, and SAMSUNG shall pay the remainder of such fees.

Administrative, facility and arbitrator fees for arbitrations in which your total damage claims, exclusive of attorney fees and expert witness fees, exceed \$5,000.00 ("Large Claim") shall be determined according to AAA rules. In a Large Claim case, the arbitrator may grant to the prevailing party, or apportion among the parties, reasonable attorney fees, expert witness fees and costs. Judgment may be entered on the arbitrator's award in any court of competent jurisdiction. This arbitration provision also applies to claims against SAMSUNG's employees, representatives and affiliates if any such claim arises from the Product's sale, condition or performance.

You may opt out of this dispute resolution procedure by providing notice to SAMSUNG no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product. To opt out, you must send notice by e-mail to optout@sta.samsung.com, with the subject line: "Arbitration Opt Out." You must include in the opt out e-mail (a) your name and address; (b) the date on which the Product was purchased; (c) the Product model name or model number; and (d) the IMEI or MEID or Serial Number, as applicable, if you have it (the IMEI or MEID or Serial Number can be found (i) on the Product box; (ii) on the Product information screen, which can be found under "Settings;" (iii) on a label on the back of the Product beneath the battery, if the battery is removable; and (iv) on the outside of the Product if the battery is not removable).

Alternatively, you may opt out by calling 1-888-987-4357 no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product and providing the same information. These are the only two forms of notice that will be effective to opt out of this dispute resolution procedure. Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and you will continue to enjoy the benefits of the Limited Warranty.

Severability

If any portion of this Limited Warranty is held to be illegal or unenforceable, such partial illegality or unenforceability shall not affect the enforceability of the remainder of the Limited Warranty.

Samsung Electronics America, Inc.
85 Challenger Road
Ridgefield Park, New Jersey 07660
Phone: 1-800-SAMSUNG

©2011 Samsung Electronics America, Inc. All rights reserved.
No reproduction in whole or in part allowed without prior written approval.
Specifications and availability subject to change without notice.
[060111]

Precautions for Transfer and Disposal

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to SAMSUNG's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all

settings to default settings. Please contact the **SAMSUNG Customer Care Center** for details.

Important! Please provide warranty information (proof of purchase) to SAMSUNG's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

End User License Agreement for Software

IMPORTANT. READ CAREFULLY: This End User License Agreement ("EULA") is a legal agreement between you (either an individual or a single entity) and Samsung Electronics Co., Ltd. for software owned by Samsung Electronics Co., Ltd. and its affiliated companies and its third party suppliers and licensors that accompanies this EULA, which includes computer software and may include associated media, printed materials, "online" or electronic documentation ("Software"). BY CLICKING THE "I ACCEPT" BUTTON (OR IF YOU BYPASS OR OTHERWISE DISABLE THE "I ACCEPT", AND STILL INSTALL, COPY, DOWNLOAD, ACCESS OR OTHERWISE USE THE SOFTWARE), YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA. IF YOU DO NOT ACCEPT THE TERMS IN THIS EULA, YOU MUST CLICK THE "DECLINE" BUTTON, AND DISCONTINUE USE OF THE SOFTWARE.

1. **GRANT OF LICENSE.** Samsung grants you the following rights provided that you comply with all terms and conditions of this EULA: You may install, use, access, display and run one copy of

the Software on the local hard disk(s) or other permanent storage media of one computer and use the Software on a single computer or a mobile device at a time, and you may not make the Software available over a network where it could be used by multiple computers at the same time. You may make one copy of the Software in machine-readable form for backup purposes only; provided that the backup copy must include all copyright or other proprietary notices contained on the original.

2. **RESERVATION OF RIGHTS AND OWNERSHIP.** Samsung reserves all rights not expressly granted to you in this EULA. The Software is protected by copyright and other intellectual property laws and treaties. Samsung or its suppliers own the title, copyright and other intellectual property rights in the Software. The Software is licensed, not sold.

3. **LIMITATIONS ON END USER RIGHTS.** You may not reverse engineer, decompile, disassemble, or otherwise attempt to discover the source code or algorithms of, the Software (except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation), or modify, or disable any features of, the Software, or create derivative works based on the Software. You may not rent, lease, lend, sublicense or provide commercial hosting services with the Software.

4. **CONSENT TO USE OF DATA.** You agree that Samsung and its affiliates may collect and use technical information gathered as part of the product support services related to the Software provided to you, if any, related to the Software. Samsung may use this information solely to improve its products or to provide customized services or technologies to you and will not disclose this information in a form that personally identifies you.

5. **UPGRADES.** This EULA applies to updates, supplements and add-on components (if any) of the Software that Samsung may provide to you or make available to you after the date you obtain your initial copy of the Software, unless we provide other terms along with such upgrade. To use Software identified as an upgrade, you must first be licensed for the Software identified by Samsung as eligible for the upgrade. After upgrading, you may no longer use the Software that formed the basis for your upgrade eligibility.

6. SOFTWARE TRANSFER. You may not transfer this EULA or the rights to the Software granted herein to any third party unless it is in connection with the sale of the mobile device which the Software accompanied. In such event, the transfer must include all of the Software (including all component parts, the media and printed materials, any upgrades, this EULA) and you may not retain any copies of the Software. The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end user receiving the Software must agree to all the EULA terms.

7. EXPORT RESTRICTIONS. You acknowledge that the Software is subject to export restrictions of various countries. You agree to comply with all applicable international and national laws that apply to the Software, including the U.S. Export Administration Regulations, as well as end user, end use, and destination restrictions issued by U.S. and other governments.

8. TERMINATION. This EULA is effective until terminated. Your rights under this License will terminate automatically without notice from Samsung if you fail to comply with any of the terms and conditions of this EULA. Upon termination of this EULA, you must cease all use of the Software and destroy all copies, full or partial, of the Software.

9. THIRD-PARTY APPLICATIONS. Certain third-party applications may be included with, or downloaded to this mobile device. SAMSUNG makes no representations whatsoever about any of these applications. Since SAMSUNG has no control over such applications, Purchaser acknowledges and agrees that SAMSUNG is not responsible for the availability of such applications and is not responsible or liable for any content, advertising, products, services, or other materials on or available from such applications. Purchaser expressly acknowledges and agrees that use of third-party applications is at Purchaser's sole risk and that the entire risk of unsatisfactory quality, performance, accuracy and effort is with Purchaser. It is up to Purchaser to take precautions to ensure that whatever Purchaser selects to use is free of such items as viruses, worms, Trojan horses, and other items of a destructive nature. References on this mobile device to any names, marks, products, or services of any third-parties are provided solely as a convenience to Purchaser, and do not constitute or imply an endorsement, sponsorship, or recommendation of, or affiliation with the third-party or its products and services. Purchaser agrees that SAMSUNG shall not be responsible or liable, directly or indirectly, for any damage or loss caused or alleged to be caused by, or in connection with, use of or reliance on any such third-party content, products, or services available on or through any such application. Purchaser acknowledges and agrees that your use of

any third-party application is governed by such third-party application provider's Terms of Use, License Agreement, Privacy Policy, or other such agreement and that any information or personal data you provide, whether knowingly or unknowingly, to such third-party application provider, will be subject to such third-party application provider's privacy policy, if such a policy exists. SAMSUNG DISCLAIMS ANY RESPONSIBILITY FOR ANY DISCLOSURE OF INFORMATION OR ANY OTHER PRACTICES OF ANY THIRD-PARTY APPLICATION PROVIDER.

10. Disclaimer of Warranty Regarding Third-Party Applications. SAMSUNG DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE AVAILABILITY, USE, TIMELINESS, SECURITY, VALIDITY, ACCURACY, OR RELIABILITY OF, OR THE RESULTS OF THE USE OF, OR OTHERWISE RESPECTING, THE CONTENT OF ANY THIRD-PARTY APPLICATION WHETHER SUCH THIRD-PARTY APPLICATION IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG, IS DOWNLOADED, OR OTHERWISE OBTAINED. USE OF ANY THIRD-PARTY APPLICATION IS DONE AT PURCHASER'S OWN DISCRETION AND RISK AND PURCHASER IS SOLELY RESPONSIBLE FOR ANY DAMAGE TO YOUR MOBILE DEVICE OR LOSS OF DATA THAT RESULTS FROM THE DOWNLOADING OR USE OF SUCH THIRD-PARTY APPLICATIONS. SAMSUNG EXPRESSLY DISCLAIMS ANY WARRANTY REGARDING WHETHER PURCHASER'S PERSONAL INFORMATION IS CAPTURED BY ANY THIRD-PARTY APPLICATION

PROVIDER OR THE USE TO WHICH SUCH PERSONAL INFORMATION MAY BE PUT BY SUCH THIRD-PARTY APPLICATION PROVIDER. ANY THIRD-PARTY APPLICATIONS PROVIDED WITH THIS MOBILE DEVICE ARE PROVIDED "AS IS" AND ON AN "AS AVAILABLE" BASIS, WITHOUT WARRANTIES OF ANY KIND FROM SAMSUNG, EITHER EXPRESS OR IMPLIED. TO THE FULLEST EXTENT POSSIBLE PURSUANT TO APPLICABLE LAW, SAMSUNG DISCLAIMS ALL WARRANTIES EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY OR WORKMANLIKE EFFORT, FITNESS FOR A PARTICULAR PURPOSE, RELIABILITY OR AVAILABILITY, ACCURACY, LACK OF VIRUSES, QUIET ENJOYMENT, NON-INFRINGEMENT OF THIRD PARTY RIGHTS OR OTHER VIOLATION OF RIGHTS. SAMSUNG DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE THIRD-PARTY APPLICATION, THAT THE FUNCTIONS CONTAINED IN THE THIRD-PARTY APPLICATION WILL MEET PURCHASER'S REQUIREMENTS, THAT THE OPERATION OF THE THIRD-PARTY APPLICATION WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE THIRD-PARTY APPLICATION WILL BE CORRECTED. PURCHASER ASSUMES THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR, OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW EXCLUSIONS OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS

MAY NOT APPLY TO YOU. NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY PURCHASER FROM SAMSUNG SHALL BE DEEMED TO ALTER THIS DISCLAIMER OF WARRANTY REGARDING THIRD-PARTY APPLICATIONS, OR TO CREATE ANY WARRANTY.

11. Limitation of Liability. SAMSUNG WILL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND ARISING OUT OF OR RELATING TO THE USE OR THE INABILITY TO USE ANY THIRD-PARTY APPLICATION, ITS CONTENT OR FUNCTIONALITY, INCLUDING BUT NOT LIMITED TO DAMAGES CAUSED BY OR RELATED TO ERRORS, OMISSIONS, INTERRUPTIONS, DEFECTS, DELAY IN OPERATION OR TRANSMISSION, COMPUTER VIRUS, FAILURE TO CONNECT, NETWORK CHARGES, AND ALL OTHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. NOTWITHSTANDING THE FOREGOING, SAMSUNG'S TOTAL LIABILITY TO PURCHASER FOR ALL LOSSES, DAMAGES, CAUSES OF ACTION, INCLUDING BUT NOT LIMITED TO THOSE BASED ON CONTRACT, TORT, OR OTHERWISE, ARISING OUT OF PURCHASER'S USE OF THIRD-PARTY APPLICATIONS ON THIS MOBILE DEVICE, OR ANY OTHER PROVISION OF THIS EULA,

SHALL NOT EXCEED THE AMOUNT PURCHASER PAID SPECIFICALLY FOR ANY SUCH THIRD-PARTY APPLICATION THAT WAS INCLUDED WITH THIS MOBILE DEVICE. THE FOREGOING LIMITATIONS, EXCLUSIONS, AND DISCLAIMERS (INCLUDING SECTIONS 9, 10, AND 11) SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

12. U.S. GOVERNMENT END USERS. The Software is licensed only with "restricted rights" and as "commercial items" consisting of "commercial software" and "commercial software documentation" with only those rights as are granted to all other end users pursuant to the terms and conditions herein.

13. APPLICABLE LAW. This EULA is governed by the laws of TEXAS, without regard to conflicts of laws principles. This EULA shall not be governed by the UN Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If a dispute, controversy or difference is not amicably settled, it shall be finally resolved by arbitration in Seoul, Korea in accordance with the Arbitration Rules of the Korean Commercial Arbitration Board. The award of arbitration shall be final and binding upon the parties.

14. ENTIRE AGREEMENT; SEVERABILITY. This EULA is the entire agreement between you and Samsung relating to the Software and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to the Software or any other subject matter covered by this EULA. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall continue in full force and effect.

Sign Up Now

Customize your Samsung phone experience

- Activate product warranty
- Access to a personalized My Samsung Mobile account
 - No monthly fees

Get More

- Latest info on promotions, events and special offers on related products
- Review Samsung products and share your opinion
- Great deals on downloads



Register now at
www.samsung.com/register

Scan this code to go
directly to the registration page.

SAMSUNG
mob!le

Index

A

Accessibility settings 121

Accounts

- setting up 38
- setting up a Facebook account 39
- setting up a MySpace account 39
- setting up a Twitter account 39

AllShare

- configuring 87

Android keyboard

- configuring 32

Android Market 95

Android System Recovery 11

Applications 25

- downloading new 95

Applications settings

- allow mock locations 115
- development 114
- managing 114
- running services 114
- unknown sources 114
- USB debugging 115

B

Back key 17

Battery

- charging 7
- indicator 7
- installing 6
- installing and removing 7
- removing cover 5
- replacing cover 6

Bluetooth

- pairing with a device 83
- settings 106
- turning on or off 82

C

Calculator 88

Calendar 88

Camcorder

- recording video 75
- settings 76

Camera

- settings 73
- taking photos 72

Charging Battery 7

Children and Cell Phones 127

Combined Inbox 51

Contacts

- creating 40
- display options 42
- exporting and importing 43
- Get Friends 42
- groups 44
- linking 41
- My Profile 43
- namecards 42, 43
- setting a photo as contact icon 80
- synchronizing with accounts 42
- updating 41

D

Date & time settings 122

Display settings

- animation 111
- brightness 110
- font style 110
- Horizontal Calibration 111
- power saving mode 111
- screen timeout 111

DivX®

registration code 123

Do cell phones pose a health hazard? 124

E

Email

composing and sending 51

configuring accounts 50

F

Facebook

setting up an account 39

FM Radio 70

G

Gallery 78

sharing photos and video 80

viewing photos and video 79

Get Friends 42

Getting Started

setting up your phone 5

Gmail

account settings 49

composing and sending 48

refreshing your account 48

setting up your account 47

Google

Android Market 95

Gmail 47

Latitude 62

Maps 60

Navigation 63

Places 64

Search 65, 94

Voice Search 65

your account 9

YouTube 66, 103

GPS Applications 86

Groups

creating 44

sending a message 45

H

Handwriting 35

Health and Safety Information 124

Home key 17

Home screen 15

adding shortcuts 22

adding widgets 21

customizing 16

folders 23

primary shortcuts 21

wallpaper 24

I

Icons

Status Bar 19

Internet 55

settings 59

L

Language and keyboard settings

select input method 118

select locale 118

Location and security settings

credential storage 113

device administration 113

location services 112

my location 112

screen unlock 112

visible passwords 113

Locking and Unlocking

screen lock sounds 110

unlocking the keypad 10

M

Maps 60, 95

Market 95

Memory Card

formatting 84

removing 6

Memory Card Installation 5

Memory settings

SD card and device 117

Menu

context-sensitive 17

key 17

Messages

Gmail 47

types 47

microSD card, installing 5

Music

creating a playlist 69

Music Player 68

types of menus 70

My Profile 43

sending with Bluetooth or Gmail 44

MySpace

setting up an account 39

N

Namecards

sending 42, 43

Navigation 17

command keys 21

finger gestures 17

Primary Shortcuts 21

Notification Panel 18

P

Pairing with Bluetooth 83

Photo ID

setting 80

Photos

Gallery 78

setting as wallpaper 80

sharing 80

taking 72

Playlists

creating 69

Powering On and Off 8

Privacy settings

device backup and restore 117

factory data reset 117

personal data 117

R

Removing the Battery Cover 5

Replacing the Battery Cover 6

Reset

factory data 117

Ringtones

notification 109

S

Samsung Keypad

entering text 32

SAR Values 129

Securing your device

locking and unlocking 10

screen unlock settings 112

Security

locking and unlocking 10

locking your device 10

screen unlock pattern 112

Security settings

set screen lock 112

Settings 104

Silent mode 108

Sound settings

- audible selection tones 109
- haptic feedback 110
- notification ringtone 109
- ringer volume 109
- screen lock sounds 110
- silent mode 108

Standard Limited Warranty 139

Stopwatch 92

Swype

- configuring 31
- entering text 30
- help 31

Synchronization settings

- auto-sync 116
- background data 115

System Recovery 11

T

Text

- changing input method 29
- entering 29
- input methods 29
- using Swype 30
- virtual QWERTY keyboard 29

Text settings

- Samsung keypad 119

Timer 92

Travel Charger 7

Turning Your Device On and Off 8

Twitter

- setting up an account 39

U

Unlocking your device

- set an unlock pattern 112

USB connections

- as a mass storage device 85

USB settings

- as a mass storage device 85
- mass storage device 85
- Windows Media Player 84

V

Videos

- Gallery 78
- recording 75
- sharing 80

Voice Recorder 102

Voice Search 65

Volume Key 14

W

Wallpaper

- gallery 24
- setting 80

Warranty Information 139

Widgets 21

Wi-Fi

- adding a connection manually 82
- enabling 62
- scanning and connecting 82
- settings 104
- turning on or off 81, 104

WiFi (see Wi-Fi) 81

Windows Media Player

- synchronizing with 84

Wireless Networking

- Bluetooth 82
- Wi-Fi 81

Y

YouTube 66, 103

- settings 67